



TONZE

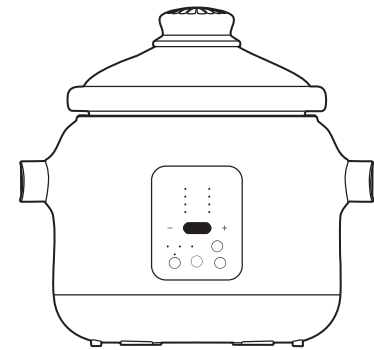

Electric Slow Cooker DDG-30DE User Manual

Please read this user manual carefully before using the product
Please keep this user manual properly

COMPONENT NAMES

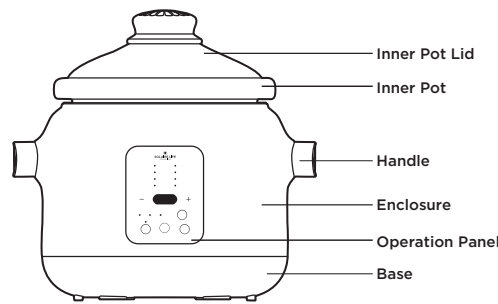


MAIN TECHNICAL PARAMETERS

Product Name	Electric Slow Cooker
Product Model	DDG-30DE
Power Supply	220~240V~ 50/60Hz
Rated Power	250W-297W
Capacity	3.0L
Dimensions (L×W×H)	320 × 270 × 290mm

PRODUCT PACKING LIST

Name	Unit	Quantity
Main Unit	Pc(s)	1
User Manual	Copy	1
Power Cord	Pc(s)	1
Measuring Cup	Pc(s)	1

INSTRUCTIONS FOR USE Operation panel and key instructions:

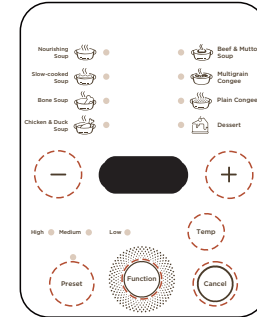

- Standby Status: The display shows "00:00" and all indicators are off, meaning the electric cooker is in standby mode.
- "Function" Key: Used to select cooking functions. Press the "Function" key to cycle through functions in the following sequence: Nourishing Soup → Slow-cooked Soup → Bone Soup → Chicken & Duck Soup → Beef & Mutton Soup → Multigrain Congee → Plain Congee → Dessert. If no operation is performed for 6 seconds after function selection, the unit will enter the selected function mode.
- "Preset" Key: For delayed cooking. The reservation time sets the completion time of the cooking cycle. In standby mode, press the "Preset" key. The preset indicator and the default reservation time "4:00" on the digital tube will flash for 6 seconds. Press the "Function" key to select a cooking function. If no further operation for 6 seconds, the unit enters preset mode, with the preset indicator and selected function indicator staying constantly lit.
- "Cancel" Key: Press the "Cancel" key under any working status to return the appliance to standby mode.

- "Temp" Key: Default setting is Medium. Each press cycles among Medium → High → Low. The corresponding indicator lights up. The display shows "--:--" for unlimited keep-warm mode.
- "-" Key: Decrease timing or reservation time.
- "+" Key: Increase timing or reservation time.
- Default Time for Each Function

Function	Default Time	Adjustable Timing Range	Adjustable Preset Time
Nourishing Soup	03:30	01:00-06:00	04:00 ~24:00
Slow-cooked Soup	04:00	01:00-08:00	
Bone Soup	03:30	01:00-07:00	
Chicken & Duck Soup	03:00	01:00-06:00	
Beef & Mutton Soup	03:30	01:00-08:00	
Multigrain Congee	03:00	01:00-06:00	04:00 ~24:00
Plain Congee	02:00	01:00-05:00	
Dessert	03:00	01:00-06:00	
Keep Warm	--:--	00:30-24:00	Not available for preset

Tips:

- Please set an appropriate reservation time according to the characteristics of ingredients and practical experience to ensure sufficient soaking. For perishable food, long-time reservation or temperature-adjusted cooking is not recommended to avoid food spoilage.

- When the ambient temperature is low, it is recommended to extend the cooking time appropriately to ensure the food is fully cooked.
- The cooking duration can be adjusted according to personal preference to achieve desired texture of food.
- If you need to open the lid during cooking, press the "Cancel" key to stop operation first. Open the lid after boiling stops to prevent scalding from splashing hot liquid inside the pot.
- Recommended water-to-rice ratio for congee is 1:9. The total volume shall not exceed 60% of the inner pot capacity. For soup, the total volume shall not exceed 80% of the inner pot capacity. Water amount may vary depending on rice variety, origin and harvest season. Please adjust water quantity based on practical experience.

MAINTENANCE AND CARE

1. Cleaning Method

- Unplug the power cord before cleaning the product, and then clean it after cooling.
- You can wipe the external surface of the body with a wet towel, and never use corrosive liquid for cleaning.
- The inner pan and inner pan lid can be cleaned with dish detergent and sponge. Do not scrub with hard steel wire to avoid damaging the surface.

2. Maintenance Method

When the product is not in use for a long time, please clean it, put it in the packing box, and store it in a ventilated and dry place to avoid moisture and affecting its use.

3. Troubleshooting Guide

Serial number	Fault Phenomenon	Cause of failure	Exclusion Method
1	Not powered	1. Not plugging the power cord tightly.	Check that the power cord is tightly plugged in place
		2.The outlet has no power supply	Check that the outlet has a power supply
		3. Product failure	Send it to a repair outlet for maintenance or contact us
2	Not heated	1. Damaged heating element	Send it to a repair outlet for maintenance or contact us
		2. Other failures of the product	

4. Non-professionals should not disassemble or repair this product.

- When the product fails and cannot be eliminated, do not repair it yourself. Please contact our local special maintenance outlet or our customer service department to solve it.

IMPORTANT SAFETY INSTRUCTIONS

- Disconnect the power supply before maintenance and wait until the product cools down before operation. For cleaning and maintenance, please refer to the "Maintenance and Care" chapter of this user manual.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

- Supervise children to ensure they do not play with the appliance.

- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazard.

- This product shall be used at an altitude below 2000m.

- This product is intended for household and similar applications.

- Do not immerse the power cord or the whole appliance into water or rinse it, to prevent water ingress, malfunction and electric shock hazard.

- Do not overfill during cooking. Prevent liquid overflowing to the connector which may cause malfunction and safety risks.

- The inner pot and inner-pot lid can be cleaned with dish detergent and sponge. Do not use hard steel wool for scrubbing to avoid surface damage.

- Operate strictly according to this user manual. Improper operation may lead to product failure or personal injury.

- After cooking, the outer housing and heating aluminum surface remain high-temperature. Do not touch or scald yourself.

- Only use power supply that matches the rated voltage marked on the rating label.

- Connect to a properly earthed mains socket for personal safety.

- Fully insert the power-cord plug into the socket during use and ensure good contact between plug and socket.

- If an extension cord is required, use an extension cord complying with national standards.

- Disconnect power when leaving the appliance unattended.

- Stop using immediately and switch off / disconnect power if abnormal noise, smell, overheating or faults occur.

- Do not supply power to this product via a multi-way adaptor.

- The total rated current of appliances connected to one extension cord shall not exceed the rated current of that cord or socket.

- Do not operate the appliance near flammable or explosive substances.

- Do not disassemble the appliance by yourself. Do not modify internal wiring, components or safety devices.

- Do not pull or strain the power cord when plugging or unplugging.

- Place the appliance on a stable platform out of children's reach.

- Do not use in damp locations or close to other heat sources, which may cause failure and danger.

- Steam comes out during operation. Do not place face or hands near the steam outlet to avoid scald injury. Do not put objects on top of hot-steam parts. Do not cover the steam vent with cloth or other items, which may cause personal injury or product damage.

- The housing, inner pot and inner-pot lid get hot during operation. Do not touch them.

- Only heat food inside the supplied inner pot. Do not place the inner pot over open flame or other cookers. Avoid pouring cold water onto the hot inner pot or lid to prevent cracking.

- Do not run the appliance empty without food/water inside the inner pot. Unplug when not in use.

- In case of dry-boil without water, unplug immediately and allow natural cooling. Do not add water or remove the inner pot while hot, otherwise the inner pot may be damaged and personal injury may happen.

- Keep power plug and socket dry. Never plug/unplug with wet hands to avoid electric shock.

- Do not move the appliance while it is powered-on.

- If power is cut off halfway, the appliance will enter standby mode. Re-setting is required before resuming cooking.

- Slight odour may be emitted from heating elements on first use; the display may flicker at initial power-on. Unplug and re-plug. These phenomena are normal and safe.

- The inner pot and inner-pot lid are fragile. Avoid impact against hard objects and dropping, to prevent breakage.

- Do not use an excessive food-to-water ratio for cooking or congee. Dry-boil and scorching may occur and shorten the service life of the inner pot under severe conditions.