

使用產品前,請仔細閱讀本使用説明書。 請妥善保管本使用説明書 Please read this manual carefully before using the product. Please keep this manual handy for further reference.

26.不要讓電線懸掛在桌子或櫃檯的邊緣,或觸摸熱表面。 27.不要放置在熱氣體或電燃燒器上或附近,或在加熱爐中。始終先將插頭連接到 產品上,然後將插頭插入牆上插座。斷開連接時,將任何控制轉換為"關 , 然後從牆上的插座上拔出插頭。

28.始終先將插頭連接到產品上,然後將插頭插入牆上插座。斷開連接時,將任何 控制轉換為"關閉",然後從牆上的插座上拔出插頭。 29.不將此產品另作他用。

30.注意-觸電風險。只能在可移卸的容器中烹調。 31.短電源線說明:

a) 短電源線是以減少因纏繞或絆倒較長的繩索而引起的風險。 b) 可使用延長線,並可在使用時使用。

c) 如果使用延長線:

1) 延長線的額定電氣額定值應至少與電器的額定值一樣大; 2)電源線應放置妥當以免懸垂在檯面或桌面,避免讓小孩拉到或不小心絆倒。 3)延長線應該是3線接地線。

請保存此使用說明書


二、産品性能特點 1.選用優質陶瓷內鍋,煲燉食物更加營養、健康; 2.透明上蓋及水位標設計,燉煮過程一目了然; 3.微電腦智慧控制,輕鬆煲燉各種美食; 4.隔水煲燉,不粘不焦,有效鎖住食物營養成分;


5.特設預約/定時功能,時間設置任您掌控;

6.多重安全保護裝置,確保產品使用安全。

三、主要技术参数

名稱	微電腦	隔水電燉盅	型號	DDZ-10KDS
電源	120\	/∼60Hz	額定容量	1.0L
額定功率 3	00W	外 形 尺 寸 (長×寬×高)	284mm×18	5mm×184mm
四、部件名称介绍				
			ト 英	

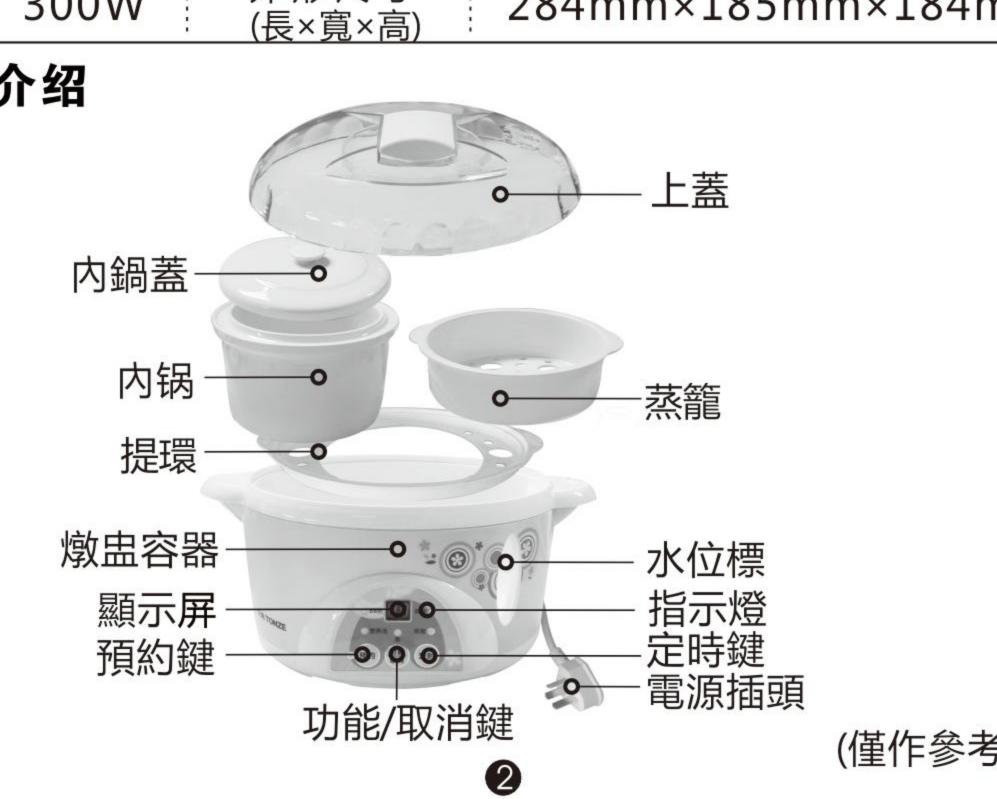

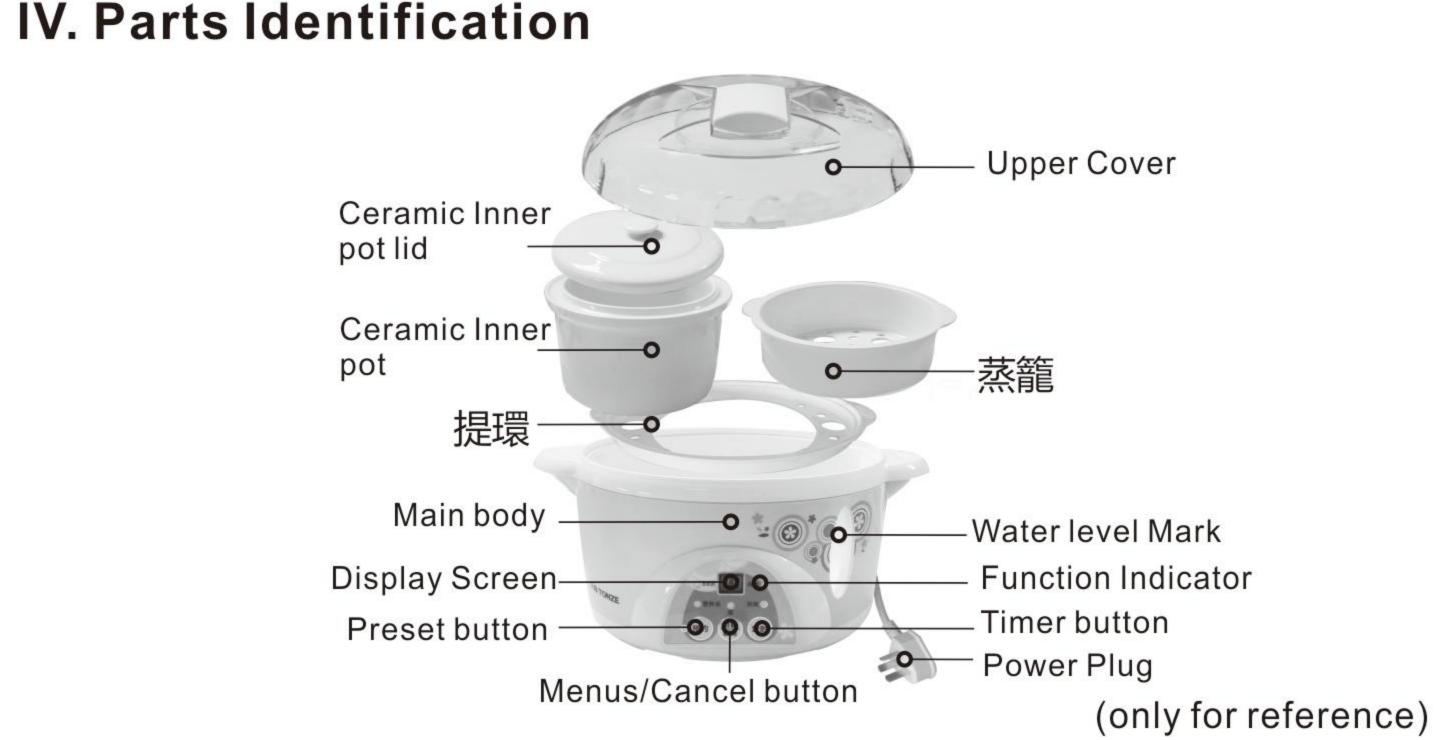

V. How to use

4. Operation

Keep warm

- 1. Put the food and/or tonic materials into the ceramic inner pot, add in proper amount of water(just enough to cover the food or a little more) then place the inner lid on. 2.Add proper amount of water into the main body of the stew pot (better to the maximum
- water level mark), put the ceramic inner pot into the main body, and then put the upper coveron 3. Connect the stew pot to power source. The stewpot will enter standby mode, with display screen showing "0.0". You can use the Preset button, Menus/Cancel button and timer button to set the stew pot to work in your desired function and for your desired time.



- 1)"**Menus/Cancel**": When each time the select button is pressed, the indicator will be flashing to each function: Baby Porridge → Nutrition Soup → Steam → Bird's Nest →
- (2) "Preset": The indicator for "Preset" will go on and the default time "2:0" is displayed when the button is pressed. The time can be setting by each 0.5 Increasing until "10" by pressing the button, and then will each "1" increasing until 24 hours. The preset hour will return to "0.0" by press the button again when reach to 24 hours. The preset hours can be increased fast by long button pressed. Preset function need to confirm by press the "Menus/Cancel" button When this setting is finished, otherwise the preset is invalid and will return to "standby" mode.
- (3) "Timer": After selected this function, the screen will display the cooking default time, it can be setting by each 0.5 increasing until "10" by pressing the button and then will each "1" increasing until 12 hours. The timer hours can be increased fast by long button pressed. instructions

See the following table for function setting:

Menus	Baby Porridge	Nutrition Soup	Steam	Bird's nest	Keep Warm
Default time	2.0	2.5	0.8	1.1	N/A

六、保养和维护 L.清洗方法:

①.產品清洗前應先拔掉電源線,待冷卻後再進行清洗。

②.陶瓷件、上蓋可用洗潔精和海綿清洗,請勿使用硬質鋼絲清洗,以免損壞

③.可用濕毛巾擦拭燉盅容器外表面,切勿使用腐蝕性液體進行清洗, ④.切勿將電源線、產品整機浸入水中或沖洗,以免發生觸電危險和功能故障。 ⑤.產品長期不使用時,請清潔擦淨後,裝入包裝箱中,應存放於通風乾燥的

⑥發熱盤積水垢的清潔方法:燉盅容器内放入1~2湯匙白醋或3~5片檸檬, 並加水至覆蓋發熱盤表面,通電加熱至水沸騰約2分鐘,斷電冷卻至溫水,

然後	用白潔而擦測		
序號	故障現象	故障原因	排除方法
1		插頭沒插好	檢查電源插頭是否插緊到位
2	顯示屏 不亮	燉盅容器内水煮幹, 造成幹燒溫控器動作	請往燉盅容器内加水冷卻後再 通電
3		產品故障	請送指定維修點檢修

- 3.非專業人員切勿拆卸、修理本產品。
- 4.如果電源線損壞,為避免危險,必須由本公司或維修部或類似部門的專業 人員來更換。
- 5.當產品出現故障且無法排除時,切勿自行維修,請與我司設立在當地的特
- 約維修網點或本公司客戶服務部聯繫解決。 6.本產品中的陶瓷件為易碎品,不在保修範圍,請小心使用。

二.產品性能特點------1 三.主要技術參數------2 四.部件名稱介紹------2 五.使用方法------2 六.保養和維護------3 一、注意事項

3.請使用有合格保護接地的電源,以確保人身安全。

4.不要放在易燃易爆的物品附近或表面使用;不要放在潮濕或靠近其它熱源的 地方使用,以免發生故障和危險。

5.使用本產品時應放置在兒童接觸不到的穩固平臺上。 6.請不要在兒童及行動緩慢者的附近使用本機。

7.產品工作時會冒出蒸汽,切勿將臉或手靠近蒸汽口,以免燙傷;怕蒸汽的物 體不要置於本產品上方。切勿將抹布或類似物品覆蓋在蒸汽口上,以避免引 發意外或導致產品故障。

8.產品工作時,上蓋溫度較高,請勿觸摸,以免燙傷。 9.不要將內鍋直接放在明火上加熱,並避免陶瓷件在較熱時接觸冷水或馬上清

洗,以免發生爆裂。 10.若產品出現缺水幹燒,請立即拔掉電源,等待冷卻後再操作,此時切勿用手

觸摸不銹鋼鍋以避免燙傷。 11.加水量應在"MAX"水位線。加水過少或過多,都可能出現故障或造成危

12.插入電源線時,必須插至穩固,以確保接觸良好。 13.應經常保持電源插頭、插座的乾燥,禁止用濕手插拔電源插頭,以防止觸電 14.產品在通電工作時,請勿移動。

15.陶瓷件為易碎品,慎防與硬物碰撞及從高處跌落,造成破碎損壞。 16.在加熱過程中,不要將冷水加入到內膽中,不要在燉鍋剛剛結束時立即將內 鍋或蓋子放入水中,以免因驟冷驟熱的衝擊而開裂。

17.在内鍋未有燉煮食物時,切勿通電幹燒,不用時請拔下電源插頭。 18.應經常保持電源插頭、插座的乾燥,禁止用濕手插拔電源插頭,以防止觸 19.在移動含有熱液體的產品時必須格外小心。

線掛在櫃檯邊緣,不要使用櫃檯下面的插座,不要使用延長線。 21為了防止觸電,不要將電線、插頭或主機浸泡在水或其他液體中。 22.在不使用和清洗前,請從插座拔出電線。允許冷卻之前,可將可分離的部件

20.警告:濺出的食物會引起嚴重的燒傷。保持器具和電線遠離兒童。不要將電

23.不要用已有損壞的電線使用該產品,或在此電器已有故障或有任何損壞時插 電使用。應當就近送到有授權的服務點進行維修。 24.如使用製造商不推薦的附件可能造成傷害。

25.不要在戶外使用。

五、使用方法 1. 隔水燉的工作原理:是一種利用水做媒介,對内鍋中的食物進行均勻柔和地加熱 的烹飪方法。故隔水燉鍋(或燉盅)的加熱容器內必須加入水才可以正常使用。 2. 燉煮方法:在内鍋中放入食物及藥材並加入適量水(以水恰好浸沒食物或略多一 點為宜),再蓋上內鍋蓋。

3. 在燉盅容器内加入適量水,以加水至電燉盅容器所標示的滿水位線為佳,然後蓋

4.接通電源,顯示幕顯示"0.0",處於待機狀態,通過按"預約"鍵、 消"鍵和"定時"鍵進行預約功能和定時燉煮。 5. 操作說明



养汤→蒸→燕窩→保溫,按動第六次回到待機狀態,再按則重新循環。

閃亮,每再按一次"預約"鍵,顯示以0.5為增量遞增,直至"10",之 後則以1為增量遞增,預約最高24小時,預約直至 "24" 再按則回到 "0.0"。長按該鍵,則快速遞增,循環規律與短按相同。預約時間設置 完成後,再按"功能/取消"鍵方能確認預約功能,否則,預約無效,再 回到待機狀態,預約結束後自動進入燉煮功能。

(3)"定時"鍵:功能選擇完成後,按"定時"鍵,顯示屏在默認時間的基 礎上每按一次顯示屏以0.5增量遞增,直至"10"後則以1為增量遞增 定時最高12小時,定時至12,再按回到"0.0"然後再以0.5為增量遞增, 如此循環。長按該鍵,則快速遞增,循環規律與短按相同。

提示:1.工作過程中,按"功能/取消"鍵一次,燉盅立即停止工作,回到待

2.使用 BB粥功能時,請用配備量杯加水和米,最大加米水配比為 0.5杯米+3.5杯水。 3.待機狀態:指示燈全滅,顯示屏顯示"0.0"。

4.燉盅時間設定完進入功能後,直接倒計時。 5.燉煮一定時間後,若您認為食物已燉至所需火候,請按"功能/取消" 鍵取消或拔掉電源。

特別提醒:

長,容器水量過少時,請往容器内加水,以防止缺水幹燒。 2.電燉盅燉煮過程若要打開上蓋,請先中止燉盅工作或關掉電源並待水不再

沸騰後再打開,以避免燉盅容器内沸水噴出燙傷

CONTENTS

2. Please use the AC power source according to the voltage indicated in the rating label.

4.Do not place the appliance near the items or at the surfaces that are flammable and

explosive; do not put the appliance at the places that are wet or near other heat sources

5. When using this product, it should be placed at a solid platform out of children's reach.

7. Use extreme caution when opening the lid during or after cooking. Hot steam will escape

9.Do not directly put the inner pot on the open fire and prevent the heat ceramic pot from

10. If there is no water in this product when it is in operation, please unplug power cable, it

13. The power plug and socket should be always kept dry. Do not insert and pull out the

15. The ceramic pots are fragile. Do not hit them with hard objects or drop them from

16. Never add cold water into the inner pot in the heating process, and do not immediately

17. When there is no stew food pot inside the inner pot, be sure not to switch the power on

18. The power plug and socket should be kept dry and it is prohibited that inserting and pull

20.WARNING: Spilled food can cause serious burns. Keep appliance and cord away from

children. Never drape cord over edge of counter, never use outlet below counter, and

put the inner pot or lid into water when the stewing is just over, in case they will crack

can not be powered on again before it cools down, do not touch a heating base to avoid

and may cause scalding. And don't put dishcloths or other things cover the vent.

8.Do not touch the Upper Cover under the working condition to prevent scalding injury.

3. For your safety, use the power source with ground protection.

6.Do not operate the kettle near children or infirm persons.

11.Do not add the water exceed the "maximum (MAX)" water level.

14.Do not move the product when it is working with power supply connected.

1. The stew pot will stop working by press "Menus/Cancel" button, return to standby mode. 2.Please use the measuring cup to add water and rice by using the baby porridge function the max rice to water ratio is 0.5 cup of rice + 3.5 cup of water. 3. Standby mode: indicator go off and the screen display "0.0".

4. The stew pot start working directly after setting the cooking time and function. 5. After the stew pot cooking for some time, if you think the food is already well stewed, please press the "Menus/Cancel" button or unplug the stew pot to stop stewing.

Attentions: 1.Do not add too much water into the main body to exceed the maximum water level mark ("MAX" mark). If the timer time is too long and the water level is low, please add water to the container to prevent dry heating

2. If you need to remove the upper cover during stewing, please turn off power first and wait for the water stop boiling to avoid spillage of hot water.

VI. Maintenance and repair

1.Cleaning methods:

(1)Before it is cleaned, power cord should be unplugged and it cools down. (2)Use liquid detergent and sponge to clean the ceramic pot and Upper Cover instead of wire brush to prevent surface damage.

(3)Clean the stainless steel stewing cup container inside and outside surface with a wet towel. Do not clean it with corrosive liquid. (4)Do not clean it with rinse the power cord and main body in or with water to avoid

product failure and danger. (5)Please clean and pack it when it is out of use for a long time. Place it in a dry and ventilated place.

(6) The method of removing the incrustation of the heating plate: Put 1 to 2 tablespoons of white vinegar or 3 to 5 slices of lemon into the container, and then add water to cover the heating plate surface. Turn on the power first to heat the water until the water is boiling for about 2 minutes, and then turn off the power until the water is cooled to become warm water. Finally, clean it with scouring pad and the incrustation can be removed.

2. Failure and trouble shooting

No.	Failure	Causes	Trouble shooting
1		The product is plugged improperly	Check whether plug is connected we
2	The screen without display	The water in the container is boiled dry, resulting in dry-burn power -off protection.	Do not turn it on until you add water into the container to have it cooled.
3		Product is of failure	Send it to maintenance center for troubleshooting.

3.Do not dismount or repair the machine by yourself.

4.If the power cord is damaged, it must be replaced with special cord or the special component purchased from the supplier or the maintenance department of our 5.Do not operate any appliance with a damaged cord or plug or after the appliance

malfunctions or has been damaged in any manner. Contact maintenance service for examination, repair or adjustment. 6. The ceramic pot and glass lid are the fragile items, which do not belong to the warranty,

please use them with caution.

22. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

23.Do not operate this product with a damaged cord or plug or after the product malfunctions or has been damaged in any manner. Return product to the nearest authorized service facility for examination, repair, or adjustment.

24. The use of accessory attachments not recommended by the product manufacturer may

25.Do not use outdoors. 26.Do not let cord hang over edge of table or counter, or touch hot surfaces. 27.Do not place on or near a hot gas or electric burner, or in a heated oven.

30. CAUTION - Risk of Electric Shock. Cook only in removable container. 31. Short power-supply cord instruction:

a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. b) Extension cords are available and may be used if care is exercised in their use. c) If extension cord is used:

1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; 2) The cord should be arranged so that it will not drape over the countertop or tabletop

where it can be pulled on by children or tripped over unintentionally; and 3) Extension cord should be a grounding-type 3-wire cord.

Save these instructions.

II. Product Features

1. Selecting high quality ceramic inner pot to stew the food more

nutritionally and healthy.

2. Transparent Upper Cover and water level mark. 3. Microcomputer controlled and digital display.

4. Stewing food out of water, good for preventing sticking and burning, preserving nutrient. 5.Preset/Timer function.

6. Multiple safety protection.

III. Specifications-

Product Microcomputer Stew Pot Model No. DDZ-10KDS 120V~60Hz Rated Capacity Power Source Rated Power 300W Dimensions 284mm×185mm×184mm

never use with an extension cord. 21.To protect against electrical shock do not immerse cord, plugs, or main body of this product in water or other liquid.

19. Extreme caution must be used when moving an appliance containing hot liquids.

I.Important Safeguards-

VI. Maintenance and repair

1.READ ALL INSTRUCTIONS.

to avoid failures and danger.

cold water to avoid cracking.

12. Plug in socket to outer pot securely

plug with wet hands to prevent electric shock.

due to shock cooling and shock heating.

to burn dry. Pull out the power plug when not in use.

scalding.

II. Product Features-

I. Important Safeguards

the power plug with wet hands to prevent from electric shock.