MAKOTO



使用產品前,請仔細閱讀本使用說明書。 請妥善保管本使用說明書 Please read the Operations Instructions carefully before using products. Please keep it cautiously after reading for future reference.

使用時,請按本說明書進行操作。本產品僅限家庭或類似場所使用。 Please operate it according to this instruction when using this product. This product is limited to household or similar application.

24.請勿在戶外使用。

牆上插座上撥下插頭。

18.產品在通電工作時,請勿移動。

一、注意事項

1.請閱讀所有的使用說明。

2.請使用與銘牌所標電壓值一致的交流電源。

4.不要接觸發熱的表面。使用提手或把手。

線,否則可能會出現故障或造成危險。

13.插入電源線時,必須插到底,以確保接觸良好。

14.不要讓電源線掛在桌子或櫃檯邊,或接觸熱的表面。

如果使用一個較長的可拆式電源線或延長線:

20.當使用電器時或有接近小孩時,必須嚴密監視。

23.如果使用不是電器生產商推薦的配件可能會引發受傷。

21.在清潔之前,應拔掉電源線並將其冷卻。

(1)電源線或延長線的標識至少與電器的額定功率同樣。

要在臺面下方使用電源插座,和不要使用延長線。

3.請使用有合格保護接地的電源,以確保人身安全。

6.使用本產品時應放置在兒童接觸不到的穩固平臺上。

5.為防止電擊,不要把電線,插頭或電器浸入水中或其他液體。

VII. Product packing list

Name	Unit	Quantity
Complete Appliance	Set	1
Power Cord	Piece	1
Operation Instruction	Piece	1
Recipe	Piece	1

VI. Maintenance and repair

1.Cleaning:

1) Pull out the power plug and wait for the pot to cool down before cleaning it.

- 2)Do not immerse the power cord and the whole product into water or flush them with water to prevent failure of the product due to ingress of water.
- 3) A piece of wet cloth can be used to wipe the external surface of the pot. Do not use any corrosive liquid to clean the product.
- 4) The inner pot and lid can be cleaned with detergent and sponge. Do not use hard steel wire for cleaning to avoid damage to the surface.
- 5) Method for decaling of heating plate: add 1 or 2 tablespoons of white vinegar or 3-5 slices of lemon into the container, add water to cover the surface of the heating plate, insert the power plug to heat up the water until it boils for about two minutes, pull out the power plug and wait for the water to cool down to warm water, and then wipe off the scale with a scouring pad.
- 2. Storage:

If the product is not used for a long time, please clean it, put it into the packing box, and store it in a ventilated and dry place, to prevent the product from getting damp and affecting the use.

3. Common Faults and Troubleshooting

SN	Failure phenomenon	Cause	Troubleshooting method
	a contract of the contract of	The power cord is not inserted properly.	Check whether the power cord is inserted tightly.
1	Annual An	The socket is not provided with power supply	Check whether the socket is provided with power supply.
		Product fault	Send to the maintenance service or contact us
2		No water added to the stew pot	Add an appropriate volume of water into the pot
\sim	Powered on properly but does not heat	Product fault	Send to the maintenance service or contact us
4	"E1" or "E2" displayed		or contact us

4. Non-professionals shall not disassemble or repair this product. 5. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the company or Maintenance Department or similar departments.

25.不要放在易燃易爆的物品附近或表面使用;不要放在潮濕或靠近其他熱源的的地方使用,以

- 免發生故障和危險。 26.移動電器帶有熱液體時,必須嚴加注意。
- 27.不要把電器另作他用。
- 28.請保存此使用說明。

特別提示:

鍋蓋採用了強度極高的鋼化玻璃製作,但鋼化玻璃存在著一個概率極低的自爆(自然碎裂)現 象。即使如此,大家也不必過於擔心。鋼化玻璃碎裂時會形成類似蜂窩狀的鈍角碎小顆粒, 沒有銳利邊緣,不易對人體造成嚴重的傷害,更不會產生爆炸,所以又被稱為安全玻璃。

二、產品性能特點


- 1.優質陶瓷內膽,光潔細膩,美觀且健康。
- 2.專業燉煮程式,隔水柔燉,營養不流失。 3.鋼化玻璃上蓋,放心材質,使用安全。
- 4.六大烹飪功能選擇,三檔調溫功能,多款美食一機完成。
- 5.多重安全保護裝置,確保產品使用安全。

三、主要技術參數

名 稱	微電腦隔水電燉鍋
型號	DGD10-10BAG
=====================================	120V~ 60Hz
額定功率	300W
額定容量	1.0L
外形尺寸 (長×寬×高)	258 mm×222 mm×215 mm
四、部件名稱介紹	



五、使用方法

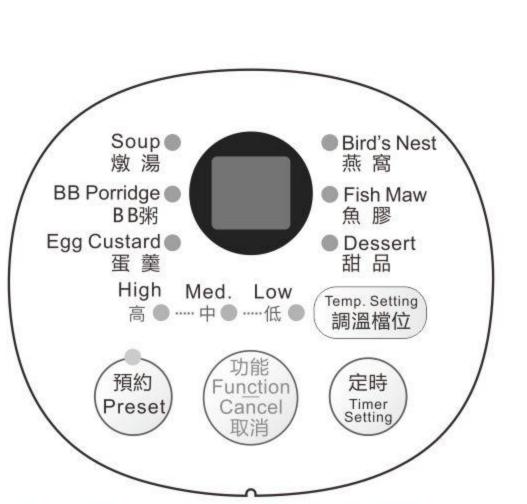

一.注 意 事 項 - - - - - - - - - - - - - - - - - 1

四.部 件 名 稱 介 紹 - - - - - - - - - - - - 2

七.產品裝箱清單 ------4

7.產品工作時會冒出蒸汽,切勿將臉或手靠近蒸汽口,以免燙傷;怕蒸汽的物體不要置於本產品

10.若產品出現缺水幹燒,請立即拔掉電源,等待冷卻後再操作,此時切勿用手觸摸發熱盤以免

11.燉盅容器加水為放置内鍋前加水(MAX)的水位線,加水量不能超過"放盅前水位(MAX)"

警告: 溢出的食物會引起嚴重燒傷。保持電器和電線遠離兒童。不要將電源線懸掛臺面, 不

17.總是先將插頭插入設備,然後將插頭插入插座。要斷電時,先將開關轉為"關閉",然後從

22.在任何方式下,都不要在有損壞的電線或插頭或設備故障或已損壞的情況下使用電器。

上方;切勿將抹布或類似物品覆蓋在蒸汽口上,以避免引發意外或導致產品故障。

9.不要將內膽直接放在明火上加熱,並避免陶瓷件在較熱時接觸冷水,以免發生爆裂。

8.產品工作時,玻璃蓋和不銹鋼燉盅容器溫度較高,請勿觸摸,以免燙傷。

12.在燉盅容器内未加入水時,切勿通電幹燒,不用時請拔下電源插頭。

15.應經常保持電源插頭、插座的乾燥,禁止用濕手插拔電源插頭,以防止觸電。

(2)電源線應放置妥當以免懸垂在臺面或桌面,避免讓小孩拉到或不小心絆倒。

19.陶瓷件均為易碎品,慎防與硬物碰撞及從高處跌落,造成破碎損壞。

16.短的電源線(或可拆式電源線)應被用於降低造成的纏住或被長線繩絆倒的風險。

- 1.待機狀態: 插好電源線,接通電源。這時,顯示幕顯示"0.0",表示隔水燉已進入待機狀
- 2."功能/取消"鍵: 待機或設置狀態下, 按動"功能/取消"鍵, 功能指示燈顯示順序如下:待機 →燉湯→BB粥→蛋羹→燕窩→魚膠→甜品→待機,如此迴圈。
- 3."預約"鍵: 待機狀態下, 按"預約"鍵, 再按"功能/取消"鍵可依次選擇預約時間和預約功 能。首次按下"預約"鍵時,預約指示燈閃亮,顯示幕顯示默認時間"4.0"也閃亮,閃亮時 限為6秒,6秒內每按一次"預約"鍵,時間增加0.5小時,增加至12小時後回到2小時並迴圈, 有效時間範圍為2-12小時,長按可以加快調整速度。 注:預約時間包含功能工作時間,當預約時間比功能(定時)時間短時,立刻進入功能工作狀
- 4."定時"鍵:按"功能/取消"鍵選擇功能時,可按"定時"鍵調整功能時間,長按可以加快調整
- 5."調溫檔位"鍵: ①燉煮後的調溫檔位: "功能/取消"鍵選擇過程中,按"調溫檔位"鍵選擇中-低-高三種調溫方 式。如不選擇產品在燉煮完會進入中檔調溫顯示"-.-"。此時可按"定時"鍵調整調溫時長。 ②待機時調溫: 待機狀態下, 按"調溫檔位"鍵選擇"中-低-高"三種調溫方式。
- ①首先將容器內加水至"<u>放出前水位(MAX)</u> "處,將裝有食材的內鍋放到容器中間的定位線內。 ②煮粥類食材時建議米和水比例為1:12,最大米量不超過70克。
- ③燉煮燕窩時請使用純淨水。 ④做蛋羹時,建議蛋和水的比例為1:1,容器加水400mL(約1碗),功能默認適用於2個蛋,
- 請酌情增減時間。 6.各功能的操作說明:

功能	默認時間	可調整定時時間	預約功能
燉湯	2.5小時	1小時~5小時	
BB粥	2.0小時	1小時~5小時	
蛋羹	0.5小時	0.4小時~1小時(逐0.1增加,長按無效)	2~12小時
燕窩	1.0小時	0.5小時~3小時	(默認4小時)
魚膠	1.5小時	0.5小時~6小時	
甜品	2.8小時	1小時~6小時	
調溫檔位		0.5小時~12小時	不支持預約

六、保養和維護

①產品清洗前應先拔掉電源線,待冷卻後再進行清洗。 ②切勿將電源線、產品整機浸入水中或沖洗,以免電器進水,產生故障,影響安全使用。 ③可用濕毛巾擦拭機體外表面,切勿使用腐蝕性液體進行清洗。 ④內鍋,內鍋蓋和玻璃蓋可用洗潔精和海綿清洗,請勿使用硬質鋼絲擦洗,以免損壞表面。 6. Default time of each function:

Function	Default time (hour)	Adjustable time range	Preset function
Soup	2.5	1-5 H	
BB Porridge	2.0	1-5 H	
Egg custard	0.5	0.4-1H (Increase by 0.1, long pressing is not available)	2-12H (4H by default)
Bird's Nest	1.0	0.5-3H	
Fish Maw	1.5	0.5-6H	
Dessert	2.8	1-6 H	
Temperature Setting		0.5-12 H	N/A


1. Add food ingredients:

- 1)First, add water into the container to the "Water level before placing the pot(MAX)", and place the inner pot loaded with food ingredients into the positioning line in the middle of the container.
- 2) The ratio of rice to water is recommended to be 1:12 when cooking porridge, the amount or rice should not exceed 70 grams. 3)Please use purified water when stewing bird's nest.
- 4) When cooking egg custard, the ratio of egg to water is recommended to be 1:1, and 400ml (about a bowl) of water shall be added to the container. The default setting of the function is applicable to two eggs. You can adjust the time as necessary.
- 5) For other ingredients, the volume may be determined from experience, and shall not be more than 80% of the maximum capacity of the inner pot, to prevent spillage.

Tips:

- 1. Please set an appropriate preset time according to the features of various ingredients and the experience so that the ingredients can be fully soaked; for perishable food, it is recommended not to set a long-preset time or duration of temperature regulation, in order to avoid food spoilage.
- 2.If the temperature setting function is selected without setting the time, the product will remain in the temperature regulation mode; if the temperature setting function is selected and the duration of temperature regulation is set, the product will stop heating and enter the standby mode after the set time is over. 3.It is recommended to extend the cooking time when the ambient temperature is pretty low, to make sure that the food is fully cooked.
- 4. If the preset time needs to be adjusted in the preset state, press the Function/Cancel key to cancel the presetting and then reset the function. 5. Add water to the container outside the ceramic pot according to the water level, to prevent malfunction.
- 6. If you want to open the glass lid during cooking, press the Function/ Cancel key to cancel the function, and wait until the water is not boiling before opening the lid; otherwise, the boiling water may spill from the pot and cause scalding.

V. How to use

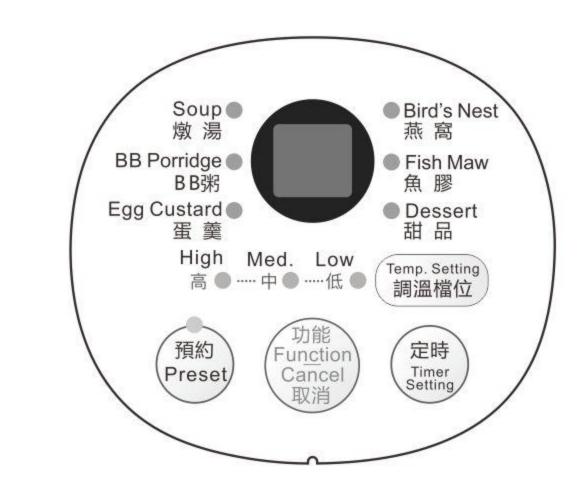

Working principle of out-of-water stewing: it is a cooking method which Operational takes water as a medium to evenly and gently heat the food inside the Procedures | inner pot. Therefore, you must add water into the heating container of the stewpot for normal use.

1. Standby: After power on, "0.0" is displayed on the screen and the product is in standby

- 2.Function/Cancel: in the standby or setting mode, press the Function/Cancel key, and the function indicators become on in the sequence below: Standby → Soup → BB Porridge → Egg custard → Bird's Nest → Fish Maw → Dessert → Standby cyclically. After six
- seconds, it automatically enters into the function working state. 3. Preset: in standby mode, press the Preset key and then press the Function/Cancel key to set the time and select the preset function. When pressing the Preset key for the first time, the preset indicator light flashes, and "4.0" (the default time) displayed on the screen also flashes. Within the time limit of 6s, the time will be extended for 0.5h each time the Preset key is pressed.
- When the time setting is extended to 12h, it returns back to 2h. The effective time range is 2-12 hours. Long pressing the key can speed up the setting.
- The preset time includes the duration of the selected function. If the preset time is shorter than the duration of the function, the product will start the function immediately. 4. Timer setting: when pressing the Function/Cancel key to select a function, you can press
- the Time setting key to adjust the duration of the function. Long pressing the key can speed up the adjustment.
- 5. Temperature setting:
- 1) Temperature setting after cooking: when pressing the Function/Cancel key to select a function, press the Temperature setting key to choose high, medium or low temperature. If not, the product will enter the medium temperature mode and display "-.-" on the screen upon completion of cooking. At this time, the duration of temperature setting can be adjusted by pressing the Timer setting key.
- 2) Temperature setting in standby state: in standby state, press the Temperature setting key to choose high, medium or low mode.

2.保存方法

產品長期不使用時,請清潔擦淨後,裝入包裝箱中,應存放於通風乾燥的地方,以免受 潮,影響使用。

、故障及排除 故障現象 排除方法 故障原因 檢查電源線插頭是否插緊到位 請往燉盅容器内加水冷卻後再通電 不通電 請送指定維修點檢修 產品進入加熱狀態 往容器内加入適當的水 後不久就突然斷電, 顯示幕無顯示

顯示"E1"、"E2" 請送指定維修點檢修 產品故障 4.如果電源軟線損壞,為了避免危險,必須由製造商、其維修部或類似部門的專業人員

請送指定維修點檢修

5.當產品出現故障且無法排除時,切勿自行維修,非專業人員切勿拆卸、修理本產品。 請與我司設立在當地的特約維修網點或本公司客戶服務部聯繫解決。

七、產品裝箱清單

能通電但不加熱

0、注册权品为一		
名稱	單位	數量
產品整機	<u></u>	1
電源線	條	1
使用說明書	本	1
食譜	本	1

CONTENTS Important Safeguards-----5 II. Product Features-----6 III. Technical specifications-----6 IV. Parts -----6 V. How to use -----6 VI. Maintenance and repair-----8 VII. Product packing list------10

I.Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

1.READ ALL INSTRUCTIONS. 2.Please use the AC power source with the voltage indicated on the data plate.

3. For your safety, use the power source with ground protection

4.Do not touch hot surfaces. Use handles or knobs. 5. To protect against fire, electrical shock, do not immerse cord, plugs or appliance in

water or other liquid. 6. Use only on a level, dry and heat-resistant surface, and keep it out from Children. 7.Use extreme caution when opening the lid during or after cooking. Hot steam will

escape and may cause scalding. And don't put dishcloths or other things cover the vent. 8.Do not touch the glass cover or Stainless steel pot under the working condition to prevent scalding injury. 9.Do not put inner pot on fire and prevent the heat ceramic pot from cold water to avoid

10. If there is no water in this product, please unplug the cord, it cannot be powered on

again before it cools down. Do not touch a heating base. 11. The amount of water added into the stew- cup container is at the water level before putting into the inner container, and the water added cannot exceed the water level, or

there may be breakdown or dangers. 12.Do not switch on the power for dry burning when no water is added into the stew- cup container. Unplug the power line when it is out of use. 13. When plugging, please make sure it contacts well.

14.Do not let cord hang over edge of table or counter, or touch hot surfaces. 15. The power plug and socket should always be kept dry. Never insert and pull out the plug with wet hands to prevent electric shock. 16. A short power-supply cord (or detachable power-supply cord) should be used to reduce

the risk resulting from becoming entangled in or tripping over a long cord. If a longer detachable power-supply cord or extension cord is used: 1) The marked electric rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

2) The cord should be arranged so that it will not drape over the countertop or tabletop

where it can be pulled on by children or tripped over unintentionally. WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

17. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

18. When this product is power on, do not move it. 19. The ceramic pots are fragile. Do not hit them with hard objects or drop them from

20. Close supervision is necessary when any appliance is used by or near children.

21. Before it is cleaned, power cord should be unplugged, and it cools down. 22.Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

23. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. 24.Do not use outdoors.

25.Do not use near or on the surface of flammable or explosive articles; Do not use in damp environment or near other heat sources to avoid trouble and danger.

26. Extreme caution must be used when moving an appliance containing hot liquids. 27.Do not use appliance for other than intended use. 28. Save these instructions.

II.Product Features

1. High quality ceramic inner pot, good-looking and healthy. 2. Professional stewing programs to keep nutrition.

3. Tempered glass lid, safer to use.

4. Six functions setting and three-level temperature settings, suitable for stewing different foods

5. Multiple protections, ensuring product safety.

Product name	Microcomputer Electric Stew Pot
Model	DGD10-10BAG
Rated Capacity	1.0L
Rated Voltage	120V~ 60Hz
Power	300W
Dimensions	258mm×222mm×215mm

IV. Parts Main components

