 




TEN LEI YEN LLC
ADD: 9741 BOLSA AVE# 107
WESTMINSTER, CA 92683
PHONE: 714-418-9788
E-MAIL: info@tenleiyen.com
Website: www.tenleiyen.com

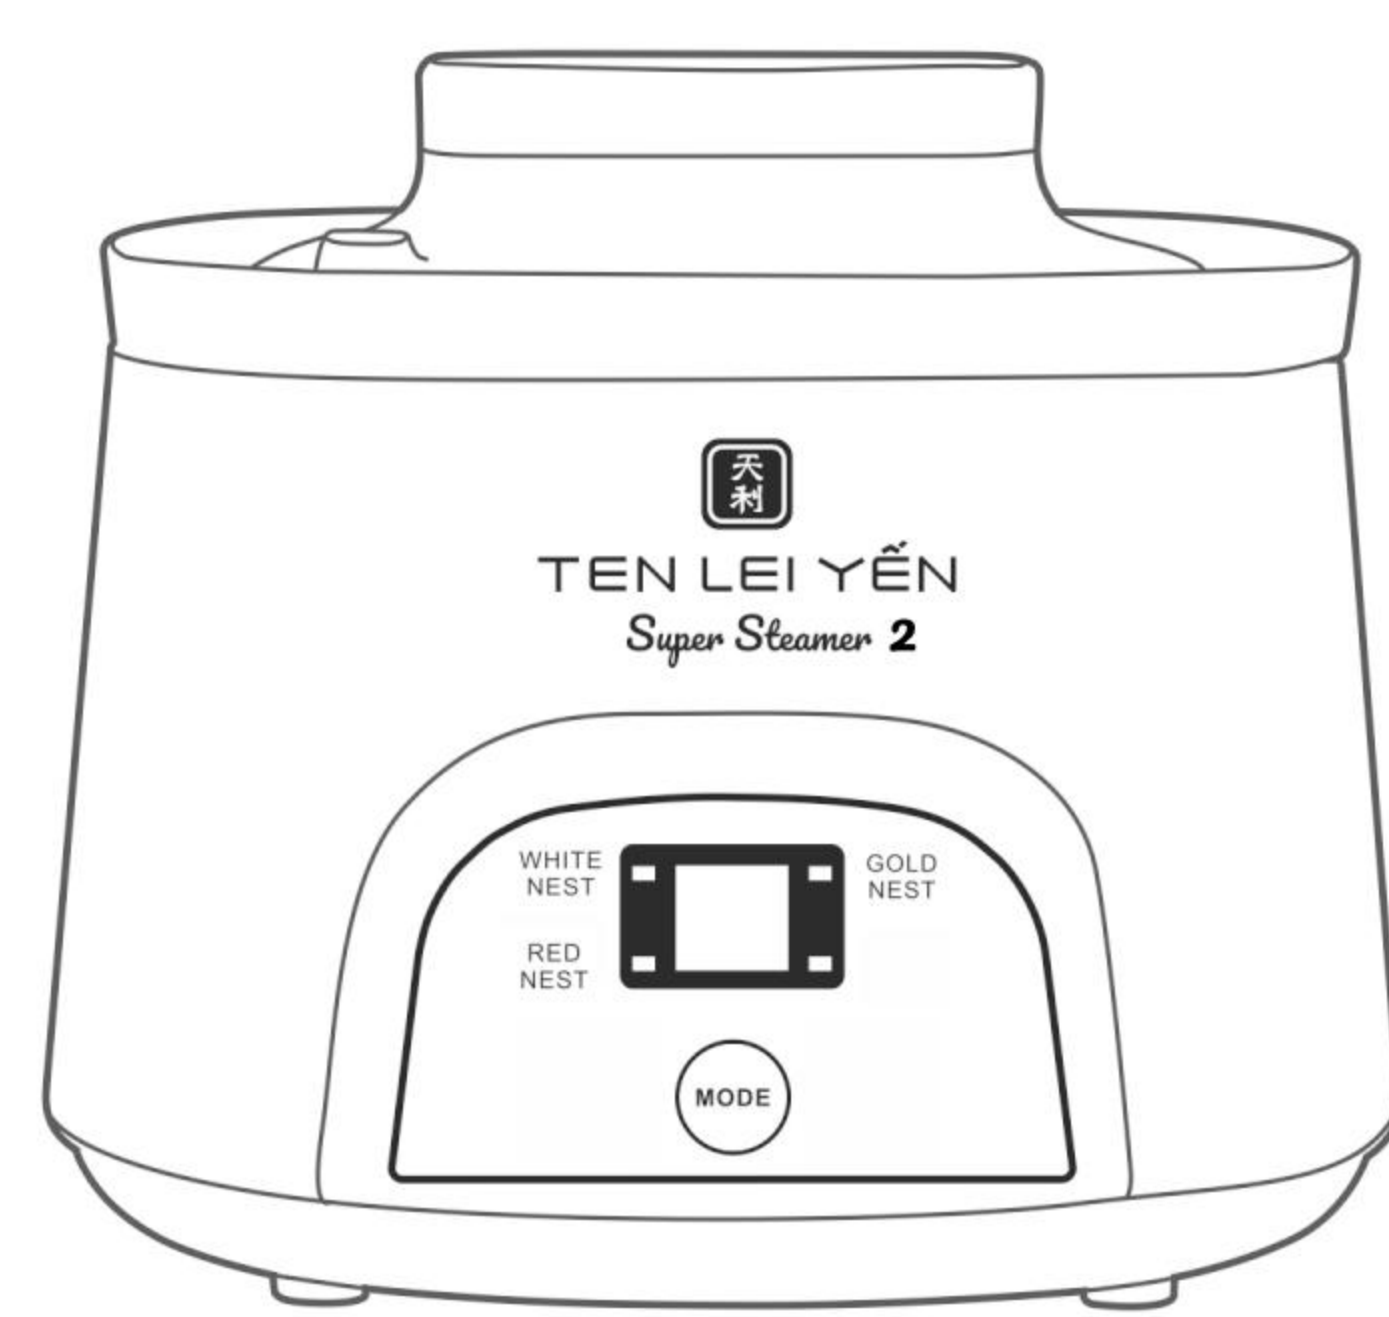

Super Steamer
Model No.: TLY999

Hướng Dẫn

Cách Ngâm Yến – (Trước Khi Nấu)

Khoảng 3 tai Yến (miếng), ngâm nước lạnh một đêm, xé cho tơi ra dọc theo số của tai Yến, xả bỏ vài ba nước, vớt Yến lên cho ráo nước. Cho Yến vào thố, đường phèn, 1 lát sâm, 3 chén (Cup) nước lọc.

Cách dùng

Khoảng 5 muỗng canh, ăn ban đêm trước khi ngủ. Hoặc sáng sớm lúc bụng đói. Dùng trong vòng 1 tuần.

Cooking Instructions


Soak 3 pieces in a bowl of cold water for 5 hrs or overnight. Remove & discard soaking water. Shred each piece length wise, rinse over running water using a strainer. Put the nests, rock sugar, ginseng in the white cooking pot & fill with 2 - 3 cups of drinking.

Consumption


Birdnests are best consumed on an empty stomach, morning or night. 5 soup spoons per daily serving. Consumed within a week.

Hướng Dẫn Dùng Nồi Điện


1. Cho nước vào nồi điện, đến mức nước trong nồi

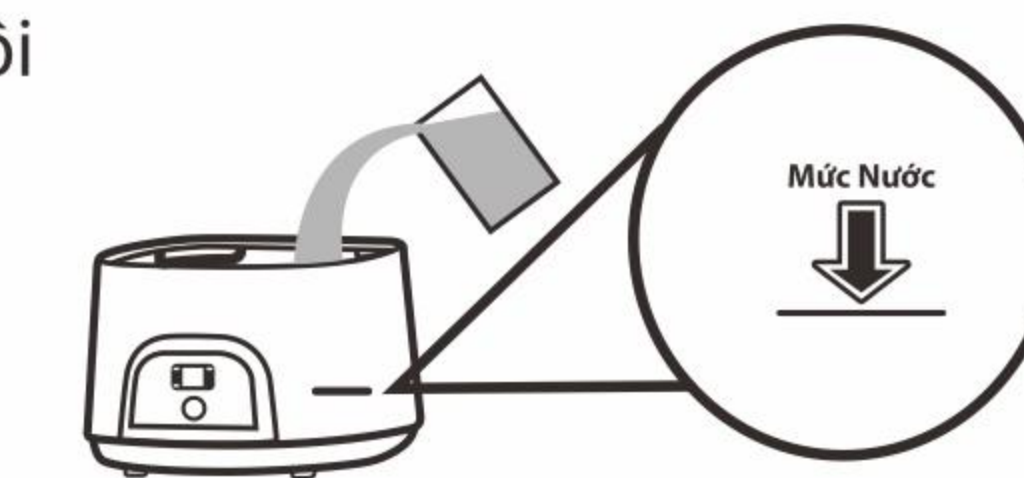


2. Đặt thố yến vào

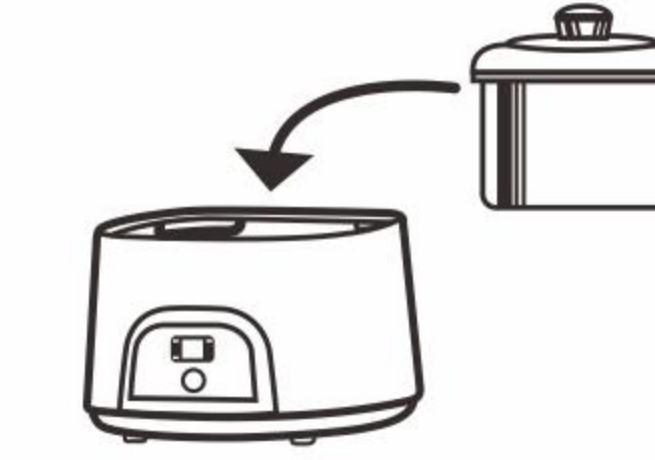

3. Đậy nắp và cắm điện

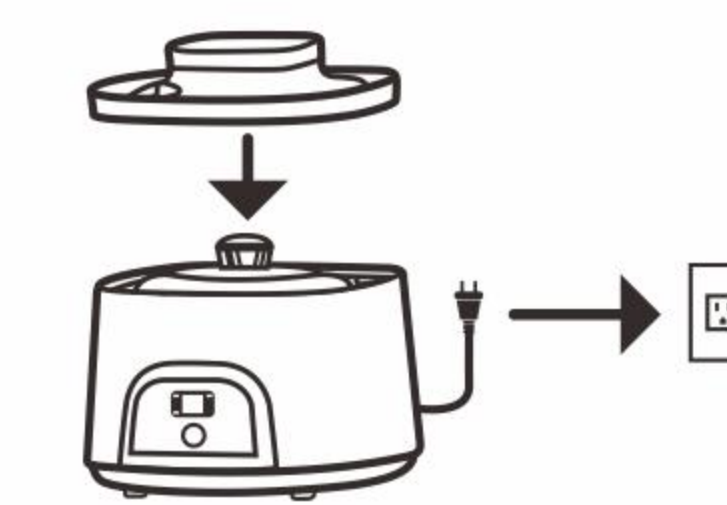

4. Nhấn MODE Yến trắng
MODE Yến vàng
MODE Yến đỏ

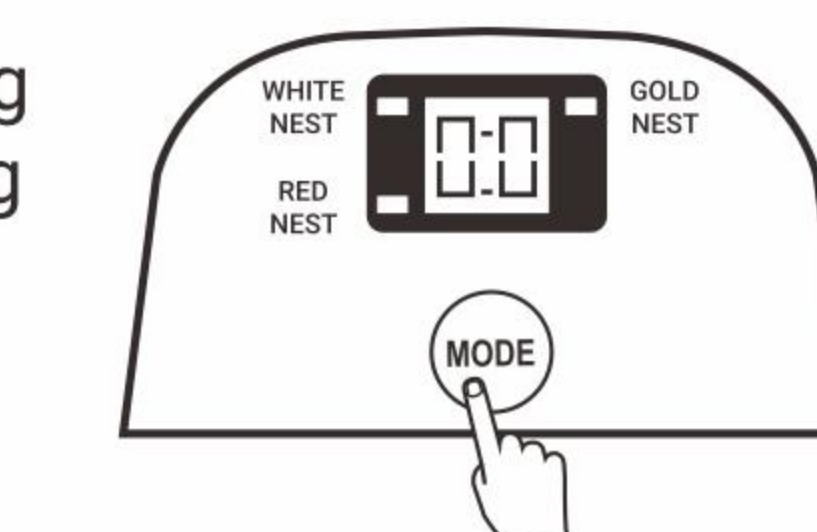

Instruction Manual

For product models: TLY999

Thank you for purchasing Super Steamer from Ten lei Yen. Please operate it according to this instruction when using this product. This product is limited to household or similar application.

Important: Read this Instruction Manual prior to using these products. Please keep this Instruction Manual as a reference.

TEN LEI YEN LLC TABLE OF CONTENTS

I. Product information	1
II. Specifications	1
III. Name of Parts	2
IV. Instruction Manual	2
V. Notes	7
VI. Repair and Maintenance	8
VII. Product Recommendations	9

I. Product Information.

- This Super Steamer features a double layer seal to reduce energy consumption, as well as to prevent scalding.
- The inner pot is constructed of high quality ceramic for long periods of steaming and should only be hand washed.
- The Super Steamer is equipped with multiple safety devices for users' protection.

II. Specifications.

Capacity	Power Consumption	Dimensions (L×W×H)
large Inner ceramic pot	120V-60Hz 300W	216×223×186 (mm)
5 cups		

3. Trouble shooting


No.	Problem	Possible Causes	Possible Solutions
1	Soon after the product enters in the power on and heating state, sudden power failure occurs.	There is no water in the vessel; which results in dry-burn power off protection.	Add water into Super Steamer reservoir
2	Power failure	The plug of the power cord is not properly connected.	Check whether the power cord is properly plugged in place.
		The water in the vessel is boiled dry, resulting in the dry burn power-off protection.	Please add water into the vessel and have it cool down before turning on the power.
3	The power is switched on but the heating fails.	Product failure.	Call maintenance center for trouble shooting.

- Non-professionals should not remove and repair this product.
- If the power cord is damaged, it must be replaced by the professionals.
- When the product fails and the trouble cannot be ruled out, do not repair by yourself.

VII. Product Recommendations


If you have any recommendations and feedbacks, please email us at info@tenleiyen.com, or on the website directly www.Tenleiyen.com Your input is greatly appreciated.

III. Name of Parts

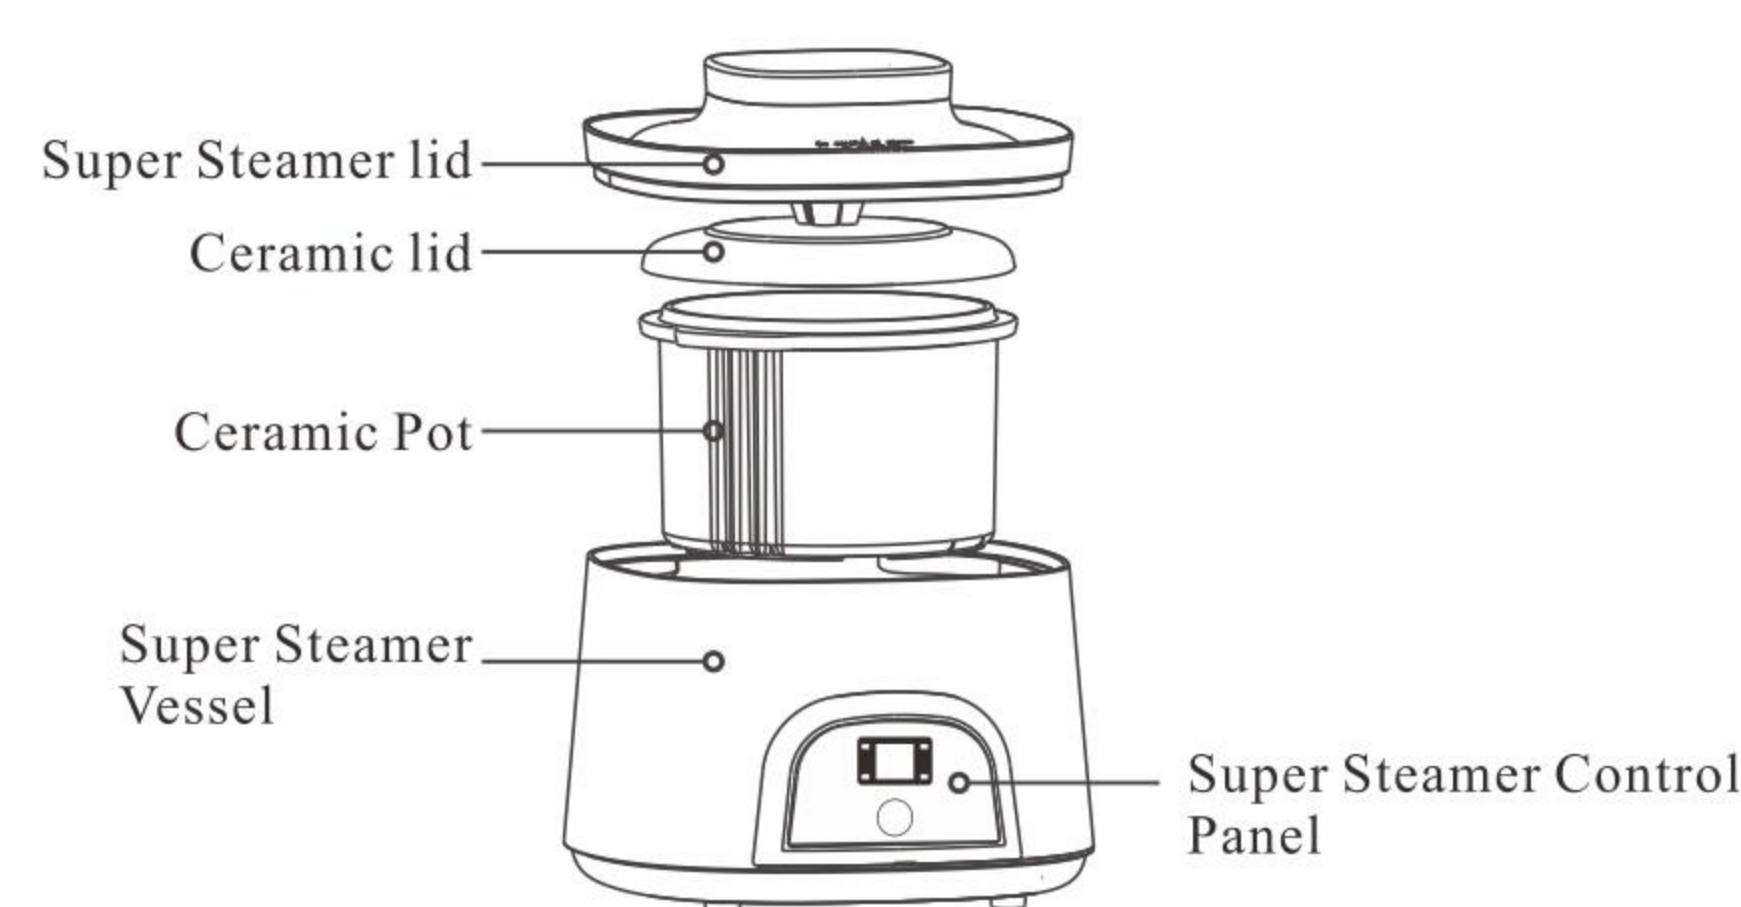

IV. Instruction Manual

1. Description of control panel and buttons:

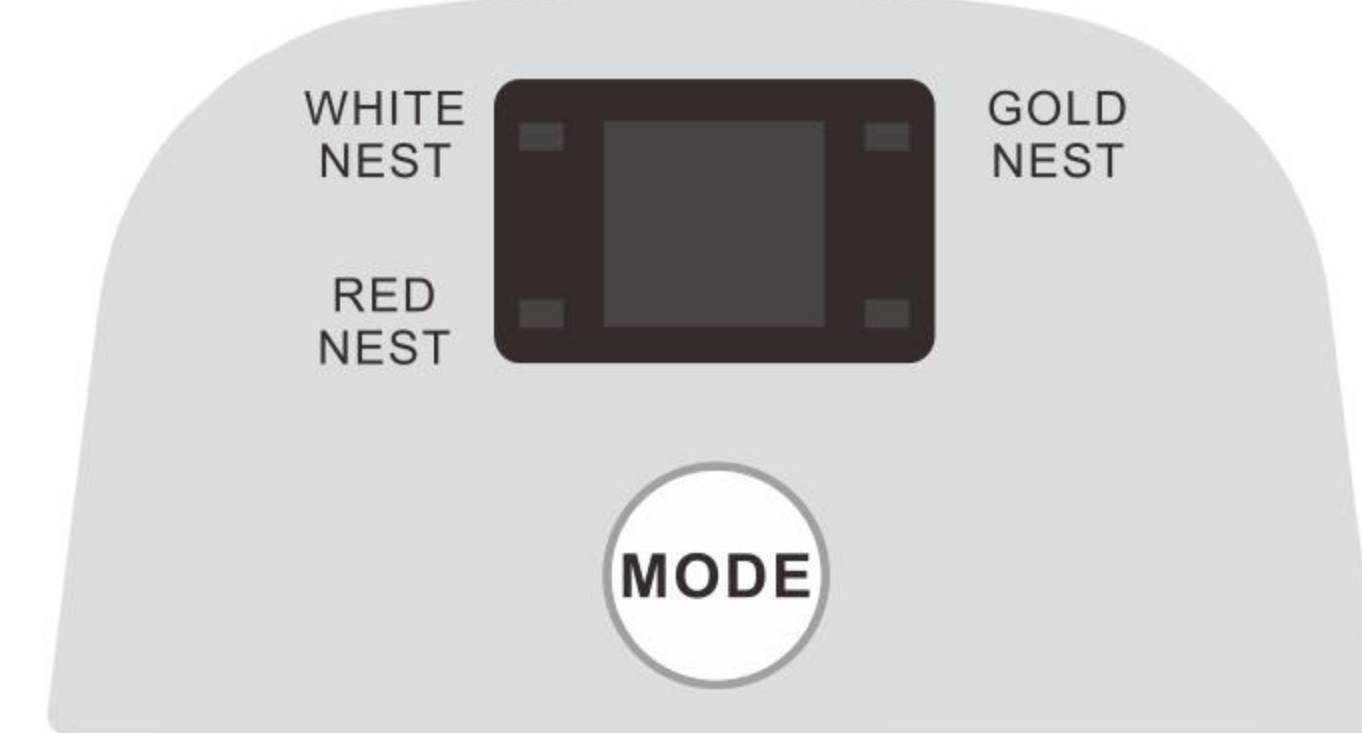

How to Read the Display:

This Super Steamer display shows time in the following manner:
-If the time displayed on the screen is less than 1.0 hour, the displayed time counts down in 0.1 hour (6 minutes) increment.

0.7=42mins 1.0=60mins

Standby Mode: Plug in the power cord of the Super Steamer, the screen displays "0.0", all indicators are off. The "MODE" button can be operated.

1. "MODE" button: In the standby mode, press the "MODE" button, the preset functions are shown the following order: WHITE NEST→GOLD NEST→RED NEST then returns to the standby mode, repeating the sequence above.

2. Function Settings:

Setting	WHITE NEST	GOLD NEST	RED NEST
Default Time (Hour)	0.7(42mins)	0.7(42mins)	1.0(60mins)

3. Operational Procedures

Working principle of water stewing: a cooking method that uses water as a medium to evenly and gently heating the food inside the inner pot. Please remember to add water into the super steamer vessel.

①Preparation before stewing

- Add food and water into the inner ceramic pot:
 - Put food into the inner ceramic pot and add the appropriate amount of water (the water line shall be equal to or slightly higher than the food. Food and water added shall not exceed the 80% of the inner pot volume).
 - Cover ceramic pot with lid.
- Add water to Super steamer: Add water into the supersteamer vessel to the water guideline of .
- Insert the inner ceramic pot into the vessel. Please make sure to put on the Super Steamer lid securely.

- Do not switch on the power for dry burning when no water is added into the vessel. Unplug the power cord when it is out of use.
- You must fully insert the power cord into the electrical outlet to ensure the good contact.
- The power plug and socket should be kept dry. Do not handle the power cord with wet hands.
- When this product is powered on, do not move it.
- Ceramic parts are fragile and may break if dropped or mishandled.

VI. Repair and Maintenance

- Cleaning
 - Power cord should be unplugged. Make sure the unit is cooled down.
 - The ceramic parts can be washed with detergent and sponge, do not use abrasive materials to clean to avoid damage to product surface.
 - Use a damp towel to wipe the outside surface of the product body, but do not use corrosive liquids for cleaning.
 - To remove residue build up on heating plate: Put 1 to 2 tablespoons of white vinegar into the TLY Super Steamer reservoir, add water to cover the heating plate surface. Plug power cord into outlet and press "Mode Button" once, allow water to boil for 2 minutes, to turn the TLY Super Steamer off, press "Mode Button". Allow water to cool to room temperature before scrubbing heating plate with sourcing pad.

2. Storing


Clean and store TLY Super Steamer in a dry place.

V. Notes


- AC power voltage should be in accordance with the voltage indicated on the nameplate.
- For your safety, use the power source with ground protection.
- Please make sure that the Super Steamer lid is closed tight during operation.
- During operation, the inner ceramic pot may rattle due to the bubble pressure in the water. This is normal.
- Do not place the product near items that are flammable and explosive; do not store Super Steamer near areas that are moist or near heat sources to avoid failure.
- When using this product, it should be placed at a solid platform out of children's reach.
- When the product is in use, it produces steam. Keep face or hands away from the steam vent to avoid injury. Keep items away from the steam to avoid damage. Do not use rag, cloth or similar items to cover the steam vents so as to avoid accidents and product failure.
- When the product is in use, the Super Steamer lid and the vessel is very hot. Do not touch them to avoid burns.
- Do not directly put the inner pot directly on or in an open fire source. Do not place hot ceramic parts in cold water. Hot ceramic may crack if it comes into contact with cold water.
- If there is no water in the container when it is in operation, please unplug power cord. The unit cannot be powered on again before it cools down. Please wait for the unit to cool down before starting it again. In the meantime, do not touch the heating base to avoid burns.
- Water should be added to the indicated water level before the inner pot is placed into the vessel. The water should not exceed the indicated water level; otherwise, malfunction or danger may occur.

Note:


The handle of the large inner ceramic pot must be placed in a vessel at a 45 degree angle to the vessel to facilitate the insertion and removal of the inner ceramic pot.

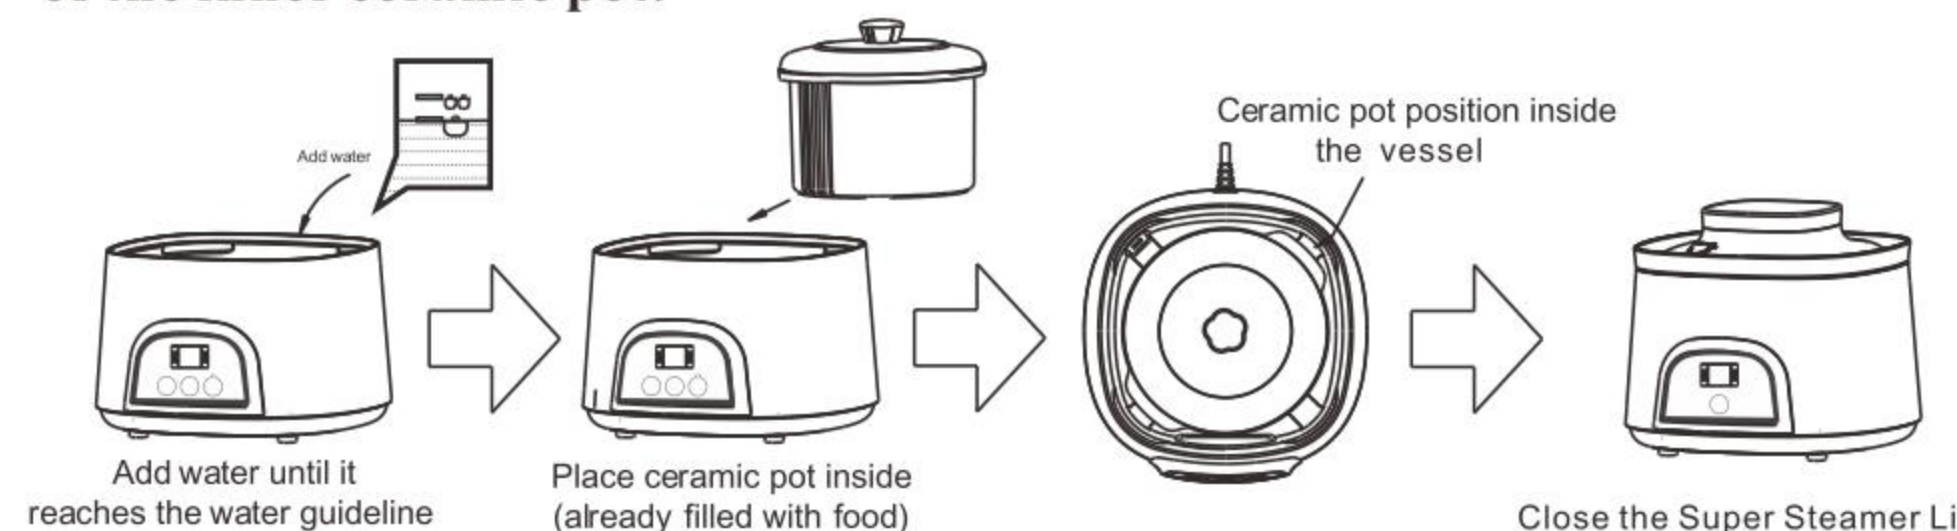


②The screen on the control panel lights up after the stew pot is plugged into the power outlet. The cooker is on standby.

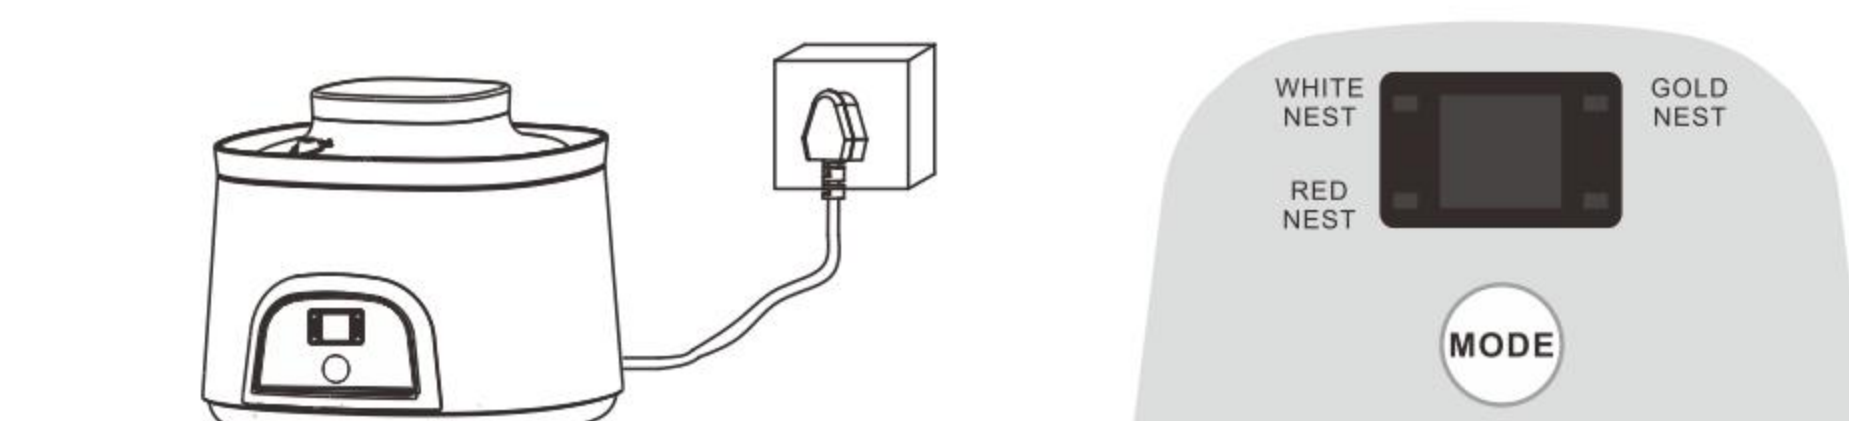


③Selecting functions (For example: Cooking WHITE NEST).

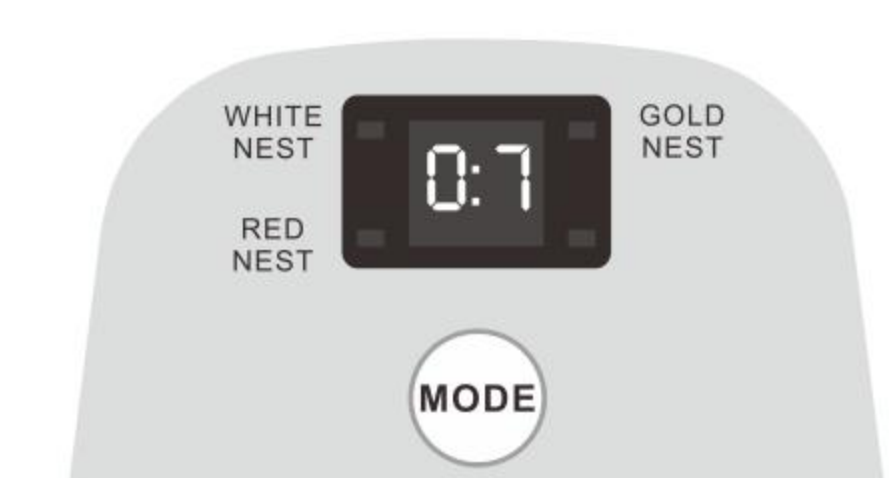


Press "MODE" button once to choose "WHITE NEST". Press "MODE" button twice to choose GOLD NEST. Press "MODE" button three times to choose "REDNEST". The display will show the cooking time after selection.

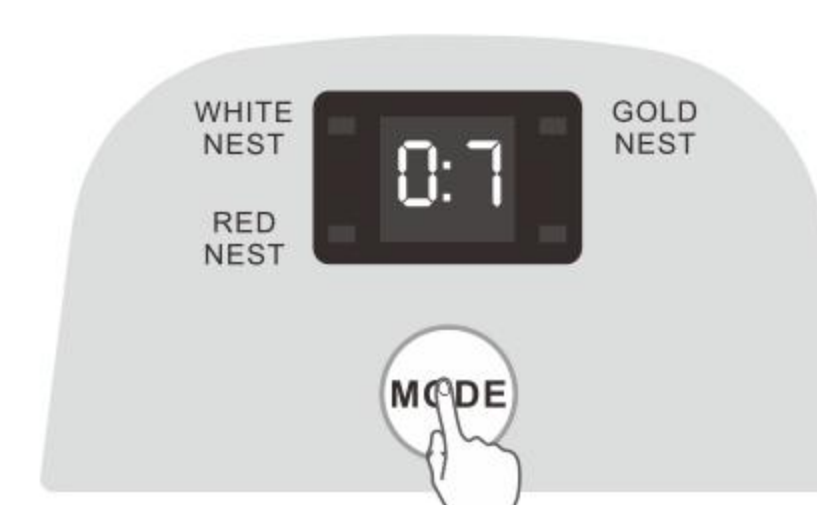

Press the "MODE" button to select the desired "WHITE NEST" function, and the "WHITE NEST" function indicator and the digit displayed on the screen flash several times.

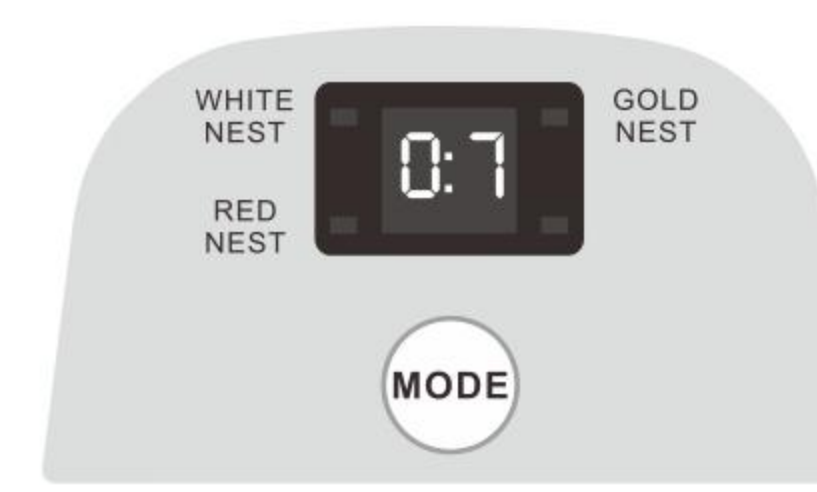


After a few seconds, it automatically enters into the cooking stage, the "WHITE NEST" function indicator turns from flashing to constantly on. The screen displays "0.7" hours and starts to count down, decreasing by the unit of 0.1 (0.1 of 60 mins, which equals to 6 mins).

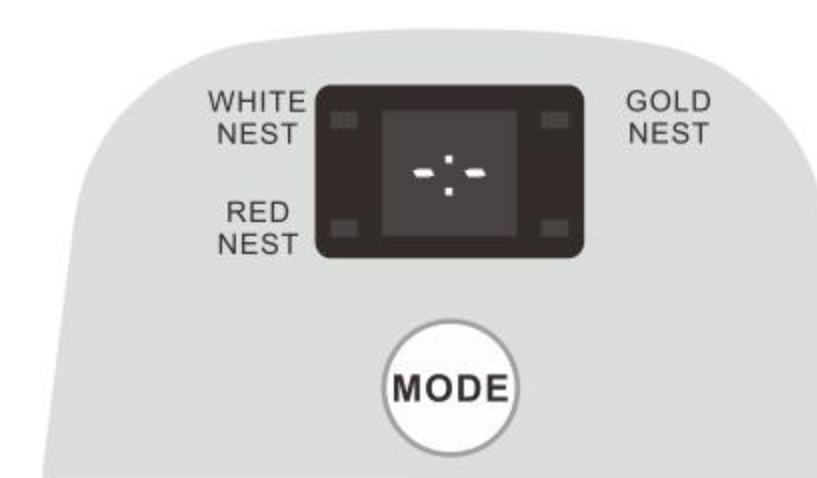


At the end of the countdown, cooking stage has been completed.

④The recommended amount of the bird's nest and rock sugar water added during cooking:

Inner pot	Maximum amount of the bird's nest and rock sugar water added
Large inner ceramic pot	4 piece of bird's nest+ 4 cups of water

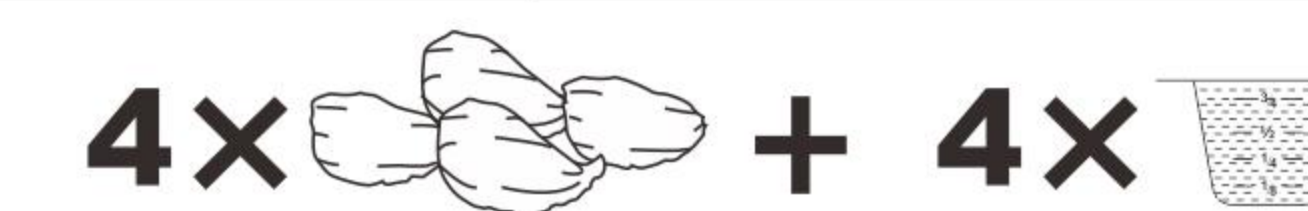

D. Stopping the cooking process

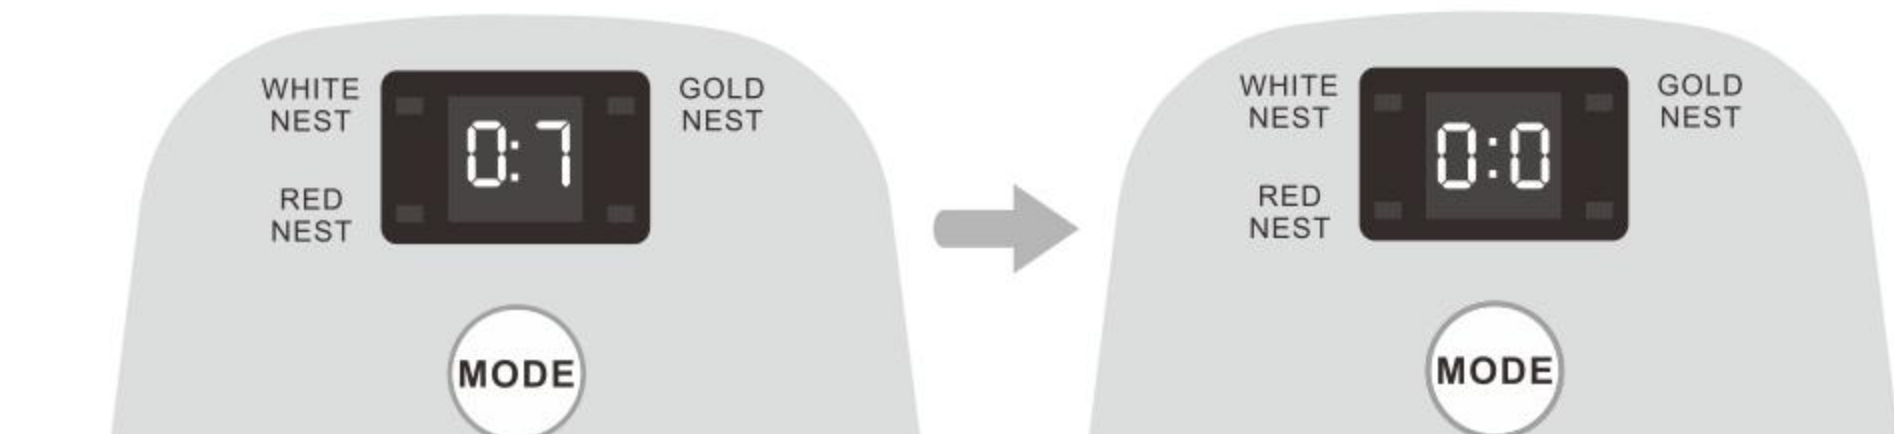

You can stop the cooking process or abort by simply pressing the "MODE" key to stop operation immediately and return to the Standby Mode.

⑤When not in use, turn off and unplug power cord.

Tips

- In order to ensure proper operation and to prevent product malfunction, please add water into the vessel until water reaches the water guideline for the corresponding inner ceramic pot.
- If you need to open the upper lid during cooking process, please press the "MODE" key to stop operation. Do not lift the lid before the water stops boiling to prevent injuries.