

编号:DGD13-13CMD · 美国熊猫惠 · 01 · MG-03B

尺寸: 142mm × 210mm

材质: 128克铜板纸

 
微电脑电炖锅

Microcomputer Electric Cooker

使用说明书

User Manual

型号:DGD13-13CMD

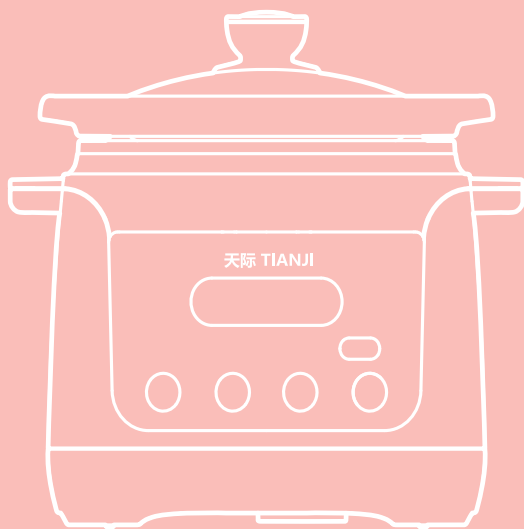

使用产品前,请仔细阅读本使用说明书。

请妥善保管本使用说明书,图案有偏差时,以实物为准。

本说明书中技术规格参数如有变动恕不另行通知。

使用时,请按本说明书进行操作,本产品仅限家庭或类似场所使用。

请妥善保管本使用说明书。

Please read this instruction carefully before using products.

Please keep this manual properly.

If the product is slightly different from the real object, please take the real object as the standard.

There will not be any further notice for any future changes of technical specifications and parameters in this instruction.

Please operate it according to this instruction when using this product; this product is limited to household or similar application.

Please keep this manual properly.

目录

一、注意事项.....	1
二、产品性能特点.....	2
三、主要技术参数.....	2
四、产品简介.....	2
五、刻度说明.....	3
六、操作说明.....	4
七、保养与维护.....	5
八、产品装箱清单.....	6

一、注意事项

1. 请阅读所有的使用说明。
2. 请使用与铭牌所标电压值一致的交流电源。
3. 请使用有合格保护接地的电源, 以确保人身安全。
4. 不要接触发热的表面。使用提手或把手。
5. 为防止电击, 不要把电线, 插头或电器浸入水中或其他液体。
6. 使用本产品时应放置在儿童接触不到的稳固平台上。
7. 产品工作时会冒出蒸汽, 切勿将脸或手靠近蒸汽口, 以免烫伤; 怕蒸汽的物体不要置于本产品上方; 切勿将抹布或类似物品覆盖在蒸汽口上, 以避免引发意外或导致产品故障。
8. 产品工作时, 内锅、内锅盖温度较高, 请勿触摸, 以免烫伤。
9. 工作完成后外壳及铝锅表面温度很高, 请勿触摸或碰, 以免烫伤。
10. 若产品出现缺水干烧, 请立即拔掉电源, 等待冷却后再操作, 此时切勿用手触摸发热盘以免烫伤。
11. 在炖盅容器内未加入水时, 切勿通电干烧, 不用时请拔下电源插头。
12. 插入电源线时, 必须插到底, 以确保接触良好。
13. 不要让电源线挂在桌子或柜台边, 或接触热的表面。
14. 应经常保持电源插头、插座的干燥, 禁止用湿手插拔电源插头, 以防止触电。
15. 短的电源线(或可拆式电源线) 应被用于降低造成的缠住或被长线绳绊倒的风险。可拆式电源线或延长线都均可使用并能小心使用。如果使用一个较长的可拆式电源线或延长线:
 - (1) 电源线或延长线的标识至少与电器的额定功率同样。
 - (2) 电源线应放置妥当以免悬垂在台面或桌面, 避免让小孩拉到或不小心中绊倒。
 - (3) 如果电器是接地型的, 延长线应该是3线接地线。
16. 总是先将插头插入设备, 然后将插头插入插座。要断电时, 先将开关转为“关闭”, 然后从墙上插座上拔下插头。
17. 产品在通电工作时, 请勿移动。
18. 陶瓷件均为易碎品, 慎防与硬物碰撞及从高处跌落, 造成破碎损坏。
19. 当使用电器时有接近小孩时, 必须严密监视。
20. 在清洁之前, 应拔掉电源线并将其冷却。
21. 在任何方式下, 都不要在有损坏的电线或插头或设备故障或已损坏的情况下使用电器。
22. 如果使用不是电器生产商推荐的配件可能会引发受伤。
23. 请勿在户外使用。
24. 不要放在易燃易爆的物品附近或表面使用; 不要放在潮湿或靠近其它热源的的地方使用, 以免发生故障和危险。
25. 移动电器带有热液体时, 必须严加注意。
26. 不要把电器另作他用。
27. 产品第一次使用时, 发热体可能会发出轻微异味, 另显示屏在刚通电时可能显示闪烁, 请拔下插头后重新通电, 此两种现象属正常现象, 请放心使用。
28. 请保存此使用说明。

特别提示:

锅盖采用了强度极高的钢化玻璃制作, 但钢化玻璃存在着一个概率极低的自爆(自然碎裂)现象。即使如此, 大家也不必过于担心。钢化玻璃碎裂时会形成类似蜂窝状的钝角碎小颗粒, 没有锐利边缘, 不易对人体造成严重的伤害, 更不会产生爆炸, 所以又被称为安全玻璃。

一旦发生上述情况, 请注意小心清理玻璃碎渣, 以防造成伤害, 如需协助请及时与我们的客服人员联系。

二、产品性能特点

1. 优质陶瓷内锅更加健康、卫生,钢化玻璃上盖,可视化烹饪。
2. 专业BB粥、瘦肉粥、营养汤等功能,满足宝宝和妈妈的烹饪需求。
3. 阶段式育儿程序,满足不同月龄婴幼儿对辅食口感的需求。
4. 系统自动记忆所选育儿阶段,无需重复设置。
5. 人性化保温功能,识别环境温度,冬夏季节自动调温。
6. 24小时预约,可定时,无需人工看管。
7. 采用悬浮式发热结构,快速炖煮,多重防溢设计,不溢锅。
8. 干烧自动断电等安全保护装置,确保产品使用安全。


三、主要技术参数

产品名称	微电脑电炖锅
产品型号	DGD13-13CMD
容量	1.3L
电压	120V~60Hz
额定功率	300W
外观尺寸(长×宽×高)	286mm×250mm×220mm

四、产品简介



 
- 预约:在待机状态下用于启动预约功能。
- 功能/取消:选择烹饪功能“BB粥、瘦肉粥、杂粮粥、营养汤、甜品、保温、取消”。
- 阶段选择:选择育儿阶段“6~8月龄、8~12月龄、12月龄以上”。
- 小时、分钟:在时间闪亮的情况下用于调整预约或炖煮时间。

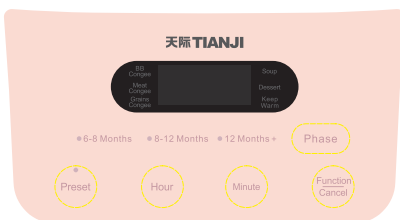

功能	阶段	默认时间	定时范围	预约范围
BB粥	6~8月龄	02:00	01:00~03:00	00:00~24:00 (默认:04:00) 预约时间为功能时间
	8~12月龄	01:45		
	12月龄以上	01:15		
瘦肉粥 (结束前15分钟蜂鸣提示加瘦肉)	6~8月龄	02:00	01:00~03:00	
	8~12月龄	01:45		
	12月龄以上	01:15		
杂粮粥	6~8月龄	02:15	01:00~03:00	
	8~12月龄	02:00		
	12月龄以上	01:45		
营养汤	6~8月龄	01:15	01:00~04:00	
	8~12月龄	01:45		
	12月龄以上	02:15		
甜品	——	01:45	01:00~04:00	无预约功能
保温	——	—:—	—:—	
阶段选择记忆	自动记忆上一次烹饪程序用户所选择的育儿阶段,如所选阶段不变,无需重复设置			

五. 刻度说明

 内锅的刻度线表示使用各项功能时的水位参考线:

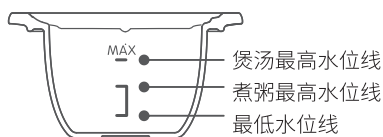

- 汤功能:加水量在“MAX”和“1/8”水位线之间。



水加至内锅1/8水位线



量杯加入1/8刻度米量



水加至内锅1/4水位线



量杯加入1/4刻度米量

- 粥功能:加水量在“1/4”和“1/8”水位线之间,加米量对应量杯的“1/4”“1/8”刻度线。

温馨提示

- 加水量应在最低水位线与最高水位线之间,加水过少或过多,都可能出现故障和危险。
- 建议用户第一次使用粥功能时,按照说明书的米水配比标准进行烹饪。
- 根据个人喜好和所用米质的不同,可适当调整米水配比;食物对水的比例不能过高,否则容易造成煮干、烧糊等现象,严重时将会影响内锅的使用寿命。

六. 操作说明

1. 往内锅加入食材,将内锅外壁擦拭干净放入机器并盖上内锅盖。
2. 接通电源,屏幕显示“00:00”,进入待机状态。
3. 按“预约”键,并通过“小时”“分钟”键设定预约时间(设定的时间为完成炖煮的时间,无需预约请跳过该步骤)。



4. 按“功能/取消”键选择烹饪功能。

5. 按“阶段选择”键选择育儿阶段、按“小时”“分钟”键设定功能时间(屏幕显示功能的炖煮时间)。



6. 设置完成后等待指示灯不再闪烁,机器开始工作。
7. 时间倒计时到0后,机器进入保温状态。

温馨提示

- 若您认为食物已炖至所需火候,只需按“取消”键,立刻停止工作,回到待机状态。
- 当环境温度较低时,建议加热水进行炖煮,以确保食物熟透。
- 若中途断电,产品将回到待机状态,需重新设置,才能继续工作。

七. 保养与维护

1. 清洗方法

- 产品清洗前应先拔掉电源线,待冷却后再进行清洗。
- 切勿将电源线、主机浸入水中或冲洗,以免电器进水,产生故障,影响安全使用。
- 产品整机有脏污时,可用湿毛巾擦拭外表面,切勿使用腐蚀性液体进行清洗。
- 内锅、内锅盖可用洗洁精和海绵清洗,请勿使用硬质钢丝清洗,以免损坏表面。

2. 保存方法

- 产品长时间不使用时,请清洁擦净后装入包装箱中,存放于通风干燥的地方,以免受潮影响使用。
- 本产品中含有部分可单独拆卸的零部件,为确保安全,请在拆卸或清洗后给予正确装回原位或进行妥善保管、存放,以免丢失或小孩误食。

3. 故障及排除

序号	故障现象	故障原因	排除方法
1	不通电	1.电源线插头没插好	检查电源线插头是否插到位
		2.插座没有电源供应	检查插座是否有电源供应
		3.产品故障	请送指定维修点检修
2	不加热	产品故障	请送指定维修点检修
3	屏幕显示 E1/E2/E4/E5	产品故障	请送指定维修点检修
4	屏幕显示E3	干烧保护	内锅缺水干烧,拔掉电源,等机器和陶瓷自然冷却后再正常操作


4.非专业人员切勿拆卸、修理本产品。

5.如果电源线损坏,为避免危险,必须用专用软线或从我司经销商或维修部买到的专用组件来更换。

6.当产品出现故障且无法排除时,切勿自行维修,请与我司设立在当地的特约维修网点或本公司客户服务部联系解决。

7.本产品中的陶瓷件为易碎品,不在保修范围内,请小心使用。

8.电气原理图

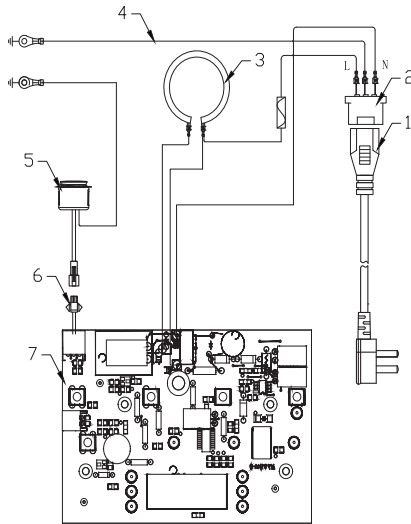

9.售后服务政策：

凡购买天际电炖锅的消费者，均可享受一年的免费保修服务，客户凭消费凭证，可免费维修。一年以上的产品需额外收取零件的成本费，维修相关费用，不额外收取其他费用。详情请咨询客户服务部门，请发邮箱至：service@pandabrands.com，我们随时为您服务。

八. 产品装箱清单

名称	单位	数量
产品整机	台	1
产品整机	个	1
电源线	条	1
使用说明书(内含两联保修卡)	本	1

CONTENTS

I.Important Safeguards.....	7
II.Product Features.....	8
III.Technical Specifications.....	8
IV.Product Profile.....	8
V.Scale Instructions.....	9
VI.How to use.....	10
VII.Maintenance and repair.....	11
VIII.Product Packing list.....	12

I. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS.
2. Please use the AC power source with the voltage indicated on the data plate.
3. For your safety, use the power source with ground protection.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against fire, electrical shock, do not immerse cord, plugs or appliance in water or other liquid.
6. Use only on a level, dry and heat-resistant surface, and keep it out from Children.
7. Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding. And don't put dishcloths or other things cover the vent.
8. Do not touch the inner pot and lid under the working condition to prevent scalding injury.
9. After the working is completed, the surface temperature of the shell and aluminum container is very high, please do not touch to avoid a scald.
10. If there is no water in this product, please unplug the cord, it cannot be powered on again before it cools down. Do not touch a heating base.
11. Do not switch on the power for dry burning when no water is added into the pot. Unplug the power cord when the appliance is not in use.
12. When plugging the power cord, please make sure it contacts well.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. The power plug and socket should always be kept dry. Never insert and pull out the plug with wet hands to prevent electric shock.
15. A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a long cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electric rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - 3) If the appliance is of the grounded type, the extension cord should be a grounding -type-3-wire cord.
16. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
17. When this product is power on, do not move it.
18. The ceramic pots are fragile. Do not hit them with hard objects or drop them from height.
19. Close supervision is necessary when any appliance is used by or near children.
20. Before it is cleaned, power cord should be unplugged, and it cools down.
21. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
22. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
23. Do not use outdoors.
24. Do not use near or on the surface of flammable or explosive articles; Do not use in damp environment or near other heat sources to avoid trouble and danger.
25. Extreme caution must be used when moving an appliance containing hot liquids.
26. Do not use appliance for other than intended use.
27. When the product is used for the first time, the heating element may emit a slight peculiar smell. In addition, the display may flicker when the power is just turned on, please unplug the plug and turn on the power again.
28. Save these instructions.


II.Product Features

1. High-quality ceramic inner pot is healthier and more hygienic; toughened glass top lid allows a visual cooking.
2. Professional baby congee, meat congee, nutritious soup and other functions can meet the cooking needs of babies and mothers.
- 3.The staged infant program can meet the needs of infants of different months for the taste of complementary food.
4. The system automatically memorizes the selected infant months, and there's no need to repeat setting.
- 5.User-friendly heat preservation function can recognize the ambient temperature, and automatically adjust the temperature no matter in winter or summer.
6. The 24-hour preset function allows flexible cooking without manual supervision.
7. Suspended heating structure gives quick stew; multiple overflow prevention design helps no overflow.
8. Safety protection devices such as dry-burning automatic power-off can ensure safe use of the product.

III.Technical Specifications

Product name	Microcomputer Electric Cooker
Model	DGD13-13CMD
Capacity	1.3L
Voltage	120V-60Hz
Rated power	300W
Dimensions (Length× Width ×Height)	286mm×250mm×220mm

IV.Product Profile

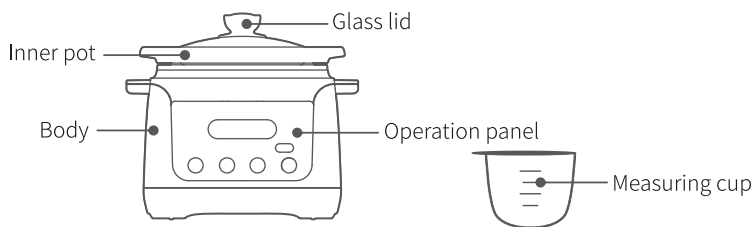

Preset: It is used to activate the preset function in standby state.

- Functions/Cancel: It is used to select the cooking function " BB Congee, Meat Congee, Grains Congee, Soup, Dessert, Keep Warm".
- Phase selection: It is used to select the infant age "6-8 Months, 8-12 Months, 12 Months+".
- Hours and Minutes: Used to adjust the preset or cooking time when the time is lit.




Function	Infant age	Default time	Timing range	Preset range
BB Congee	6~8Months	02:00	01:00~03:00	0:00~24:00 (Default: 04:00) The preset time is function time.
	8~12Months	01:45		
	12 Months+	01:15		
Meat Congee (Before 15 minutes of the end, buzzing prompts to add meat)	6~8Months	02:00	01:00~03:00	
	8~12Months	01:45		
	12 Months+	01:15		
Grains Congee	6~8Months	02:15	01:00~03:00	
	8~12Months	02:00		
	12 Months+	01:45		
Soup	6~8Months	01:15	01:00~04:00	
	8~12Months	01:45		
	12 Months+	02:15		
Dessert	——	01:45	01:00~04:00	
Keep Warm	——	—:—	—:—	No preset function
Age selection memory	Automatically remember the infant age selected by the user in the last cooking program, if the selected stage remains unchanged, there is no need to repeat setting.			

V.Scale Instructions

The scale lines on the inner pot indicate the water level reference lines when using various functions:



- Soup function: The amount of water added is between the "MAX" and "1/8" water level lines.

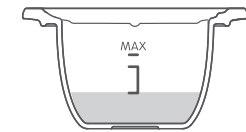

When adding water to the 1/8 water level line on the inner pot



When adding rice to the 1/8 scale line on the measuring cup



When adding water to the 1/4 water level line on the inner pot



When adding rice to the 1/4 scale line on the measuring cup



- Congee function: The amount of water added is between the "1/4" and "1/8" water level lines, and the amount of rice added corresponds to the "1/4" "1/8" scale lines of the measuring cup.

Warm tips

- The amount of water added should be between the lowest water level line and the highest water level line. If you add too little or too much water, malfunctions and dangers may occur.
- It is recommended that the user use the Congee function for the first time to cook according to the ratio of rice to water standard in this User Manual.
- According to personal preference and the quality of the rice used, the ratio of rice to water can be adjusted appropriately; the ratio of food to water should not be too high, otherwise it will easily cause the phenomenon of boiling dry and burning, which will affect the service life of the inner pot in severe cases.


VI. How to use

1. Add ingredients to the inner pot, wipe clean the outer wall of the inner pot, put it in the machine and cover the inner pot lid.
2. Turn on the power, and the appliance enters the standby state when the screen displays "00:00".
3. Press the "preset" key, and set the preset time through the "Hours" and "Minutes" keys (The set time is the time to complete the cooking; please skip this step if you don't need to make a preset).

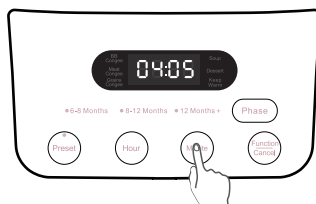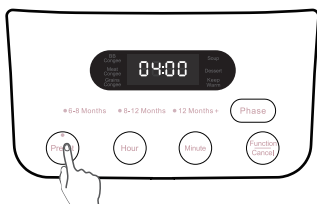

4. Press the "Function/Cancel" key to select the cooking function.

5. Press the "Infant age" key according to your baby's age, and press the "Hours" and "Minutes" keys to set the function time (The screen displays the stew time of the function).

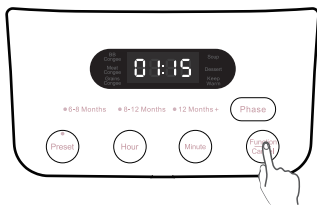

6. After setting, the appliance won't work until the indicator stops flashing.
7. The appliance enters heat preservation after the countdown time reaches 0.

Warm tips

- If you think the food has been stewed to the desired degree, just press the "Cancel" key to make the appliance stop working immediately and return to the standby state.
- When the ambient temperature is low, it is recommended to add hot water for stewing to ensure that the food is cooked thoroughly.
- If the power is cut off midway, the product will return to the standby state and needs to be reset before it can continue to work.

VII.Maintenance and repair

1.Cleaning method

- Unplug the power cord, and clean the product after the product cools down.
- Do not immerse the power cord and the appliance in water or wash them to avoid failure caused by water in the appliance, thus affecting safe use.
- When the appliance is dirty, you can wipe the outer surface with a wet towel, and do not use corrosive liquids for cleaning.
- The inner pot and inner pot lid can be cleaned with detergent and sponge. Do not use hard steel wire, which may damage the surface.

2.Storage method

- When the product will be left unused for a long time, please put it into the packing box after cleaning and drying it and store it in a ventilated and dry place to avoid moisture and affect the use.
- This product contains some parts that can be removed separately. To ensure safety, please put them back in place after removal or cleaning, or keep them properly, so as not to be lost or eaten by children.

3.Troubleshooting

S/N	Fault symptom	Fault causes	Troubleshooting method
1	Power-on failure	1. The power cord is not plugged in properly.	Check whether the power cord plug is firmly plugged-in place.
		2. The socket has no power supply.	Check whether the socket has power supply.
		3. Product faults	Send to the maintenance service or contact us.
2	Heating failure	Product faults	Send to the maintenance service or contact us.
3	The screen displays E1/E2/E4/E5.	Product faults	Send to the maintenance service or contact us.
4	The screen displays E3.	Boil-dry protection	When the inner pot boils dry, unplug the power source. The operation can continue only after the appliance and ceramics cool down.


4.Non-professionals shall not disassemble or repair the product.

5.If the power cord is damaged, in order to avoid danger, it must be replaced with a special cord or a special component purchased from our Supplier or Maintenance Department.

6.When the product fails and the fault cannot be removed, please do not repair it by yourself, and contact our local special maintenance point or our Customer Service Department for solution.

7.The ceramic parts in the product are fragile and are not covered by the warranty. Please use them carefully.

8.Circuit diagram

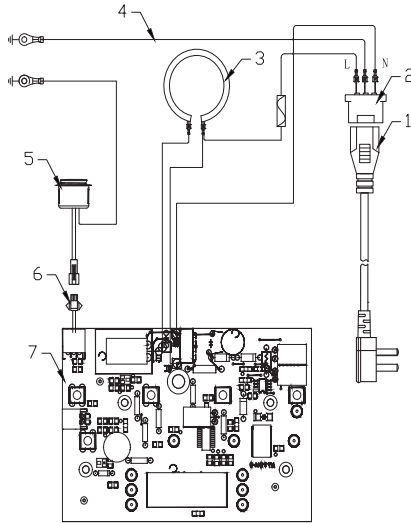

Customer Service:

The One-year Limited warranty is applicable only on products purchased and used in the America with verifiable proof of purchase are limited warranted for one year. Within one year, any fault caused by non-artificial reason we should maintain freely. Spare parts and freight needs to be paid after one year. For detailed information, please be free to contact the customer service team through service@pandabrands.com. We will response you as soon as possible.

VIII.Product Packing list

Name	Unit	Number
Complete appliance	Set	1
Measuring cup	Pcs	1
Power cord	Pcs	1
User Manual	Pcs	1



更多食谱, 请扫一扫



更多厨电, 扫一扫进入店铺

Manufacturer: SHANTOU TONZE ELECTRIC APPLIANCE INDUSTRIAL CO.,LTD

Imported by: Pandabrands Inc.

Email: business@pandabrands.com

Customer Service: service@pandabrands.com