No.	Failure phenomenon	Failure causes	Troubleshooting methods
1	Power failure	The plug of the power cord is not properly connected.	Check whether the power cord plug is inserted in place.
		Product failure	Please send it to the designated maintenance point to have it checked and repaired
2	Displaying E1 or E2	Product failure	Please send it to the designated maintenance point to have it checked and repaired
3	Displaying E3	Dry burn without water inside the inner pot	After the ceramic inner pot cools down, add water and food, and then stew or boil them.
		Product failure	Please send it to the designated maintenance point to have it checked and repaired

- 4. Non-professionals should not disassemble and repair this product. 5. If the power cord is damaged, it must be replaced with special cord or the special component purchased from the supplier or the maintenance department of our company.
- 6. When the product fails and the trouble can not be ruled out, do not repair by yourself, please contact the local special repair service network set up by our company or contact our customer service department to solve
- 7. The inner pot and lid are breakable parts, which are not included in the scope of quality warranty, so please use with care.
- 8. Any other servicing should be performed by an authorized service representative.

condition, and at about "06:30" the porridge can be cooked and

transferred to the Warm. Finally, you can enjoy the steaming-hot

(Note: For the perishable food, please try not to set a long-time

If you need to adjust the cooking time, you should first press the

"Preset/Timer" key, and the "Timer" indicator and the screen flash on at

the same time. At this moment, the cooking time can be adjusted through

the "Hour" and "Minute" keys. Press the "Hour" key, the digit of hour on

the screen will increase by the unit of "1". Press "Minute" key, the digit of

minute on the screen will increase by the unit of "5". If those keys are

1) Method of adding rice: Add a cup of rice with the attached measuring cup

2). Instruction of the scale mark (L/CUP) on the inner wall of the inner pot:

Measuring

Cup

Measuring

Cup

3) After washing the rice or other food clean, put it into the inner pot and add

the ceramic inner pot, put it into the pot body and cover it with its lid.

Tips: When stewing food or cooking porridge, the proportion of food to

4) Switch the power on, and at this moment the screen displays "00:00".

Then after wiping and cleaning the water drops or dirt on the outside of

water or rice to water cannot be too high, so please add enough

water, otherwise, boiling dry or burning dry may possibly occur.

which shows that the electric stewpot is in standby mode (the outer shell

of this product has been connected with safety ground, so you shall have

the power plugs inserted into the outlet with safety grounding device).

Then, you can start to select functions and give your instructions

It is recommended that you add water according to the ratio in the

following table, and you can also properly increase or decrease the water

1.5CUP | 2.0CUP | 2.5CUP | 3.0CUP

Measuring

Cup

Cup

Remarks

DGD40-40CWD

DGD40-40SWD

DGD50-50CWD

DGD50-50SWD

pressed for a longer time, those digits will quickly increase.

presetting or it may produce peculiar odors).

9. This product is for household use only.

porridge at 7

7)"Hour"" and "Minute" keys:

2. Operating Instructions

Cup

amount based on your personal preferences.

Measuring

Cup

Measuring Measuring Measuring

Measuring Measuring

the right amount of water into the pot.

according to your personal needs.

# TONZE



使用產品前,請仔細閱讀本使用說明書 請妥善保管本使用說明書。 Please read this manual carefully before using the product. Please keep this manual handy for further reference.

23.燉煮食物或煮粥時,食物對水的比例不能過高,否則容易造成煮幹、燒糊等 現象,嚴重時將會影響陶瓷内鍋的使用壽命。 24.移動電器帶有熱液體時,必須嚴加注意。

25.溢出食物會引發嚴重的燙傷。電器和電源線需遠離兒童,不要將電源線懸掛 在檯面邊緣及在檯面下使用插座,不要使用延長線。

26.為了防止觸電,不要將電線、插頭或主機浸泡在水或其他液體中。 27.在不使用和清洗前,請從插座拔出電線。允許冷卻之前,可將可分離的部件

28.不要用已有損壞的電線使用該產品,或在此電器已有故障或有任何損壞時插 電使用。應當就近送到有授權的服務點進行維修。 29.如使用製造商不推薦的附件可能造成傷害。

31.不要讓電線懸掛在桌子或櫃檯的邊緣,或觸摸熱表面 32.不要放置在熱氣體或電燃燒器上或附近,或在加熱爐中。 33.在移動含有熱液體的產品時必須格外小心。

34.始終先將插頭連接到產品上,然後將插頭插入牆上插座。斷開連接時,將任 何控制轉換為"關閉",然後從牆上的插座上拔出插頭。 35.不將此產品另作他用。

36.注意-觸電風險。只能在可移卸的容器中烹調。 37.短電源線說明 a)短電源線是以減少因纏繞或絆倒較長的繩索而引起的風險。

b)可使用延長線,並可在使用時使用。 c) 如果使用延長線

1)延長線的額定電氣額定值應至少與電器的額定值一樣大; 2) 電源線應該被放置好,放置妥當以免懸垂在檯面或桌面,避免讓小孩拉到 或不小心絆倒。

3)延長線應該是3線接地線。

30.不要在戶外使用。

## 二、產品性能特點

1. 快、慢煲多功能操作介面,隨心選擇,使用更加方便 2. 選用優瓷内鍋, 煲燉食物更加營養、健康 3.24小時定時/預約時間設置,任由您掌控 4. 配置浮動加熱調控技術,湯更濃、粥更香 5.快速煲燉功能,美味濃湯頃刻即享; 6.煮粥、燉湯一鍋多能,為您節約寶貴的廚房空間。

三、主要技術參數 產品名稱 電燉鍋 DGD40-40CWD DGD40-40SWD DGD50-50CWD DGD50-50SWD 電源 120V ~ 60Hz

目 錄

2.產品性能特點------2

3.主要技術參數------3

4.部件名稱介紹-----3

5.使用方法------4

4.不要放在易燃易爆的物品附近或表面使用;不要放在潮濕或靠近其它熱源的

6.產品工作時會冒出蒸汽,切勿將臉或手靠近蒸汽口,以免燙傷;怕蒸汽的物

8.本内鍋只限於在本產品中加熱,不要將內鍋直接放在明火上加熱或置於其它

9.切勿在加熱過程中,往內鍋內加冷水,也不要在剛燉煮結束後,立即將內鍋

11.若產品出現缺水幹燒,請立即拔掉電源,讓產品自然冷卻,冷卻過程不能往

12.加水量應在最低水位線與最高水位線之間。加水過少或過多,都可能出現故

14.應經常保持電源插頭、插座的乾燥,禁止用濕手插拔電源插頭,以防止觸

16.產品在通電工作時,內部可能會發出輕微的"嗒、嗒"響聲,這是器具調整

17.在工作狀態下按動"保溫/取消"鍵,產品將回到待機狀態,即顯示幕顯示

20.產品第一次使用時,發熱體可能發出輕微異味;另顯示幕在剛通電時可能顯

22.内鍋及内鍋蓋均為易碎器皿,慎防與硬物碰撞及從高處跌落,造成破碎損

示閃爍,請拔下插頭後重新通電;此兩種現象屬正常現象,請放心使用。

10.在内鍋内未盛燉煮食物時,切勿通電幹燒,不用時請拔下電源插頭。

陶瓷内鍋内加水或將内鍋移出鍋體,否則會導致陶瓷内鍋損壞。

18.若中途斷電,產品將回到待機狀態,需重新設置,才能繼續工作。

19.加開水煮粥並不能縮短煮粥時間,只會使米粥煮得更爛,請注意使用。

21.請保持感測器及鋁鍋表面清潔、平整,否則可能影響產品使用效果。

或陶瓷内鍋蓋放入水中,以免因陶瓷内鍋及陶瓷内鍋蓋驟冷驟熱而因此爆

體不要置於本產品上方;切勿將抹布或類似物品覆蓋在蒸汽口上,以避免引

注意事項Notes

2.請使用與銘牌所標電壓值一致的交流電源

3.請使用有合格保護接地的電源,以確保人身安全。

13.插入電源線時,必須插到底,以確保接觸良好。

15.產品在通電工作時,請勿移動。

火力的聲音,不影響正常工作。

7.產品工作時,上蓋、外壁溫度較高,請勿觸摸,以免燙傷。

1.請閱讀所有的使用說明

發意外或導致產品故障。

爐具上進行加熱

障和危險。

"00:00"

600W 額定功率 500W 額定容量 4.0L 5.0L 324mm×289mm×323mm 311mm×272mm×300mm





3. The default Timer and adjustable time range of various functions:

			_		
No.	Functions	Default Time	Timer time can be adjusted	Turning-to-heat- preservation time	Timer time can be adjusted
1	Nutrition Soup	02:30			
2	Rib soup	02:00		According to the setting time	
3	Chicken Soup	03:00	00:00~23:55		
4	Meat Soup	03:00			00:00~
5	Double Stew Soup	04:00			
6	Multi Grain Porridge	03:00			23:55
7	Baby Porridge	:	Time is not adjustable.	About 100 minutes to 120 minutes	
8	Desserts	02:30	00:00~23:55	According to the setting time	
9	Porridge	:	Time is not adjustable.	About 45 minutes to 80 minutes	
10	Instant soup	01:30	00:00~23:55	According to the setting time	
11	Warm	Default unlimited -time Warm	00:00~23:55		No presetting

function

## VI. Maintenance and repair

--:--

1. Cleaning methods: 1) Before it is cleaned, the power line should be unplugged after being

cooled down. 2)Do not clean the power cord and main body in or with water to avoid product failure and danger.

3)Use a wet towel to wipe the outside surface, but do not use corrosive liquids for cleaning.

4) The ceramic parts can be washed with detergent and sponge, and do not use a hard steel wire to clean it to avoid damage to the surface.

2. Preservation Methods

When the product is not in use for a long time, please wipe it clean, completely dry it, pack it into the carton and store it in a ventilated and dry place for normal use to avoid being affected with damp. 3. Failure and trouble shooting

automatically enter into the standby state.

cooking, it turns to the Warm state.

pressing the "Warm" key, if you need to set the Warm time, you can press the "Preset/Timer" key. At this time, the "Timer" indicator flashes on, and the desired time can be adjusted through the "Hour" and "Minute" keys. Six seconds later, the indicators of Warm and Timer indicators become constantly on, which indicates that it has entered into timed

(For unlimited-time Warm, it is no need to set the time). After 6 seconds later, the corresponding indicator turns to constantly on, which means that it has entered into the state of Warm.

Warm working condition. After the Warm time is over, it will

"Cancel" function: If you need to stop the operation in the stewing process, you simply need to press the "Warm/Cancel" key once. At this moment, the corresponding indicator is off, and the product will stop heating and return to the standby state.

6) "Preset/ Timer" key: A.Press the "Preset/ Timer" key, and the screen displays the default

presetting time "02:00" and flashes. B. After pressing the "Preset/ Timer" key, the presetting time can be adjusted with "Hour" and "Minute" keys in the flashing process of the screen. After selecting the desired functions and it will enter into the preset working condition. Note: When the product enters into the process of preset, the preset

time cannot be readjusted. C.After pressing the "Preset/Timer" key to set the preset time, if any function is not selected, the product will return to its standby mode.

For example: Presetting porridge cooking Press the "Preset/Timer" key, and the default presetting time "02:00" on the screen flashes. At this moment, adjust the presetting time with the "Hour" and "Minute" keys. Then press "Porridge Cooking" key and it will enter into the presetting working condition and the screen displays all the preset time. After the preset time is over, it will enter into the porridge cooking working condition. After the completion of porridge

The calculation method of presetting the porridge cooking time: the time shown on the screen indicates that after the presetting Timer is over, the electric stewpot will begin to boil the porridge, and then it will not turn to Warm until it continues working for 45 to 80 minutes.

For example: If you want to have porridge the next morning at 7:00, you can put right amount of rice and water in the pot at "22:00" tonight, and then press the "Preset/Timer" key and the keys of "Hour" and "Minute" to set the presetting time "07:30". Next, press the "Porridge Cooking" key to select the "Porridge Cooking" function. After the preset time of "5:30" next morning is over, it will enter the porridge cooking working

the stewing time, you need to press the "Preset/Timer" key. At this moment, the "Timer" indicator flashes on, and the desired time can be adjusted through the "Hour" and "Minute" keys. 6 seconds later, the indicators of Nutrition Soup and Timer indicators become constantly on, which indicates that it has entered into timed "Nutrition Soup" working condition. After the stewing time is over, it will automatically enter into the Warm state, and at this time the indicator is on.

2) "Slow Stew" key: Press "Slow Stew" key. The functions of Double Stew Soup, Multi Grain Porridge, BB porridge, Desserts, standby mode will be selected in sequence. The responding screen displays the default stewing time: Double Stew Soup: 04:00, Multi Grain Porridge: 03:00, BB porridge: --:-, Desserts: 02:30, Standby: 00: 00. After selecting the function, press the "Preset/Timer" key, the "Timer" indicator flashes on, and the cooking time can be adjusted through the "Hour" and "Minute"

(Note: BB porridge is under automatic intelligent control, and time is not adjustable.)

For example: Double Stew Soup Press the "Slow Stew" key once, the "Double Stew Soup" indicator flashes on, and the screen displays the default stewing time (04:00). To change the stewing time, you need to press the "Preset/Timer" key. At this moment, the "Timer" indicator flashes on, and the desired time can be adjusted through the "Hour" and "Minute" keys. After 6 seconds, the indicators of Double Stew Soup and Timer indicators become constantly on, which indicates that it has entered into timed "Double Stew Soup" working condition. After the stewing time is over, it will automatically enter into the Warm state, and at this time the indicator is on.

3)"Porridge Cooking" key: Press the "Porridge Cooking" key, and the "Porridge Cooking" indicator flashes on. After 6 seconds, the corresponding indicator turns to be constantly on, indicating that it has entered into the state of "Porridge Cooking". After the process of porridge cooking is over, it will automatically enter into the Warm state, and at this time the indicator is on.

4)"Instant soup" key: Press the "Instant soup" key. At this moment, the "Instant soup" indicator flashes on, and the screen displays the default stewing time (01:30). To change the stewing time, you need to press the "Preset/Timer" key. At this moment, the "Timer" indicator flashes on, and the desired time can be adjusted through the "Hour" and "Minute" keys. After 6 seconds, the indicators of "Instant soup" and timer indicators become constantly on, which indicates that it has entered into timed "Instant soup" working condition. After the stewing time is over, it will automatically enter into the Warm state, and at this time the indicator

5) "Warm/Cancel" key: "Warm" Function: Press the "Warm/Cancel" key. At this moment, the "Warm" indicator flashes on, and the screen displays the default Warm time (--: --), and press the key again to turn to standby state. After

34. Always attach plug to product first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall

36.CAUTION - Risk of Electric Shock. Cook only in removable container. 37. Short power-supply cord instruction: a) A short power-supply cord is provided to reduce the riskresulting from

35.Do not use product for other than intended use.

becoming entangled in or tripping over a longer cord. b) Extension cords are available and may be used ifcare is exercised in

their use. c) If extension cord is used:

1)The marked electrical rating of the extension cord should be at least asgreat as the electrical rating of the appliance;

2) The cord should be arranged so that it will not drape over the countertop or tabletopwhere it can be pulled on by children or tripped over uninten--tionally; and

3)Extension cord should be agrounding-type 3-wire cord. Save these instructions.

## II.Product Features

. Multifunctional control panel of fast and slow stewing. 2. Selecting high-quality inner pot to cook the foods more nutritious and

healthier; 3. 24-hour Timer/Preset setting.

4. Equipped with floating heating control technology to cook the soup and

porridge more delicious; 5. Fast stewing function enables you to enjoy delicious soup at any time.

6. Multiple functions of cooking porridge and stewing soup to save your precious kitchen space.

### III. Technical specifications Product Electric Cooker name DGD40-40CWD DGD40-40SWD DGD50-50CWD DGD50-50SWD Power 120V ~ 60Hz

Rated 500W 600W power Rated 5.0L Capacity 311mm×272mm×300mm 324mm×289mm×323mm 五、使用方法

1.按鍵使用介紹 等依次迴圈。相應顯示幕顯示預設燉煮時間:營養湯: 02:30,排骨湯 02:00, 雞鴨湯:03:00, 燉肉:03:00, 待機狀態:00:00。選擇功能 後,按"預約/定時"鍵,"定時"指示燈閃亮,可通過"小時","分鐘" 鍵調整烹飪時間。

養湯、定時指示燈變為恒亮,表示已經進入定時"營養湯"工作狀態。燉煮 時間結束後,將自動進入保溫狀態,這時保溫指示燈亮。

依次迴圈。相應顯示幕顯示預設燉煮時間:老火湯: 04:00,雜糧粥 03:00, BB粥:--:-, 甜品:02:30, 待機狀態:00:00。選擇功能後 按"預約/定時"鍵, "定時"指示燈閃亮,可通過"小時", "分鐘"鍵調 整烹飪時間。 注:BB粥為自動智慧控制,時間不可調。

如需更改燉煮時間,需按動"預約/定時"鍵,此時,"定時 "指示燈閃亮,可通過"小時"、"分鐘"鍵,調整所需時間。6秒後,老 火湯、定時指示燈變為恒亮,表示已經進入定時"老火湯"工作狀態。燉煮 時間結束後,將自動進入保溫狀態,這時保溫指示燈亮。 3) 煮粥"鍵:按動"煮粥"鍵。"煮粥"指示燈閃亮。6秒後,相應指示燈變

為恒亮,表示已經進入"煮粥"狀態。煮粥過程完成後,將自動進入保溫狀 態,這時保溫指示燈亮。

4) "快速湯"鍵:按動"快速湯"鍵。這時,"快速湯"指示燈閃亮,顯示幕 顯示預設燉煮時間(01:30),如需更改燉煮時間,則通過按動"預約/定 時"鍵,此時,"定時"指示燈閃亮,可通過"小時"、"分鐘"鍵,調整 所需時間。6秒後,快速湯、定時指示燈變為恒亮,表示已經進入定時"快 速湯"工作狀態。燉煮時間結束後,將自動進入保溫狀態,這時保溫指示燈

5) 保溫/取消"鍵 "保溫"功能:按動"保溫/取消"鍵。這時 , "保溫"指示燈閃亮。顯示幕 需設置保溫時間,則通過按動"預約/定時"鍵,此時,"定時"指示燈閃 亮,可通過"小時"、"分鐘"鍵,調整所需時間。6秒後,保溫、定時指 示燈變為恒亮,表示已經進入定時保溫工作狀態。保溫時間結束後,將自動 進入待機狀態。(若需無限時保溫,則無需設置時間)。6秒後,相應指示燈 變為恒亮,表示已經進入保溫狀態。 "取消"功能:燉煮過程如需停止工作,只需按動"保溫/取消"鍵一下即 可,這時,相應的指示燈熄滅,產品停止加熱並回到待機狀態。

6) "預約/定時" 鍵 A. 按 "預約/定時" " 鍵,顯示幕顯示預設預約時間 "02:00" 並閃動。

序號	功能	默認時間	可調整定時時間	轉保溫時間	可調整預約 時間
1	營養湯	02:30			
2	排骨湯	02:00			
3	雞鴨湯	03:00	00 00 22 55	按設定時間	
4	燉肉	03:00	00 : 00~23:55		
5	老火湯	04:00			00:00~ 23:55
6	雜糧粥	03:00	]		無預約功能
7	BB粥	:	時間不可調	約100分鐘~120分鐘	
8	甜品	02:30	00:00~23:55	按設定時間	]
9	煮粥	:	時間不可調	約45分鐘~80分鐘	]
10	快速湯	01:30	00:00~23:55	按設定時間	1
11	保溫	默認無限時	00 : 00~23:55		1

# 六、保養及維護

1.清洗方法 1) 产品清洗前应先拔掉电源线,待冷却后再进行清洗。

2) 切勿将电源线、产品整体浸入水中或冲洗,以免电器进水,产生故障,影响 安全使用。

3) 可用湿毛巾擦拭机体外表面,切勿使用腐蚀性液体进行清洗。 4) 陶瓷件可用洗洁精和海绵清洗,请勿使用硬质钢丝清洗,以免损坏表面。

2.保存方法

ī, l	"品长期不使用时,请 以免受潮,影响使用。 章及排除		箱中,应存放于通风干燥的地	
閉號	故障現象	故障原因	排除方法	
1	不洛爾	電源線插頭沒插好	檢查電源線插頭是否插緊到位	
1	不通電	產品故障	請送指定維修點檢修	
2	顯示 E1 或 E2	產品故障	請送指定維修點檢修	
3	顯示 E3	内鍋内無水幹燒	等陶瓷内鍋冷卻後,加入水和食物後再 進行燉煮。	
		產品故障	請送指定維修點檢修	

4.非专业人员切勿拆卸、修理本产品。 5.如果电源软线损坏,必须用专用软线或从我司供销商或维修部买到的专用组件 来更换。

6.当产品出现故障且无法排除时,切勿自行维修,请与我司设立在当地的特约维 修网点或本公司客户服务部联系解决。 7.内胆及盖子为易碎品,不在保修服务范围,请小心使用。

8.如产品有任何使用问题,请送往有授权的服务点。 9.本产品仅供家庭使用。

注:當產品進入預約過程後,預約時間不可重新進行調整。 C. 按"預約/定時"鍵設定預約時間後,若無選擇功能,產品將回到待機狀態。 例如:預約煮粥 按動"預約/定時"鍵顯示幕默認預約時間"02:00"閃動,此時,通過"小 "分鐘"鍵調整預約時間,再按"煮粥"鍵,進入煮粥預約工作狀 顯示幕顯示所預約的時間,預約時間結束後,進入煮粥工作狀態,煮粥

B. 按 "預約/定時" 鍵後, 在顯示幕閃動過程, 可通過 "小時", "分鐘" 鍵調整 預 約 時 間 。 再 選 擇 所 需 功 能 後 進 入 預 約 工 作 狀 態 。

完成後轉入保溫工作狀態。 預約煮粥時間計算方法:顯示幕所顯示的時間表示在該預約時間計時結束後 電燉鍋開始煮粥,再工作45~80分鐘後才轉入保溫 例如:如果想在明天早上7時喝粥,你可以在今天晚上"22:00"下好適量的 米與水,並按動"預約/定時"鍵,按動"小時","分鐘"鍵設定預約時間 "07:30"。再按"煮粥"键,選擇煮粥功能,明天早上"5:30"預約時間

結束後進入煮粥狀態,並大約在 "6:30" 粥就可煮熟並轉入保溫,到7時您

就可以喝到熱氣騰騰的米粥了。 (注:易變質的食物,請儘量不要設定長時間預約,否則可能產生異味) 如需調整烹飪時間,先按"預約/定時"鍵,"定時"指示燈、顯示幕同時閃 ,可通過"小時","分鐘"鍵調整烹飪時間,按動"小時"鍵顯 示幕小時位以"1"為單位遞增,按動"分鐘"鍵顯示幕分鐘位以"5"為單

2).陶瓷内鍋内壁刻度線(L/CUP)使用說明:建議按下表配比加米、水,另也

可恨據個人喜好,週富加減水重。						
米量水位功能	1.0CUP	1.5CUP	2.0CUP	2.5CUP	3.0CUP	備註
煮粥	1量杯	1.5量杯	2量杯	2.5量杯	3量杯	
D D 3\b/2	0.5量杯	1量杯	1.5量杯			DGD40-40CWD DGD40-40SWD
BB粥	0.5量杯	1量杯	1.5量杯			DGD50-50CWD DGD50-50SWD
3) 將要者的食物或米洗淨後放入內鍋內, 並加入適量的水, 再把內鍋外側的水						

溫馨提示:燉煮食物或煮粥時,食物對水或米對水的比例不能過高,請加入 足夠的水量,否則容易造成煮幹、燒糊等現象。

4)接通電源,此時顯示幕顯示"00:00",證明電燉鍋正處於待機狀態(本產 品外殼已接安全地線,須把電源插頭插進有安全接地裝置的電源插座)。這 時,可按個人需要開始選擇功能下達工作指令。

3.各功能默認定時時間及可調整時間範圍

珠擦拭乾淨後放入鍋體內,蓋上陶瓷內鍋蓋。

位遞增,長按則快速遞增。

Contents I. Important Safeguards-----7 II. Product Features-----9 III.Technical specifications -----9

# I.Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

IV. Parts ------10

V. How to use------10

VI. Maintenance and repair ------14

1.READ ALL INSTRUCTIONS

2.AC power voltage should be in accordance with the voltage indicated on the nameplate.

3. For your safety, use the power source with ground protection. 4.Do not place the machine near or at the surfaces of the items that are flammable and explosive; do not put the machine at the places that are

wet or near other heat sources to avoid failures and danger. 5. When using this product, it should be placed at a solid platform out of children's reach and close supervision is necessary when this product is used by or near children. 6. When the product is at work, it will produce steam, do not let the face or

hands near the steam vent to avoid scalding; the items that could be harmed by steam should not be put over the product; do not use the rag or similar items to cover the steam vents so as to avoid accidents and product failure.

7. When the product is in use or after use for a while, its upper lid and outer shell are very hot, so do not touch them in case of getting a burn. Use handles or knobs. 8. The inner pot can only be heated inside this product, and do not directly

place it on an open flame or put it on other heating stoves for heating. 9. Never add cold water into the inner pot in the heating process, and do not immediately put the inner pot or its cap into water when the stewing is just over, in case they will crack due to shock cooling and shock heating. 10. When there is no stew food pot inside the inner pot, be sure not to switch the power on to burn dry. Pull out the power plug when not in use.

11. If dry burn occurs when the product is in use, please switch the power off immediately, and make the product keep natural cooling. In the cooling process, you cannot add water into the inner pot or move it out of the pot body; otherwise, it will cause damage to the ceramic inner pot. 12. The water amount added should be between the minimum and maximum

malfunction and danger

IV. Parts 1. Main Components Inner pot lid Steam valve -Inner pot Heat insulator-Handle — -Control panel Housing-— Bottom base 2. Control Panel 預約 Preset BB BB Timer ● 甜品

# V. How to use

1. Introduction of Keys

1)"Fast Stew" key: Press the "Fast Stew" key, and the functions of Nutrition Soup, Rib Soup, Chicken Soup, Meat Soup, standby mode will be selected in sequence. The responding screen displays the default stewing time: Nutrition Soup: 02:30, Rib Soup: 02:00, Chicken Soup: 03:00, Meat Soup: 03:00, standby: 00: 00. After selecting the function, press the "Preset/Timer" key, the "Timer" indicator flashes on, and the cooking time can be adjusted through the "Hour" and "Minute" keys.

For example: Nutrition Soup Press the "Fast Stew" key once, the "Nutrition Soup" indicator light flashes on, and the screen displays the default stewing time (02:30). To change

13. When plug in the power cord you must fully insert it in to ensure the good contact. 14. The power plug and socket should be kept dry and it is prohibited that inserting and pull the power plug with wet hands to prevent from electric

15.Do not move the product when it is power on and in use. 16. When the product is power on and in use, its inside may emit a slight sound of "tock, tock", which is the sound of the heat adjustment in the appliance and it does not affect the normal operation.

17.Press the "Warm/Cancel" key when in working condition, and the product will return to standby state, i.e., the screen displays "00:00". 18. If the power is off halfway, the product will return to the standby state, and it needs to be re-set to continue the operation.

19. Adding boiling water to cook porridge cannot shorten the cooking time, but will only make the rice porridge over-cooked, so please be careful. 20. When the product is used for the first time, the heating elements may give out a slight odor; besides, the screen may flash when it is just switched on, so please pull out the plug to switch it on again; these two

phenomena are normal, so please rest assured when using it. 21.Please keep the sensors and the surface of the aluminum pot clean and smooth, or the effect of using the product will be affected. 22. The inner pot and its lid are breakable parts, so prevent them from

colliding with hard objects and falling down from a height, causing breaking damage. 23. When stewing porridge or other food, the proportion of food to water cannot be too high, or boiling dry and burn dry will occur, which will affect the service life of the ceramic inner pot under serious damage

24. Extreme caution must be used when moving an appliance containing hot 25.WARNING: Spilled food can cause serious burns. Keep appliance and

cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord. 26. To protect against electrical shock do not immerse cord, plugs, or main body of this product in water or other liquid. 27. Unplug from outlet when not in use and before cleaning. Allow to cool

before putting on or taking off parts. 28.Do not operate this product with a damaged cord or plug or after the product malfunctions or has been damaged in any manner. Return product to the nearest authorized service facility for examination, repair, or

29. The use of accessory attachments not recommended by the product manufacturer may cause injuries. 30.Do not use outdoors. 31.Do not let cord hang over edge of table or counter, or touch hot surfaces.

33.Extreme caution must be used when moving this product containing hot liquids.

water levels. Too little or too much water addition may both lead to

32. Do not place on or near a hot gas or electric burner, or in a heated oven.