版本：CORELDRAW X6
日期：2023.02.13
编号：DDZ-16BW（蒸炖）·美国熊猫惠·01·MG-03F
材质：100g亚太纸
尺寸：142mm×210mm

3.Failure and trouble shooting

| No. | Failure phenomenon | Failure causes | Troubleshooting methods |
|---|---|---|---|
| ① | Power failure | The power line is not fully plugged in. | Check whether the power line is properly plugged in place. |
| | | The water in the stew-cup container is boiled dry, resulting in the operation of dry-burn thermostat. | Please add water into the stew-cup container and have it cool down before turning on the power. |
| | | Product failure. | Send to maintenance center for troubleshooting. |
| ② | Soon after the product enters into the heating state, sudden power failure occurs and the there is no display on the screen. | No water added into the stew-cup container | Please add right amount of water into the stew-cup container. |
| | | When using one (or two) small inner pot(s) to stew food, you fail to put the base plate into the stew-cup container first. | You should put the base plate into the stew-cup container before putting one (or two) small inner pot(s) on the base plate. |
| ③ | The power is switched on but the heating fails. | Product failure. | Send to maintenance center for troubleshooting. |
| ④ | "E1" or "E2" are displayed | Product failure. | Send to maintenance center for troubleshooting. |

4. Non-professionals should not remove and repair this product.
5. If the power line is damaged, it must be replaced by the professional staff in the maintenance department or similar department of our company in order to avoid danger.
6. When the product fails and the trouble can not be ruled out, do not repair by yourself, please contact the local special repair service network set up by our company or contact our customer service department to solve it.
7. The ceramic parts are breakable parts, which are not included in the scope of quality warranty, so please use with care.

更多食谱，请扫-扫　　更多厨电，扫一扫进入店铺

Manufacturer: SHANTOU TONZE ELECTRIC APPLIANCE INDUSTRIAL CO.,LTD
Imported by: Pandabrands Inc.
Email: business@ pandabrands.com
Customer Service: service@ pandabrands.com

天际 TIANJI

# 微电脑隔水电炖盅
## Smart Twin Ceramic Pot Electric Stewpot
# 使用说明书
## Operation Instruction

型号：DDZ-16BW/ DDZ-16BWS
Model：DDZ-16BW/ DDZ-16BWS

图案有偏差时，以实物为准
使用产品前，请仔细阅读本使用说明书。
请妥善保管本使用说明书
The pictures are for reference only, subject to our available products.
Please read this manual carefully before using the product.
Please keep this manual handy for further reference.

感谢您选用天际微电脑隔水炖盅。
**使用时，请按本说明书进行操作，本产品仅限家庭或类似场所使用。**
Thank you for purchasing Tonze Smart Twin Ceramic Pot Electric Stewpot. Please operate it according to this instruction; do not use the appliance for other than its intended use.

❶

## 目录

一.注意事项----------1
二.产品性能特点 ----------1
三.主要技术参数 ----------2
四.部件名称介绍----------2
五.使用方法 ----------2
六.保养和维护 ----------6

## 一、注意事项

使用电器时，应遵循以下安全防范措施：

1. 请阅读所有的使用说明。
2.请使用与铭牌所标电压值一致的交流电源。
3.请使用有合格保护接地的电源，以确保人身安全。
4.不要接触发热的表面。使用提手或把手。
5.为防止电击，不要把电线，插头或电器浸入水中或其他液体。
6.使用本产品时应放置在儿童接触不到的稳固平台上。
7.产品工作时会冒出蒸汽，切勿将脸或手靠近蒸汽口，以免烫伤；怕蒸汽的物体不要置于本产品上方；切勿将抹布或类似物品覆盖在蒸汽口上，以避免引发意外或导致产品故障。
8.产品工作时，玻璃盖和不锈钢炖盅容器温度较高，请勿触摸，以免烫伤。
9.不要将内胆直接放在明火上加热，并避免陶瓷件在较热时接触冷水，以免发生爆裂。
10.若产品出现缺水干烧，请立即拔掉电源，等待冷却后再操作，此时切勿用手触摸发热盘以免烫伤。
11.炖盅容器加水为放置大内锅或小内锅后水位，加水量不能超过"•（MAX）"水位线，否则可能会出现故障或造成危险。
12.在炖盅容器内未加入水时，切勿通电干烧，不用时请拔下电源插头。
13.插入电源线时，必须插到底，以确保接触良好。
14. 不要让电源线挂在桌子或柜台边，或接触热的表面。
15.应经常保持电源插头、插座的干燥，禁止用湿手插拔电源插头，以防止触电。
16.应使用短电源线(或可拆卸的电源线)，以减少被长电源线缠绕或绊倒的风险。
短的电源线用作减少被儿童抓住的危险，或被长线缠住或绊倒。
如果使用较长的可拆卸电源线或延长线:
1)电源线组或延长线所标示的额定值应至少与器具的额定值相等;
2)电源线的摆放应避免悬垂在工作台面或桌面，以免被孩子拉到或无意中绊倒。
17.总是先将插头插入设备，然后将插头插入插座。要断电时，先将开关转为"关闭"，然后从墙上插座上拔下插头。
18.产品在通电工作时，请勿移动。
19.陶瓷件均为易碎品，慎防与硬物碰撞及从高处跌落，造成破碎损坏。
20.当使用电器时或有接近小孩时，必须严密监视。
21.当不使用或清洁前，请从插座上拔下插头。在放上或取下之前，允许冷却。
22.在任何方式下，都不要在有损坏的电线或插头或设备故障或已损坏的情况下使用电器。请送到最近的授权维修点进行检查、维修或替换。
23.如果使用不是电器生产商推荐的配件可能会引发受伤。
24.请勿在户外使用
25.不要放置在接近热源、电热炉或加热炉，以免发生故障和危险。
26.移动电器带有热液体时，必须严加注意。
27.不要把电器当作他用。
28.仅用于台面使用。
29.警告：溢出食物会引发严重的烫伤。电器和电源线需远离儿童，不要将电源线悬挂在台面边缘及在台面下使用插座，不要使用延长线。

❹

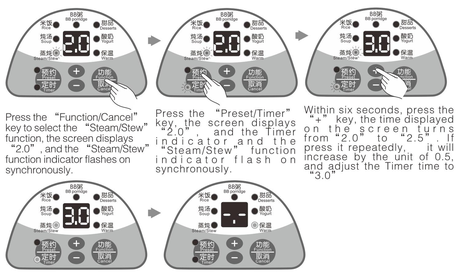

Press the "Function/Cancel" key to select the "Steam/Stew" function, the screen displays "2.0", and the "Steam/Stew" function indicator flashes on synchronously.

Press the "Preset/Timer" key, the screen displays "2.0" and the Timer indicator and the "Steam/Stew" function indicator flash on synchronously.

Within six seconds, press the "+" key, the time displayed on the screen turns from "2.0" to "2.5". If press it repeatedly, it will increase by the unit of 0.5, and adjust the Timer time to "3.0"

After a few seconds, it automatically enters into the Timer working state, the screen displays "3.0", the Timer indicator and the "Steam/Stew" function indicator turns to be constantly on, the ":" in the middle flashes on and starts to count down.

After the Timer time is over, it enters into the "Warm" working state. The "Steam/Stew" function indicator is off, the screen displays "-.-", the "Warm" function indicator turns to be constant on, the ":" in the middle flashes on and "-.-" is the unlimited "Warm".

Tips:
1. The maximum adjustable Preset time is 24 hours, and the maximum adjustable Timer time of the stewing function is 12 hours.
2. When starting the countdown and time> 10, the digits displayed on the nixie tube decrease by the unit of one hour. When the time ≤10, the digits displayed on the nixie tube decrease by the unit of 0.1 hour (six minutes).

Stop working.

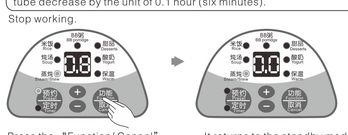

Press the "Function/ Cancel" key in the process of operation.

It returns to the standby mode immediately.

Tips:
1.Set appropriate reserved time according to the characteristics of food materials and life experience to fully immerse the food materials in water. The time set for those easy-deteriorating food shall not be too long to prevent deterioration.
2.When stewing or steaming the food not easy to cook, or at low temperatures, please properly cook with more time to make sure that the food is fully cooked based on

❸

**请保存此使用说明书**

## 二、产品性能特点

1.小巧玲珑、质地温润的双胞胎小陶瓷内锅，另加一大陶瓷内锅，可同时炖煮不同炖品，不用分次炖煮，给您一家大小带来无微不至的关怀。
2.产品搭配立体式高架大容量蒸笼，让您可同时完成"蒸"、"炖"两种健康美味，蒸笼采用高级无毒健康的PC材质制作，一件成型，清洗方便，使用卫生，健康。
3.采用微电脑智能控制程序，搭配多款专业炖煮功能，满足您使用上的多种需求，且包含"酸奶"制作功能，一机多用，乐享随心。
4.利用沸水100℃的营养临界温度，均匀、柔和地对陶瓷内锅中的食物进行炖煮，使食物均匀释放营养精华而不粘不焦，全面保存美食营养原味；不粘不焦的特性，特别适合炖煮、加热胶质类与珍贵滋补类食品。
5.产品具有多重防干烧安全保护功能，水干自动断电，漏电安全保护，全方位保障您的使用安全，值得信赖。

## 三、主要技术参数

| 名称 | 型号 | 容量 | | 电 源 |
|---|---|---|---|---|
| 微电脑电炖盅 | DDZ-16BWS | 大内锅 | 小内锅 | 120V~60Hz |
| | | 1.6L | 0.6L×2 | |
| 额定功率 | 外形尺寸（长×宽×高） | | | |
| 300W | 305mm×185mm×280mm | | | |

## 四、部件名称介绍

## 五、使用方法

操作面板及按键说明：

❷

1.“功能/取消”键：
①待机或设置状态下，按动“功能/取消”键，功能指示灯显示顺序如下：待机→蒸炖→炖汤→米饭→BB粥→甜品→酸奶→保温(--)→待机，如此循环。
②在任何工作过程中，按动“功能/取消”键，该键起“取消”作用，产品回到待机状态。
2.“预约/定时”键：
①待机状态下，按“预约/定时”键，预约指示灯闪亮，显示屏显示默认时间“2.0”也闪亮，闪亮时限为6秒，6秒内每按一次“预约/定时”键，闪亮时限顺延；“2.0”闪亮时，可以通过按“+”和“-”键调整预约时间.
②按“功能/取消”键后，6秒内再按“预约/定时”键，定时指示灯闪亮，功能指示灯和显示屏显示的功能默认时间也都闪亮，可以通过按“+”和“-”键调整定时时间。
③定时工作过程中，再按“预约/定时”键，功能指示灯恒亮，定时指示灯和显示屏显示时间都闪亮，也可以通过按“+”和“-”键调整定时时间。
3.“+”键：按“预约/定时”键后，再按动“+”键，显示屏显示的默认时间以0.5为增量递增。至“10”之后，则以1为增量递增。预约时间可调至“24”，即24小时，定时时间可调至“12”，即12小时，此时再按则回到“0.0”。继续再按，则仍以0.5为增量递增，至“10”后再以1为增量递增，如此循环。长按该键，则快速递增，循环规律与短按相同。

4.“-”键：按“预约/定时”键后，再按动“-”键，显示屏显示的时间以0.5为减量递减，直至“0.0”。此时再按，预约时间设置时变为“24”，定时时间设置时变为“12”。此后再按，则以1为减量递减。调至“10”后，则以0.5为减量递减，直至“0.0”，如此循环。长按该键，则快速递减，循环规律与短按相同。

2.产品功能设置表：

| 功能 | 蒸炖 | 炖汤 | 米饭 | BB粥 | 甜品 | 酸奶 | 保温 |
|---|---|---|---|---|---|---|---|
| 默认时间(小时) | 2.0 | 2.8 | 2.0 | 2.5 | 3.0 | 9.0 | -.- |
| 是否预约 | 是 | 是 | 是 | 是 | 是 | 否 | 是 |

3.使用步骤
隔水炖的工作原理：是一种利用水做媒介，对内锅中的食物进行均匀柔和地加热的烹饪方法。故隔水炖锅（或炖盅）的加热容器内必须加入水才可以正常使用。

1.使用隔水炖煮时
①准备：将内锅、内锅盖清洗干净，将需要清洗的食材清洗干净。
②放入食材：
a.炖汤、甜品功能：以水恰好浸没食物或略多一点为宜，加入食材和水不超过内锅容量的80%
b.米饭、BB粥功能：

| 功能 | 容 器 | 米和水的配比（用本机配送的量杯测量） |
|---|---|---|
| 米饭 | 大内锅 | (2杯米+125刻度线米)+(2杯水+125刻度线水) |
| | 小内锅 | 1杯米+1杯水 |
| 粥 | 大内锅 | 125刻度线米+（5杯水+100刻度线水） |
| | 小内锅 | 45刻度线米+（2杯水+ 50刻度线水） |

量米方法：请用本机配送的量杯量米，杯米的正确与错误量法如下图所示：

❸

Press the "Preset/Timer" key, the screen displays the default Preset time of "2.0", and the Preset indicator flashes on synchronously.

"3.5" Within six seconds, press the "+" key, it will increase by the unit of 0.5, and adjust the Preset time to "3.5".

Within 6 seconds, press the "Function/Cancel" key to select the "Steaming and Stew" function, the Preset indicator is constantly on, the screen displays "2.0" and the "Steaming and Stew" function indicator flashes on at the same time.

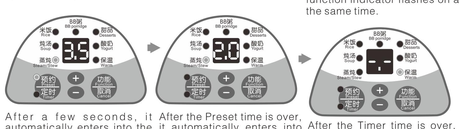

After a few seconds, it automatically enters into the Preset working state, the screen displays "3.5", the Preset indicator and the "Steam/Stew" function indicator turns to be constantly on, the ":" in the middle flashes on and starts to count down.

After the Preset time is over, it automatically enters into the "Steam/Stew" working state. The Preset indicator is off, the screen displays "2.0", the "Steam/Stew" function indicator is constant on, the ":" in the middle flashes on and starts to count down.

After the Timer time is over, it enters into the "Warm" state, the "Steam/Stew" function indicator is off, the screen displays "-.-", the "Warm" function indicator turns to be constant on, the ":" in the middle flashes on, and "-.-" is the unlimited "Warm".

Tips:
1.After pressing the "Preset/Timer" key, if you press the "Function/Cancel" key after the Preset indicator flashes on, it can enters into the Preset working state. If you press the "Function/ Cancel" key first, and then press the "Preset/Timer" key, then you cannot perform the operations of Preset.
2.Under the condition of Preset work state, the time cannot be adjusted;

2.Timed stewing setting and the operation description (taking it as an example: setting 3-hour Timer of the "Steam/Stew" function and entering into the "Warm" function after the stewing is completed)
Timed stewing setting and the operation description (taking it as an example: setting 3-hour Timer of the "Steam/Stew" function and entering into the "Warm" function after the stewing is completed)

⓬

Correct:　　Wrong:

c.Yogurt Function (1L pure milk with 1g yogurt starter):

③Adding water into the container:
At first, put the inner container with the prepared food materials into the container, then add water into the container to the position of "●MAX"; and finally put on the upper lid.

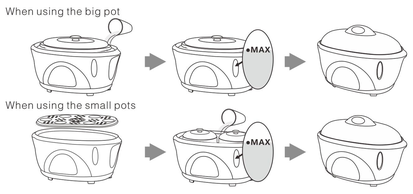


Tips:
Whether using one or two small inner pots to stew foods, you must first put the metal base plate flatwise into the stew-cup container, and then put the small inner pot on the base plate to perform the stewing. When you use the large inner pot to stew foods, you do not need to place the metal base plate, and you can directly put the large inner pot inside the stew-cup container.

2.When using "Steam/Stew" Function:

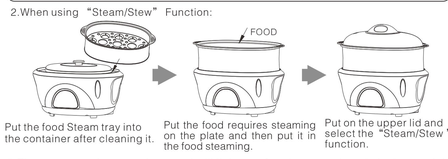


Put the food Steam tray into the container after cleaning it.

Put the food requires steaming on the plate and then put it in the food steaming.

Put on the upper lid and select the "Steam/Stew" function.

3.The screen on the operation panel will light up after the power is switched on and the cooker is in the state of standby. You can operate it according to the follow-up function selection, keys operation and instructions of modes.



Standby Mode: All indicators are off, and the screen displays "0:00", without power heating.

⓫

温馨提示：
1.预约时间最长可调整为24小时，功能炖煮定时时间最长可调整为12小时。
2.开始倒计时，时间＞10时，数码管显示时间数字每1小时递减变化，时间≤10时，数码管显示时间数字每0.1小时（6分钟）速减变化。

中止工作.

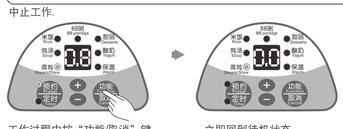

工作过程中按"功能/取消"键。　　立即回到待机状态。

温馨提示：
1.请根据各种食材的特性，按生活经验设定合适的预约时间，以使食材充分浸泡。浸泡易变质食材，预约时间不宜设置过长，以防止食材变质。
2.在炖煮或蒸不易熟的食物时，或在低温环境下，请在默认定时时间的基础上，适当加长时间，为确保食物熟透，在蒸大块的红薯、马铃薯等食物时，请将其切成小块，以保证食物熟透。
3.在工作过程中可以依您个人喜好调整工作时间，使食物达到最佳的口感。
4.请加水到炖盅容器上的透明窗口"•（MAX）"水标，以保证正常炖煮，防止出现产品故障或造成危险。
5.产品炖煮过程若要打开上盖，请先按"功能/取消"键停止工作，待水不再沸腾时再开盖，以防止锅内沸水溅出烫伤。
6.“酸奶”功能和“保温”定时功能，工作时间结束后，产品直接进入待机状态。
7.当产品进入保温状态后，为无限时保温，这时显示为"-.-"。若需停止保温，请按"功能/取消"键即可。
8.制作酸奶前，请将内锅用开水冲烫消毒后再使用。“酸奶”功能工作结束后，将直接进入待机状态。
9.酸奶制作完成后，应呈乳白色或淡黄色、凝结细腻、无气泡、有香味。若凝结不整齐、有气泡及霉味，表示有杂菌污染，则不宜食用。刚制作完成的酸奶可调味后食用，如若不立即食用，请将酸奶放入冰箱冷藏钝化后调味食用，口感更佳。

## 六、保养和维护

1.清洗方法
①产品清洗前应先拔掉电源线，待冷却后再进行清洗。
②陶瓷件可用洗洁精和海绵清洗，请勿使用硬质钢丝清洗，以免损坏表面。
③可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。
④发热盘积水垢的清除方法：容器内放入1～2汤匙白醋或3～5片柠檬，并加水至覆盖发热盘表面，通电加热至水沸腾约2分钟，断电冷却至温水，然后用百洁布擦洗即可将水垢清除。
⑤切勿将电源线、产品整机浸入水中或冲洗，以免电器进水，产生故障，影响安全使用。

2.保存方法
产品长期不使用时，请清洁干净后，装入包装箱中，应存放于通风干燥的地方，以免受潮，影响使用。

3.故障及排除

| 序号 | 故障现象 | 故障原因 | 排除方法 |
|---|---|---|---|
| ① | 不通电 | 没有插紧电源线 | 检查电源线插头是否插紧到位 |
| | | 炖盅容器内水煮干，造成干烧温控器动作 | 请往炖盅容器内加水冷却后再通电 |
| | | 产品故障 | 请送指定维修点检修 |

❻

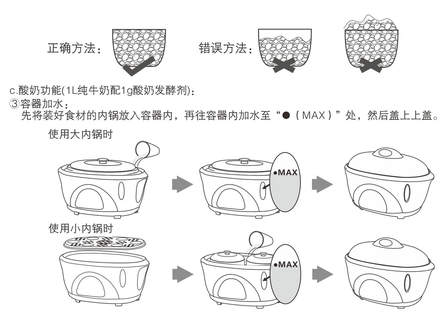

c.酸奶功能(1L纯牛奶配1g酸奶发酵剂)：
③容器加水：
先将装好食材的内锅放入容器内，再往容器内加水至"●（MAX）"处，然后盖上上盖。




温馨提示：
无论使用一个或两个小内锅炖煮食物时，都必须先将金属垫板平放于炖盅容器内，再将小内锅放置于该垫板上进行炖煮。而使用大内锅进行炖煮食物时，无需放置金属垫板，将大内锅直接放于炖盅容器内即可。

2.使用"蒸炖"功能时

将蒸笼清洗干净后放在容器上面内　　将需要蒸的食物置于盘具后放入在蒸笼中　　盖好上盖，选择好"蒸炖"功能

3.接通电源，操作面板上显示屏点亮，处于待机状态。可以按后续"功能选择、按键操作方法及状态说明"进行操作。

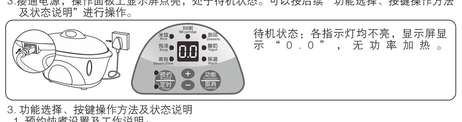

待机状态；各指示灯均不亮，显示屏显示"0.0"，无功率加热。

3. 功能选择、按键操作方法及状态说明
1. 预约炖煮设置及工作说明：
（以"蒸炖"功能预约3.5小时，定时按默认时间为例）：

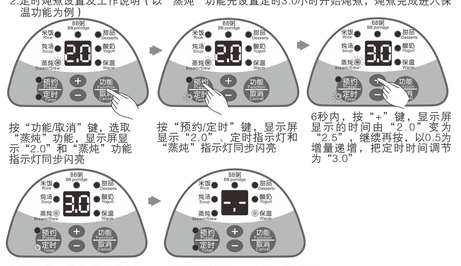

按"功能/取消"键，选取"蒸炖"功能，显示屏显示"2.0"和"蒸炖"功能指示灯同步闪亮

按"预约/定时"键，显示屏显示"2.0"，定时指示灯和"蒸炖"指示灯同步闪亮

6秒内，按"+"键，显示屏显示的时间由"2.0"变为"2.5"，继续再按，以0.5为增量递增，把定时时间调节为"3.0"

几秒钟后，自动进入定时工作状态，显示屏显示"3.0"，定时指示灯和"蒸炖"功能指示灯恒亮，中间":"闪亮，并开始倒计时

定时时间结束后，进入保温状态，"蒸炖"功能指示灯灭，显示屏显示"-.-"为无限时保温

❹

温馨提示：
1.先按"预约/定时"键，预约指示灯闪亮后必须再按"功能/取消"键选择功能，才能进入预约工作状态；如果先按"功能/取消"键后再按"预约/定时"键，则无法进行预约操作。
2.预约工作状态下无法调整时间。

2.定时炖煮设置及工作说明（以"蒸炖"功能先设置定时3.0小时开始炖煮，炖煮完成进入保温功能为例）



按"功能/取消"键，选取"蒸炖"功能，显示屏显示"2.0"和"蒸炖"功能指示灯同步闪亮

按"预约/定时"键，显示屏显示"2.0"，定时指示灯和"蒸炖"指示灯同步闪亮

6秒内，按"+"键，显示屏显示的时间由"2.0"变为"2.5"，继续再按，以0.5为增量递增，把定时时间调节为"3.0"

几秒钟后，自动进入定时工作状态，显示屏显示"3.0"，定时指示灯和"蒸炖"功能指示灯恒亮，中间":"闪亮，并开始倒计时

定时时间结束后，进入保温状态，"蒸炖"功能指示灯灭，显示屏显示"-.-"为无限时保温

❺

3. Description of function options, keys operation and state
1.The preset stewing setting and the operation description
(Taking the "Steam/Stew" function of 3.5 hours and the Timer of default time as an example):



Press the "Preset/Timer" key, the screen displays the default Preset time of "2.0", and the Preset indicator flashes on synchronously.

"3.5" Within six seconds, press the "+" key, it will increase by the unit of 0.5, and adjust the Preset time to "3.5".

Within 6 seconds, press the "Function/Cancel" key to select the "Steaming and Stew" function, the Preset indicator is constantly on, the screen displays "2.0" and the "Steaming and Stew" function indicator flashes on at the same time.



After a few seconds, it automatically enters into the Preset working state, the screen displays "3.5", the Preset indicator and the "Steam/Stew" function indicator turns to be constantly on, the ":" in the middle flashes on and starts to count down.

After the Preset time is over, it automatically enters into the "Steam/Stew" working state. The Preset indicator is off, the screen displays "2.0", the "Steam/Stew" function indicator is constant on, the ":" in the middle flashes on and starts to count down.

After the Timer time is over, it enters into the "Warm" state, the "Steam/Stew" function indicator is off, the screen displays "-.-", the "Warm" function indicator turns to be constant on, the ":" in the middle flashes on, and "-.-" is the unlimited "Warm".

Tips:
1.After pressing the "Preset/Timer" key, if you press the "Function/Cancel" key after the Preset indicator flashes on, it can enters into the Preset working state. If you press the "Function/ Cancel" key first, and then press the "Preset/Timer" key, then you cannot perform the operations of Preset.
2.Under the condition of Preset work state, the time cannot be adjusted;

2.Timed stewing setting and the operation description (taking it as an example: setting 3-hour Timer of the "Steam/Stew" function and entering into the "Warm" function after the stewing is completed)
Timed stewing setting and the operation description (taking it as an example: setting 3-hour Timer of the "Steam/Stew" function and entering into the "Warm" function after the stewing is completed)

⓬

按"预约/定时"键，显示屏显示默认预约时间"2.0"和预约指示灯同步闪亮

6秒内，按"+"键，以0.5为增量递增，将预约时间调节为"3.5"

6秒内，按"功能/取消"键，选取"蒸炖"功能，预约指示灯恒亮，显示屏显示"2.0"和"蒸炖"功能指示灯同时闪亮

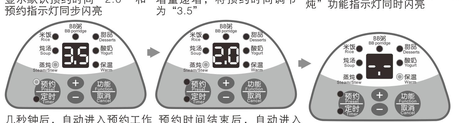

几秒钟后，自动进入预约工作状态，显示屏显示"3.5"，预约指示灯和"蒸炖"功能指示灯转为恒亮，中间":"闪亮，并开始倒计时

预约时间结束后，自动进入"蒸炖"炖煮工作状态。预约指示灯灭，显示屏显示"2.0"和"蒸炖"功能指示灯恒亮，中间":"闪亮，并开始倒计时

定时时间结束后，进入保温状态，"蒸炖"功能指示灯灭，显示屏显示"-.-"和"保温"功能指示灯转为恒亮，中间":"闪亮，"-.-"为无限时保温

温馨提示：
1.先按"预约/定时"键，预约指示灯闪亮后必须再按"功能/取消"键选择功能，才能进入预约工作状态；如果先按"功能/取消"键后再按"预约/定时"键，则无法进行预约操作。
2.预约工作状态下无法调整时间。

2.定时炖煮设置及工作说明（以"蒸炖"功能先设置定时3.0小时开始炖煮，炖煮完成进入保温功能为例）



按"功能/取消"键，选取"蒸炖"功能，显示屏显示"2.0"和"蒸炖"功能指示灯同步闪亮

按"预约/定时"键，显示屏显示"2.0"，定时指示灯和"蒸炖"指示灯同步闪亮

6秒内，按"+"键，显示屏显示的时间由"2.0"变为"2.5"，继续再按，以0.5为增量递增，把定时时间调节为"3.0"

几秒钟后，自动进入定时工作状态，显示屏显示"3.0"，定时指示灯和"蒸炖"功能指示灯恒亮，中间":"闪亮，并开始倒计时

定时时间结束后，进入保温状态，"蒸炖"功能指示灯灭，显示屏显示"-.-"为无限时保温

❺

displayed on the screen will increase by 0.5. After it reaches "10", it will increase by 1. The Preset time can be adjusted to "24", namely, 24 hours, and the Timer can be adjusted to "12", namely, 12 hours. At this moment, if press it again, the time will return to "0.0". If press it again, the time will still increase by 0.5, and will increase by 1 when the time reaches "10", and this course will circulate as such. Press this key for a long while, the time will quickly increase progressively, whose circulation pattern is as same as the short-time press.
4. "-" key: After pressing the "Preset/Timer" key, press the "-" key, the time displayed on the screen will decrease by 0.5 till it reaches "0.0". At this moment, if press it again, the Preset time will change into "24", and the Timer setting will change into "12". If press it again, the time will decrease by 1, and when the time is adjusted to "10", it will decrease by 0.5 till it reaches "0.0" and it will circulate as such. Press this key for a long while, the time will quickly decrease progressively, whose circulation pattern is as same as the short-time press.

2. Function Setting Table of the Product:

| Function | Steam/Stew | Soup | Rice | BB Porridge | Dessert | Yogurt | Warm |
|---|---|---|---|---|---|---|---|
| Default Timer time (Hour) | 2.0 | 2.8 | 2.0 | 2.5 | 3.0 | 9.0 | -.- |
| Preset available or not | YES | YES | YES | YES | YES | NO | YES |

3.Operational Procedures
Working principle of out-of-water stewing: it is a cooking method which takes water as a medium to evenly and gently heat the food inside the inner pot. Therefore, you must add water into the heating container of the stewpot (or Stew Pot) for normal use.
1.When using out-of-water stewing
①Preparation: Clean up the inner pot and the inner pot lid, and then clean up the food materials needs cleaning.
②Putting into the food materials:
a.Functions of stewing soup and desserts: the water level shall be equal to or slightly higher than the food, and the food materials and water added shall not exceed 80% of the inner pot volume.
b.Rice and BB Porridge Functions:

| Function | Container | Rice to water ratio (Measure the ratio with the measuring cup attached) |
|---|---|---|
| Rice | Big inner pot | (2 cup of rice+125 scale marks cup of rice)+ (2 cup of water +125 scale marks cup of water) |
| | Small inner pot | 1 cup of rice +1 cup of water |
| Porridge | Big inner pot | 125 scale marks cup of rice+(5 cups of water+100 scale marks cup of water) |
| | Small inner pot | 45 scale marks cup of rice+(2 cups of water+50 scale marks cup of water) |

Method of measuring rice: Please use the cups delivered with this product to measure the rice, and the right and wrong measuring methods of 1 cup of rice are as shown below:

❿

## Ⅳ.Parts

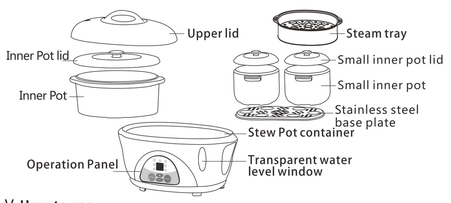


## Ⅴ.How to use

Description of operation panel and keys:

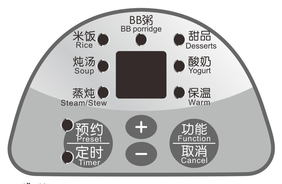


1.”Function/Cancel”Key:
①In the standby or stting mode, press the ”Function/Cancel” key, the showing sequence of the function indicators are as follows: Standby → Steam/Stew →Soup →Rice → BB porridge →Desserts →Yogurt →Warm (--) →standby, repeating so as the above.
②In any operation, press the ”Function/Cancel” key, and this key performs the function of "Cancel". The product returns to the standby mode.
2.”Preset/Timer”key:
①In the standby mode, press the "Preset/Timer" key, the Preset indicator flashes on, and the default time "2.0" displayed on the screen also flashes on, with the flashing time limit of 6 seconds. Each time press the "Preset/Timer" key within 6 seconds, the flashing time limit will be extended; When "2.0" is flashing, you can press the "+" and "-" keys to adjust the Preset time.
②After pressing the "Function /Cancel" key, if press the "Preset/Timer" key again within 6 seconds, then the Timer indicator flashes on, and the default function time displayed on the screen also flash on. You can press the "+" and "-" keys to adjust the Timer.
③In the process of Timer operation, press the "Preset/Timer" key again, the function indicator will keep constantly on, and the Timer indicator and the displayed time on the screen also flash on. The Timer can also be adjusted by pressing the "+" and "-" keys.
3.“+”key: After pressing the "Preset/Timer" key, press the "+" key, the default Timer

❾

| 序号 | 故障现象 | 故障原因 | 排除方法 |
|---|---|---|---|
| ② | 产品进入加热状态后不久就突然断电，显示屏无显示 | 炖盅容器内没有加水 | 请往炖盅容器内加入适量的水 |
| | | 使用一个(或两个)小内锅炖煮时，没有先将垫板放入炖盅容器内 | 需将垫板先放入炖盅容器内后，再将一个（或两个）小内锅放于垫板上 |
| ③ | 能通电但不加热 | 产品故障 | 请送指定维修点检修 |
| ④ | 通电后显示"E1"、"E2" | 产品故障 | 请送指定维修点检修 |

4. 非专业人员切勿拆卸、修理本产品。
5. 如果电源线损坏，为避免危险，必须由本公司或维修部或类似部门的专业人员来更换。
6. 当产品出现故障且无法排除时，切勿自行维修，请与我司设立在当地的特约维修网点或本公司客户服务部联系解决。
7. 陶瓷件为易碎品，不在保修服务范围，请小心使用。

## CONTENTS

Ⅰ.Important Safeguards----------7
Ⅱ.Performance characteristics ----------8
Ⅲ.Technical specifications Parts ----------8
Ⅳ.Parts ----------9
Ⅴ.How to use ----------9
Ⅵ.Maintenance and repair ----------14

**Ⅰ. Important Safeguards**
When using electrical appliances, basic safety precautions should always be followed including the following:
1. READ ALL INSTRUCTIONS.
2.Please use the AC power source with the voltage indicated on the data plate.
3.For your safety, use the power source with ground protection
4.Do not touch hot surfaces. Use handles or knobs.
5.To protect against fire, electrical shock, do not immerse cord, plugs or appliance in water or other liquid.
6.Use only on a level, dry and heat-resistant surface, and keep it out from Children.
7.Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding. And don't put dishcloths or other things cover the vent.
8.Do not touch the glass cover or Stainless steel pot under the working condition to prevent scalding injury..
9.Do not put inner pot on fire and prevent the heat ceramic pot from cold water to avoid cracking.
10.If there is no water in this product, please unplug the cord, it cannot be powered on again before it cools down. Do not touch a heating base.
11.The amount of water added into the stew- cup container is at the water level after putting into the inner container, and the water added cannot exceed the "MAX" water level, or there may be breakdown or dangers.
12.Do not switch on the power for dry burning when no water is added into the stew- cup container. Unplug the power line when it is out of use.
13.When plugging, please make sure it contact well.
14. Do not let cord hang over edge of table or counter, or touch hot surfaces.
15.The power plug and socket should always be kept dry. Never insert and pull out the plug with wet hands to prevent electric shock.
16. A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a long cord.
A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
If a longer detachable power-supply cord or extension cord is used:
1)The marked electric rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
2)The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
17.Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
18.When this product is power on, do not move it.
19.The ceramic pots are fragile. Do not hit them with hard objects or drop them from height.
20.Close supervision is necessary when any appliance is used by or near children.
21.Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts..
22.Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
23.The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
24.Do not use outdoors.
25.Do not place on or near a hot gas or electric burner, or in a heated oven.
26.Extreme caution must be used when moving an appliance containing hot liquids.
27.Do not use appliance for other than intended use.
28.Intended for countertop use only.
29.WARNING: Spilled food can cause serious burns.Keep appliance and cord away from children.Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

**Save these instructions.**

**Ⅱ.Product performance characteristics**
1.The small and exquisite twin ceramic inner pots with smooth texture, together with a large ceramic inner pot, can stew different foods simultaneously, without the need of stewing foods respectively, bringing your whole family thoughtful care and concern.
2. The product is equipped with three-dimensional elevated high-capacity food Steam tray, which enables you to complete the "steaming" and "stewing" at the same time. The food Steam tray is made with high-grade non-toxic healthy PC material, which is one-time molded, easy to clean, sanitary and healthy to use.
3.It adopts microcomputer intelligent-control program, with a variety of professional stewing functions, to meet your various needs when using it. Besides, it covers the "yogurt" making function, serving multiple purposes with one product, making you feel fun and free.
4.Utilizing the nutrition critical temperature of 100 ℃ boiling water to stew the food inside the ceramic inner pot uniformly and gently, you can make the food uniformly release nutrition essence and can prevent it from sticking and burning, so it can effectively preserve the nutritional ingredients and the original taste of the food; the non-stick and non-burn property is particularly suitable for stewing and heating gel