版本：CORELDRAW X6
日期：2018.04.27
编号：DGD30-30GD·加拿大高朋·01·MG-03A
材质：100g亚太纸
尺寸：142mm×210mm

MAKOTO

微電腦砂鍋煲
Micro-computer Stew Cooker

使用說明書
Operation Instruction

型 號：DGD20-20GD
Model: DGD30-30GD

圖案有偏差時，以實物為准
The pictures are for reference only, subject to our available products.

使用產品前，請仔細閱讀本使用說明書。
請妥善保管本使用說明書
Please read the Operations Instructions carefully before using products.
Please keep it cautiously after reading for future reference.
使用時，請按本說明書進行操作。 本產品僅限家庭或類似場所使用。
Please operate it according to this instruction when using this product.This product is limited to household or similar application.

目錄

一.注 意 事 項 ---------- 1
二.產 品 性 能 特 點 ---------- 1
三.主 要 技 術 參 數 ---------- 2
四.部 件 名 稱 介 紹 ---------- 2
五.使 用 方 法 ---------- 3
六.保 養 和 維 護 ---------- 7

一、注意事項

1.避免砂鍋在較熱時接觸冷水，以免發生爆裂。
2.請使用與銘牌所標電壓值一致的交流電源。
3.請使用有合格保護接地的電源，以確保人身安全。
4.不要放在易燃易爆的物品附近或表面使用；不要放在潮濕或靠近其它熱源的地方使用，以免發生故障和危險。
5.使用本產品時應放置在兒童接觸不到的穩固平臺上。
6.產品工作時會冒出蒸汽，切勿將臉或手靠近蒸汽口，以免燙傷；怕蒸汽的物體不要置於本產品上方；切勿將抹布或類似物品覆蓋在蒸汽口上，以避免引發意外或導致產品故障。
7.產品工作時，上蓋和外殼溫度較高，請勿觸摸，以免燙傷。
8.切勿直接通電幹燒或只加油加熱，避免出現故障和危險，不用時請拔下電源插頭。
9.插入電源線時，必須插到底，以確保接觸良好。
10.應經常保持電源插頭、插座的乾燥，禁止用濕手插拔電源插頭，以防止觸電。
11.產品在通電工作時，請勿移動。
12.砂鍋為易碎品，慎防與硬物碰撞及從高處跌落，造成破碎損壞。
13.加水量應在最低水位線與最高水位線之間。加水過少或過多，都可能出現故障和危險。
14.在工作狀態下按動“保溫/取消”鍵，產品將回到待機狀態，即顯示幕顯示“00:00”。
15.若中途斷電，產品將回到待機狀態，需重新設置，才能繼續工作。
16.產品第一次使用時，發熱管可能發出輕微異味；另顯示幕在剛通電時可能顯示閃爍，請拔下插頭後重新通電；此兩種現象屬正常現象，請放心使用。
17.請保持感測器及鋁鍋表面清潔、平整，否則可能影響產品使用效果。
18.燉煮食物或煮粥時，食物對水或米對水的比例不能過高，否則容易造成煮幹、燒糊等現象，嚴重時將會影響砂鍋的使用壽命。
19.工作結束，拿開砂鍋後，產品內部餘熱溫度較高請勿直接觸摸，以免燙傷。
20.請勿將此陶瓷膽使用在其他器具上。

請保存此使用說明書

二、產品性能特點

1、將傳統砂鍋烹飪轉化為家用電器，實現智慧免看管。
2、“飯、菜、湯、粥”一鍋全包容，滿足您和您家人烹飪的需求。
3、快速煲燉，時間更短，烹飪更香，滿足即時上菜需求。
4、專業菜式程式控制，味道更濃，口感更好。
5、天然砂鍋，煲煮更營養健康。

4.Non-professionals should not remove and repair this product.
5.If the power line is damaged, it must be replaced by the professional staff in the maintenance department or similar department of our company in order to avoid danger.
6.. When the product fails and the trouble cannot be ruled out, do not repair by yourself, please contact the local special repair service or contact our customer service department to solve it.
7. The Claypot and lid are fragile goods, which are not covered within the scope of warranty services, so please handle and operate them with care.

三、主要技術參數

產品名稱	微電腦砂鍋煲	
產品型號	DGD20-20GD	DGD30-30GD
電　源	120V～60Hz	
額定功率	450W	
容　量	2.0L	3.0L
外觀尺寸（長×寬×高）	311mm×270mm×232mm	311mm×270mm×237mm

四、部件名稱介紹

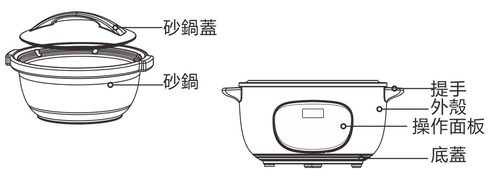

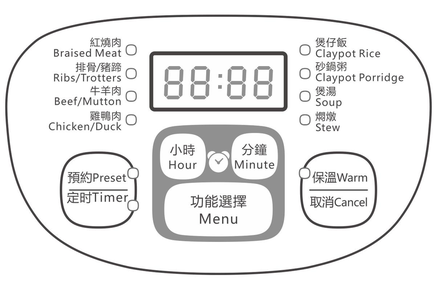

五、使用方法

1、操作面板及按鍵說明：

1.待機狀態：如圖，顯示幕顯示“00:00”，各指示燈處於不亮狀態。
2.“功能 選擇”鍵：
① 待機狀態下，按動“功能選擇”鍵，功能指示燈顯示順序及數碼管顯示預設時間如下：紅燒肉（--：--）→排骨/豬蹄（--：--）→牛羊肉(01：45)→雞鴨肉（01：15）→煲仔飯（--：--）→砂鍋粥（--：--）→煲湯（01：30）→燜燉(01：00)→待機，如此迴圈。
② 在任何工作過程中，按動“保溫/取消”鍵，該鍵起“取消”作用，產品回到待機狀態。
3.“預約/定時”鍵：
① 待機狀態下，按“預約/定時”鍵，預約指示燈閃亮，顯示幕顯示預設時間“02:00”並閃亮，閃亮時限為6秒，6秒內每按一次“預約/定時”鍵，閃亮時限順延；“02:00”閃亮時，可以通過按“小時”和“分鐘”鍵調整預約時間。
② 按“功能選擇”鍵後，6秒內再按“預約/定時”鍵，定時指示燈閃亮，功能指示燈和顯示幕顯示的功能預設時間也都閃亮，可以通過按“小時”和“分鐘”鍵調整定時時間。
③ 定時工作過程中，再按“預約/定時”鍵，功能指示燈保持恒亮，定時指示燈和顯示幕顯示時間都閃亮，也可以通過按“小時”和“分鐘”鍵調整定時時間。
4.“小時”和“分鐘”鍵：先按“預約/定時”鍵（“預約/定時”鍵上邊為預約燈閃亮）此時，可通過“小時”，“分鐘”鍵調整烹飪時間，按動“小時”鍵顯示幕小時位以“1”為單位遞增，按動“分鐘”鍵顯示幕分鐘位以“5”為單位遞增，長按則快速遞增。最高可預約24小時(注：保溫沒有預約功能)
5.“小時”，“分鐘”鍵:先按“功能選擇”鍵確定功能，後按“預約/定時”鍵（“預約/定時”鍵下邊為定時燈閃亮），此時，可通過“小時”，“分鐘”鍵調整烹飪時間，按動“小時”鍵顯示幕小時位以“1”為單位遞增，按動“分鐘”鍵顯示幕分鐘位以“5”為單位遞增，長按則快速遞增。可調整的定時時間範圍不能超過該功能可調整的定時時間範圍。
★“小時”和“分鐘”鍵只能在按“預約/定時”鍵後6秒內，“預約”或“定時”燈閃亮的情況下才能操作。
6.“保溫/取消”鍵：
① 待機狀態下，按動“保溫/取消”鍵，功能指示燈顯示順序及數碼管顯示預設時間如下：保溫(- -:- -)→待機，如此迴圈。
② 定時保溫：保溫工作狀態顯示幕預設顯示“- -:- -”，按一下“預約/定時”鍵（“預約/定時”鍵下邊為定時燈閃亮），此時，可通過“小時”，“分鐘”鍵調整烹飪時間，按動“小時”鍵顯示幕小時位以“1”為單位遞增，按動“分鐘”鍵顯示幕分鐘位以“5”為單位遞增，長按則快速遞增。如此調節您所需的保溫時間，在任何工作過程中，按動“保溫/取消”鍵，該鍵起“取消”作用，產品回到待機狀態。

2.功能設置說明表：

功能	紅燒肉	排骨/豬蹄	牛羊肉	雞鴨肉	煲仔飯	砂鍋粥	煲湯	燜燉	保溫
默認時間（小時）	--.--	--.--	01:45	01:15	--.--	--.--	01:30	01:00	--.--
定時時間（小時）	--.--	--.--	00:00-03:00	00:00-03:00	--.--	--.--	00:00-05:00	00:00-03:00	00:00-24:00
是否可預約	是	是	是	是	是	是	是	是	否

TIPS:
1)The maximum adjustable time of presetting is 24 hours
2)Please set appropriate presetting time according to the characteristics of food materials and your life experience to fully immerse the food materials in water for an appropriate period of time. The presetting time set for those easy-deteriorating food shall not be too long to prevent deterioration.
3)When stewing the food not easy to cook, or at low temperatures, please properly cook it for longer time on the basis of the default timing time, ensuring the food to be fully cooked.
4)Please add water into the inner pot in terms of the water level mark on the inner pot. To reach the appropriate food taste, recommend to dived the food materials first if with the smell.
5)Please add the water as the Water level marking.
6)If you need to open the upper lid in the process of stewing, please press the “Menu/Cancel” key first to stop operation. Do not uncover the lid until the water stops boiling to prevent the boiling water from splashing out of the pot, causing scalding injury.
7)After the Timer of Keep ”Warm”is over, the product will directly enters into the standby mode.
8)When the appliance enters into the state of keep Warm, it is the unlimited-time heat preservation, and the screen displays “-:-” at this moment. If you need to stop the keep Warm, you can press the “Cancel” key to stop it.

VI. Repair and maintenance

1.Cleaning methods:

1)Please let the pot cool down before the cleaning the appliance.Unplugged the power cord before the clean.
2)The Claypot can be washed with detergent and sponge, and do not use a hard steel wire to clean it to avoid damage to the surface.
3)Use a wet towel to wipe the outside surface of the product body, but do not use corrosive liquids for cleaning.
4)Do not immerse the appliance and power cord directly into water to prevent water from entering into it,avoiding product failure and danger in use.

2.Preservation Methods

When the product is not in use for a long time, please wipe it clean and pack it into the carton then store it in a ventilated and dry place for normal use to avoid being affected with damp.

3.Failure and trouble shooting

Serial No.	Failure phenomenon	Failure causes	Troubleshooting methods
1	Power failure	The plug of the power line is not properly connected.	Check whether the power line is properly plugged in place.
		Product failure.	Send to maintenance center for troubleshooting.
2	Fail to heat in the state of power on	Dry burn occurs	Please turn off the power, and do not turn it on again until the Claypot cools down
		Product failure.	Send to maintenance center for troubleshooting.
3	Displaying “E1”	Product failure.	Send to maintenance center for troubleshooting.
4	Displaying “E2”	Dry burn occurs	Please turn off the power, and do not turn it on again until the Claypot cools down
		Product failure.	Send to maintenance center for troubleshooting.
5	Claypot rice is not well-cooked or burned	Too little water added	Adjust the water added (increase or decrease the water amount according to the different water-absorbing qualities of rice

3.功能(米和水、食物和料汁的配比)供參考：

功能	配比（用本機配送的量杯測量）
紅燒肉、排骨/豬蹄	200ml料汁+食物（不超過容器的MAX水位）
牛羊肉	500ml料汁+食物（不超過容器的MAX水位）
雞鴨肉、燜燉	300ml料汁+食物（不超過容器的MAX水位）
煲仔飯	1.5杯米+2.5杯水或者2杯米+3杯水或者2.5杯米+3.5杯水或者3杯米+4杯水或者3.5杯米+4.5杯水（參考砂鍋內水位標）（加少許食用油，不粘鍋）
砂鍋粥	0.5杯米+4杯水或者1杯米+8杯水或者1.5杯米+12杯水（參考砂鍋內水位標）
煲湯	不超過砂鍋的MAX水位

煲仔飯與砂鍋粥分別在10分鐘左右和15分鐘左右提示（蜂鳴器響）加入配菜具體見砂鍋煲健康食譜。

4.使用步驟:

①準備食材及器具
在砂鍋中放入食材和料汁（加入的食材和水不超過砂鍋容量的MAX水位），再蓋上砂鍋蓋。

注：
a. “煲仔飯”功能:選擇煲仔飯功能前，請先往砂鍋內加入少量食用油後再加入洗淨後的大米，增加口感同時避免粘鍋。在工作10分鐘左右時會有蜂鳴器響，提示加入配菜（加入配菜時，再加入少量食用油，骨類較難熟的食物，應與大米一起加入）。
b. “砂鍋粥”功能:選擇砂鍋粥功能，在工作15分鐘左右時，會有蜂鳴器響，提示加入配菜（骨類較難熟的實物，應與大米一起加入）。

③.功能選擇、按鍵操作方法及狀態說明
a.定時燉煮設置及工作說明（以“燜燉”功能定時1.5小時為例）

按“功能選擇”鍵8次，“燜燉”功能指示燈和顯示幕顯示預設時間“01：00”都閃亮。

按“預約/定時”鍵1次，“定時”指示燈和顯示幕顯示的預設功能時間“01：00”都閃亮。

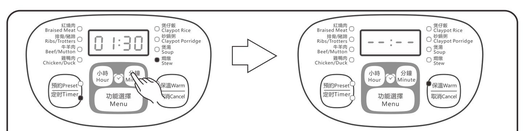

按“分鐘”鍵6次，顯示幕顯示功能定時時間“01：30”並閃亮。數秒後，進入工作狀態，功能指示燈常亮。

定時時間結束後，進入無限時保溫狀態，“保溫”功能指示燈恒亮，顯示屏顯示“- - : - -”，中間“：”閃亮。

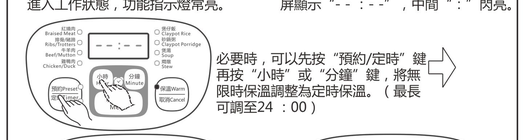

必要時，可以先按“預約/定時”鍵再按“小時”或“分鐘”鍵，將無限時保溫調整為定時保溫。（最長可調至24：00）

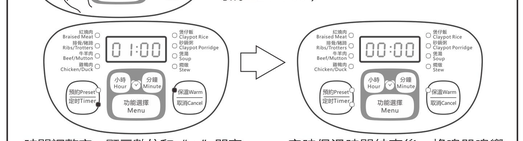

時間調整完，顯示數位和“：”閃亮幾秒後，產品重新進入工作，按調整完後的時間倒計時

定時保溫時間結束後，蜂鳴器鳴響提示進入待機狀態，顯示幕顯示“00：00”

b.預約燉煮設置及工作說明（以“燜燉”預約4小時功能定時1.5小時為例）

按“預約/定時”鍵，“預約”指示燈和顯示幕顯示的預設預約時間“02：00”都閃亮。

按“小時”鍵，調整預約時間為“04：00”。

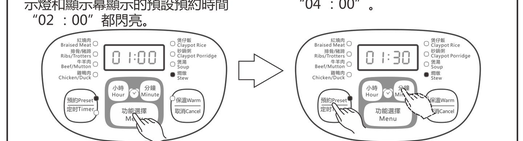

按“功能選擇”鍵8次，“燜燉”功能指示燈和顯示幕顯示預設時間“01：00”都閃亮。

先按“預約/定時”鍵，再按“分鐘”鍵6次，顯示幕顯示功能定時時間“01：30”並閃亮。

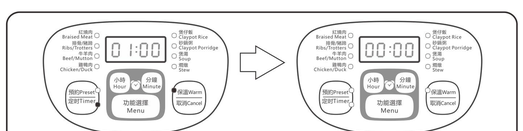

After the time adjustment, and after the displayed number and “.” flash on for a few seconds, the appliance reenters into the working condition and starts the countdown according to the adjusted time.

After the timed Warm is over, the buzzer rings to remind that the appliance enters into the standby mode, and the screen displays “00:00”.

B. Preset stew setting and operational description(Taking 4-hour presetting of “Stew” function with 1.5-hour timing as an example)

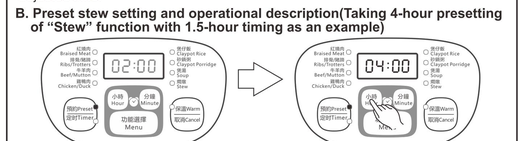

Press “Preset/Timer” key, the indicator and the default function time “02:00” displayed on the screen flash on at the same time.

Press the “Hour” key to adjust the preset time to “4.0”.

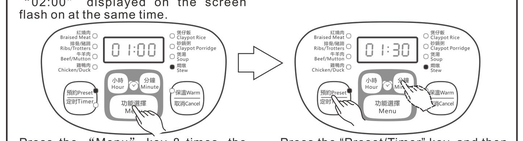

Press the “Menu” key 8 times, the “Stew” function indicator and the default time “01:00” displayed on the screen flash on.

Press the “Preset/Timer” key, and then press the “Minute” key for six times, the screen displays the timing function time of “01:30” and flashes on..

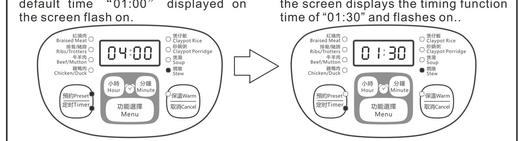

In a few seconds, it automatically enters into the preset working state. The “Preset” indicator and the “Stew” function indicator are constantly on, the screen displays the presetting time of “4.0” and starts the countdown.

After the countdown of the presetting time, it automatically enters into the timing stewing working state of the selected “Stew” function. The “Preset” indicator is off, the “Stew” function indicator and the “Timer” indicator are constantly on, the screen displays the timing time of “01:30”. At this moment, it starts the countdown and the “.” flashes on.

After the timing time is over, it enters into the unlimited-time keep Warm state, the “Warm” function indicator is constantly on, the screen displays “--:--” with the “.” in the middle flashing on.

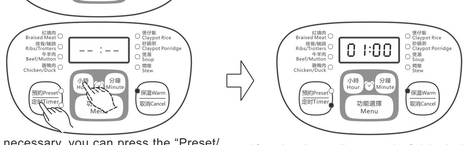

If necessary, you can press the “Preset/Timer” key and then press the “Hour” or “Minute” key to adjust the unlimited-time keep Warm to the timed Warm. (It can be adjusted to the maximum time of 24:00)

After the time adjustment is finished, the screen displays the number and “:”. After they flash for a few seconds, the product re-enters into its working state, and starts the countdown according to the adjusted time.

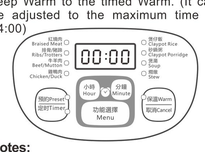

After the timed keep Warm is over, the buzzer beeps to give the reminder of entering into the standby mode, and the screen displays “00: 00”.

Notes:
1)After pressing the “Preset/Timer” key, you must press the “Menus” key to enter into the presetting working state; if you press the “Menu” key first and then press the “Preset/Timer” key, you cannot perform the presetting operation.
2)The time cannot be adjusted in the presetting working state.
3)The heat preservation function cannot be preset.

C. Stop Operation

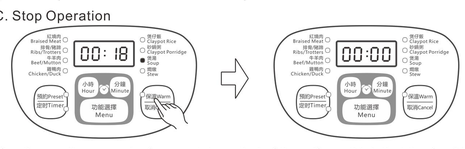

After the appliance works for a certain period of time, if you think that the food is stewed to the appropriate state, you simply press the “Warm /Cancel” key to stop the operations immediately and return to the standby mode.

5. After the cooking finished, please unplug the power cord and turn off the power.

into side dishes, you should add into a small amount of cooking oil, and foods that are difficult to cook like bones should be added together with rice).
b. “Claypot Porridge” Function: Select the “Claypot Porridge”, and in about 15 minutes of operation there will be the ringing buzzer to remind you to add into side dishes (foods that are difficult to cook like bones should be added together with rice).
2).Plugged with the power, and the screen on the operation panel turns on in the standby state.

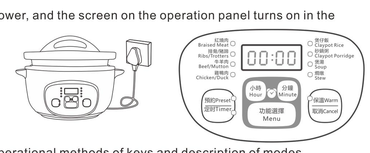

3).Menu selection, operational methods of keys and description of modes

A. Timed stewing setting and operational description (Taking 1.5-hour timing of “Stew” function as an example)

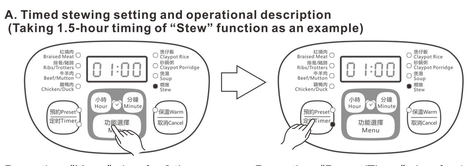

Press the “Menu” key for 8 times, the “Stew” function indicator and the default time “01:00” displayed on the screen flash on.

Press the “Preset/Timer” key for 1 time, the “Timer” indicator and the default function time “01:00” displayed on the screen flash on at the same time.

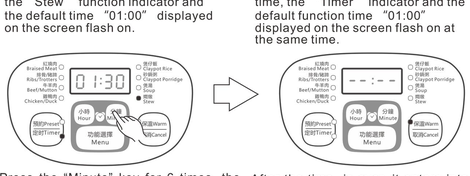

Press the “Minute” key for 6 times, the screen displays the Timer function time of “01:30” and flashes on. In a few seconds, it will enter into the working state, and the function indicator is

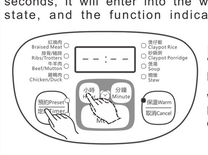

If necessary, you can press the “Preset/Timer” key and then press the “Hour” or “Minute” key to adjust the unlimited-time Warm to the timed Warm. (It can be adjusted to the maximum time of 24:00)

After the time is over, it enters into the unlimited-time Warm state, the “Warm” function indicator is constantly on, the screen displays “--:--” with the “.” in the middle flashing on.

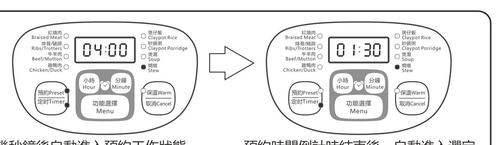

幾秒鐘後自動進入預約工作狀態，“預約”指示燈和“燜燉”功能指示燈均恒亮，顯示幕顯示預約時間“04：00”並開始倒計時，“：”閃亮。

預約時間倒計時結束後，自動進入選定功能“燜燉”的定時燉煮工作狀態。“預約”指示燈滅，“燜燉”功能指示燈和“定時”指示燈恒亮，顯示幕顯示定時時間“01：30”並開始倒計時，“：”閃亮。

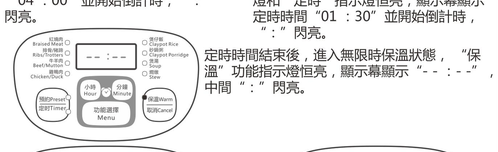

定時時間結束後，進入無限時保溫狀態，“保溫”功能指示燈恒亮，顯示幕顯示“- - : - -”，中間“：”閃亮。

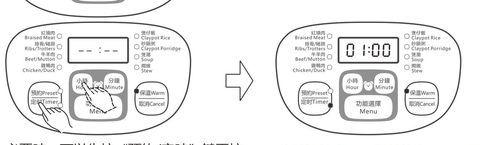

必要時，可以先按“預約/定時”鍵再按“小時”或“分鐘”鍵，將無限時保溫調整為定時保溫。(最長可調至24：00)

時間調整完，顯示數位和“：”閃亮幾秒後，產品重新進入工作，按調整完後的時間倒計時

定時保溫時間結束後，蜂鳴器鳴響提示進入待機狀態，顯示幕顯示“00：00”

注：
1.先按“預約/定時”鍵後必須再按“功能選擇”鍵，才能進入預約工作狀態；如果先按“功能選擇”鍵後再按“預約/定時”鍵，則無法進行預約操作。
2.預約工作狀態下無法調整時間。
3.保溫功能無法預約。

c.終止工作

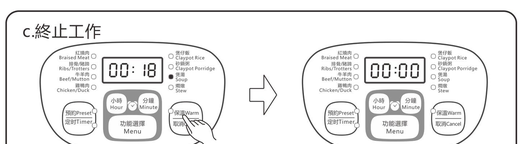

燉鍋工作一定時間後，若您認為食物已燉至所需火候時，只需按“保溫/取消”鍵，立即停止工作，回到待機狀態。
④.產品使用完畢之後，請拔掉電源線插頭，切斷電源。

溫馨提示:
1.預約最長調整時間為24小時。
2.請根據各種食材的特性，按生活經驗設定合適的預約時間，以使食材充分浸泡。預約時間不宜設置過長，以防止食材變質。
3.在煲湯或燜燉不易熟的食物時，或在低溫環境下，請在默認定時時間的基礎上，適當加長時間，為確保食物熟透。
4.在工作過程中可以依您個人喜好調整工作時間及水量，使食物達到合適的口感，建議帶腥氣食物先過水。
5.請按內鍋上的水位標記往內鍋內加水，以保證正常燉煮，防止出現產品故障或造成危險。
6.產品燉煮過程若要打開上蓋，請先按“保溫/取消”鍵停止工作，待水不沸騰時再開蓋，以防止鍋內沸水濺出燙傷。
7.定時“保溫”工作時間結束後，產品直接進入待機狀態。
8.當產品進入保溫狀態後，為無限時保溫，這時顯示為“- - : - -”。若需停止保溫，請按“保溫/取消”鍵即可。

六、保養和維護

1.清洗方法:

1) 產品清洗前應先拔掉電源線，待冷卻後再進行清洗。
2) 砂鍋可用洗潔精和海綿清洗，請勿使用硬質鋼絲清洗，以免損壞表面。
3) 可用濕毛巾擦拭機體外表面，切勿使用腐蝕性液體進行清洗。
4) 切勿將電源線、產品整機浸入水中或沖洗，以免電器進水，產生故障，影響安全使用。

2.保存方法:

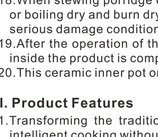

產品長期不使用時，請清潔擦淨後，裝入包裝箱中，應存放於通風乾燥的地方，以免受潮，影響使用。

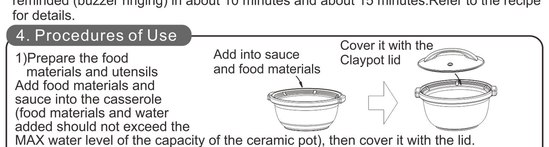

Side dishes can be added respectively into the Claypot rice and Claypot porridge when reminded (buzzer ringing) in about 10 minutes and about 15 minutes.Refer to the recipe for details.

4. Procedures of Use

1)Prepare the food materials and utensils
Add food materials and sauce into the casserole (food materials and water added should not exceed the MAX water level of the capacity of the ceramic pot), then cover it with the lid.

Note:
a. “Claypot Rice” Function: Before selecting the “Claypot Rice” function, please add a small amount of cooking oil into the ceramic pot, then add into the rice after washing, which can improve the taste while avoiding sticking. In about 10 minutes of operation there will be the ringing buzzer to remind you to add into side dishes (when adding

V. How to use

1.Description of Control panel and keys：

A. “Menu” key
1) In the state of standby, press the “Menu” key, the displaying sequence of the function indicators and the default time of the nixie tube are as follows: Braised Meat (--.--) →Ribs/Trotters (--.--) →Beef/Mutton (01:45) →Chicken/Duck (01:15) →Claypot Rice (--.--) →Claypot Porridge (--.--) → Soup (01:30) → Stew (01:00) →Standby, and this will circulate as above.
2) In any operating process, press the “Warm/Cancel” key which has the function of “Cancel”, and the product returns to the standby state.

B. Preset/Timer key
1) In the standby mode, press the “Preset/Timer” key, the preset indicator flashes on, and the default time “02:00” displayed on the screen also flashes on, with the flashing time limit of 6 seconds. Each time press the “Preset/Timer” key within 6 seconds, the flashing time limit will be extended; When “02:00” is flashing, you can press the “Hour” and “Minute” keys to adjust the preset time.
2) After pressing the “Menu” key, if press the “Preset/Timer” key again within 6 seconds, then the timing indicator flashes on, and the default function time displayed on the screen also flash on. You can press the “Hour” and “Minute” keys to adjust the timing.
3) In the process of Timer operation, press the “Preset/Timer” key again, the function indicator will keep constantly on, and the timing indicator and the displayed time on the screen also flash on. The timing can also be adjusted by pressing the “Hour” and “Minute” keys.

C.Hour and Minute keys
1) “Hour” and “Minute” keys: First press the “Preset/Timer” key (the Preset indicator above the “Preset/Timer” key flashes on), and at this moment you can adjust the cooking time with the “Hour” and “Minute” keys. Press the “Hour” key, the hour digit on the display screen will progressively increase by the unit of “1”, and press the “Minute” key, the minute digit on the display screen will progressively increase by the unit of “5”. Long press them, they will increase quickly, with the maximum presetting time of up to 24 hours (Note: There is no preset function for “Warm”).
2) “Hour” and “Minute” keys: First press the “Menu” key to determine the function, and then press the “Preset/Timer” key (the Timer indicator below the “Preset/Timer” key flashes on), and at this moment you can adjust the cooking time with the “Hour” and “Minute” keys. Press the “Hour” key, the hour digit on the display screen will progressively increase by the unit of “1”, and press the “Minute” key, the minute digit on the display screen will progressively increase by the unit of “5”. Long press them, they will increase quickly. The adjustable time range of Timer cannot exceed the adjustable Timer range of this function.
★“Hour” and “Minute” keys can only be operated within six seconds after pressing the “Preset/Timer” key, when the indicators of “Preset” and “Timer” are flashing on.

D. Warm/Cancel Key:
1) In the state of standby or setting, press the “Warm/Cancel” key, the displaying sequence of the function indicators and the default time of the nixie tube are as follows:Warm/Cancel (- -:- -) → Standby, and this will circulate as above.
2) Timing Warm: In the working state of keep Warm, the screen displays by default the “- -:- -“. Press the “Preset/Timer” key (the Timer indicator below the “Preset/Timer” key flashes on), and at this moment you can adjust the cookingtime with the “Hour” and “Minute” keys. Press the “Hour” key, the hour digit on the display screen will progressively increase by the unit of “1”, and

3.故障及排除

序號	故障現象	故障原因	排除方法
①	不通電	電源線插頭沒插好	檢查電源線插頭是否插緊到位
		產品故障	請送指定維修點檢修
②	能通電但不加熱	出現幹燒	請拔電等砂鍋放置冷卻後再通電
		產品故障	請送指定維修點檢修
③	顯示幕顯示“E1”	產品故障	請送指定維修點檢修
④	顯示幕顯示“E2”	出現幹燒	請拔電等砂鍋放置冷卻後再通電
		產品故障	請送指定維修點檢修
⑤	煲仔飯不熟或燒焦	加水量太少	調整加水量（根據米的吸水性不同，加水量有所增減）

4.非專業人員切勿拆卸、修理本產品。
5.如果電源軟線損壞，必須用專用軟線或從我司供銷商或維修部買到的專用元件來更換。
6.當產品出現故障且無法排除時，切勿自行維修，請與我司設立在當地的特約維修網點或本公司客戶服務部聯繫解決。
7. 砂鍋和砂鍋蓋為易碎品，不在保修服務範圍，請小心使用。

CONTENTS

I. Important Safeguards ---------- 9
II. Product Features ---------- 9
III. Technical specifications ---------- 10
IV. Parts ---------- 10
V. How to Use ---------- 11
VI. Repair and maintenance ---------- 16

I.Important Safeguards
1.Prevent the ceramic parts in hot state from contacting the cold water, in order to avoid crack.
2.AC power voltage should be in accordance with the voltage indicated on the nameplate.
3.For your safety, use the power source with ground protection.
4.Do not place the product near or at the surfaces of the items that are flammable and explosive; do not put the product at the places that are wet or near other heat sources to avoid failures and danger.
5.When using this product, it should be placed at a solid platform out of children's reach.
6.When the product is at work, it will produce steam, do not let the face or hands near the steam vent to avoid scalding; the items that could be harmed by steam should not be put over the product; do not use the rag or similar items to cover the steam vents so as to avoid accidents and product failure.
7.When the product is in use, its upper lid and outer shell are very hot, so do not touch them in case of getting a burn.
8.Never directly power it on to dry burn or heat with only oil to avoid failure and danger. Pull out the power plug when out of use.
9.When plug in the power line you must fully insert it in to ensure the good contact.
10.The power plug and socket should be kept dry and it is prohibited that inserting and pull the power plug with wet hands to prevent from electric shock.
11.When this product is power on, do not move it.
12.The casserole is breakable, so prevent it from falling down from a height, causing breaking damage.
13.The water amount added should be between the minimum and maximum water levels. Too little or too much water addition may both lead to malfunction and danger.
14.Press the “Heat Preservation/Cancel” key when in working condition, and the product will return to standby state, i.e., the screen displays “00:00”.
15.If the power is off halfway, the product will return to the standby state, and it needs to be reset to continue the operation.
16.When the product is used for the first time, the heating tubes may give out a slight odor; besides, the screen may flash when it is just switched on, so please pull out the plug and switch it on again; these two phenomena are normal, so please rest assured when using it.
17.Please keep the sensors and the surface of the aluminum pot clean and smooth, or the service life of the product will be decreased.
18.When stewing porridge or other food, the proportion of food to water cannot be too high, or boiling dry and burn dry will occur, which will affect the service life of the inner pot under serious damage condition.
19.After the operation of the product is over and the casserole is removed, the waste heat inside the product is comparatively hot, so do not touch it to avoid burn.
20.This ceramic inner pot only can be heated with this appliance.

II. Product Features
1.Transforming the traditional cooking Claypot into the household appliance, make the intelligent cooking without the need of manual care.
2.Integrating “Rice, Vegetable, Soup, Porridge” into one pot to satisfy the cooking needs.

3.Fast stew with more delicious cooking, satisfying the need of immediate serving.
4.Professional menus program control fulfils better taste and flavor.
5.Natural Claypot cooking makes the food more nutritious and healthy.

III. Technical specifications

Product name	Micro-computer Electric Stew Cooker	
Product model	DGD20-20GD	DGD30-30GD
Rated Voltage	120V～60Hz	
Power	450W	
Capacity	2.0L	3.0L
Dimensions (L × W × H)	311mm×270mm×232mm	311mm×270mm×237mm

IV. parts

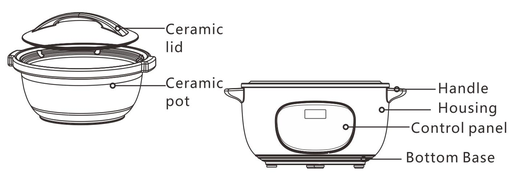
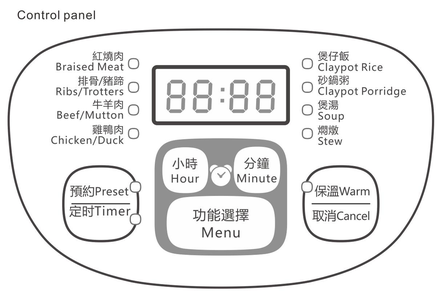
Control panel