软件版本：CORELDRAW X6　材质:100克亚太纸 上传日期：2019年05月28日
样稿名称：说明书　美工编号：·DGD40-40LD·加拿大高朋·01·MG-03A

2. Preservation Methods
- When the product is not used for a long time, please clean it and put it into the packing box. It should be stored in a ventilated and dry place to avoid damp and affect the use.
- This product contains parts that can be disassembled separately. To ensure safety, please return the product to its original place after disassembly or cleaning or keep it in a safe place so as to avoid loss or children's eating.
- Steam cap can be removed for cleaning. If the steam cap is inadvertently lost, replace it with the supplied steam cap.

3. Failure and troubleshooting:

Serial No.	Failure phenomenon	Failure causes	Troubleshooting methods
①	Power failure	The plug of the power line is not properly connected	Check whether the power line is properly plugged in place
		Product failure	Send to maintenance center for troubleshooting
②	Display E1 or E2	Product failure	

4.Non-professionals should not disassemble and repair this product.
5.If the power cord is damaged, it must be replaced with special cord or the special component purchased from the supplier or the maintenance department of our company.
6.When the product fails and the trouble can not be ruled out, do not repair by yourself, please contact the local special repair service network set up by our company or contact our customer service department to solve it.
7.The inner pot and lid are breakable parts, which are not included in the scope of quality warranty, so please use with care.
8.Any other servicing should be performed by an authorized service representative.
9.This product is for household use only.

MAKOTO

微電腦電燉鍋
Micro-Computer Electric Cooker
使用說明書
Operation Instruction

型 號：DGD40-40LD
Model:

圖案有偏差時，以實物為准
The pictures are for reference only, subject to our available products.

使用產品前，請仔細閱讀本使用說明書。
請妥善保管本使用說明書
Please read the Operations Instructions carefully before using products.
Please keep it cautiously after reading for future reference.

使用時，請按本說明書進行操作。 本產品僅限家庭或類似場所使用。
Please operate it according to this instruction when using this product.This product is limited to household or similar application.

目 錄

一. 注意事項----------1
二. 產品性能特點----------1
三.主要技術參數----------2
四. 部件名稱介紹----------2
五. 使用方法----------5
六. 保養及維護----------7

一、注意事項
1.請閱讀所有的使用說明
2.請使用與銘牌所標電壓值一致的交流電源。
3.請使用有合格保護接地的電源，以確保人身安全。
4.不要放在易燃易爆的物品附近或表面使用；不要放在潮濕或靠近其它熱源的地方使用，以免發生故障和危險。
5.使用本產品時應放置在兒童接觸不到的穩固平臺上。
6.產品工作時會冒出蒸汽，切勿將臉或手靠近蒸汽口，以免燙傷；怕蒸汽的物體不要置於本產品上方；切勿將抹布或類似物品覆蓋在蒸汽口上，以避免引發意外或導致產品故障。
7.產品工作時，上蓋、外壁溫度較高，請勿觸摸，以免燙傷。
8.切勿在加熱過程中，往內鍋內加冷水，也不要在剛燉煮結束後，立即將內鍋或陶瓷內鍋蓋放入水中，以免因陶瓷內鍋及陶瓷內鍋蓋驟冷驟熱而因此爆裂。
9.在內鍋內未盛燉煮食物時，切勿通電幹燒，不用時請拔下電源插頭。
10.若產品出現缺水幹燒，請立即拔掉電源，讓產品自然冷卻，冷卻過程不能往陶瓷內鍋內加水或將內鍋移出鍋體，否則會導致陶瓷內鍋損壞。
11.加水量應在最低水位線與最高水位線之間。加水過少或過多，都可能出現故障和危險。
12.插入電源線時，必須插到底，以確保接觸良好。
13.應經常保持電源插頭、插座的乾燥，禁止用濕手插拔電源插頭，以防止觸電。
14.產品在通電工作時，請勿移動。
15.產品在通電工作時，內部可能會發出輕微的“嗒、嗒”響聲，這是器具調整火力的聲音，不影響正常工作。
16.在工作狀態下按動“保溫/取消”鍵，產品將回到待機狀態，即顯示幕顯示“00:00”。
17.若中途斷電，產品將回到待機狀態，需重新設置，才能繼續工作。

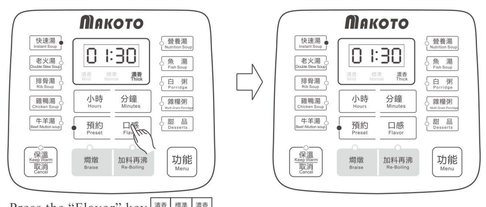

Press the “Flavor” key 清香 Mild 標準 Normal 濃香 Thick, the indicator of flavor will switch among “Mild”, “Normal” and “Thick”.

After 6 seconds of selecting the function, the product will enter into the stewing state.

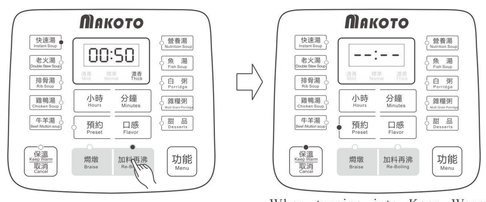

If you add other food materials in the process of stewing, you can press the “Re-Boiling with ingredients added” function key, and properly stir them to make the food materials boil again.

When turning into Keep Warm function after the stewing is completed, if you need to boil the food materials in the process of Keep Warm, you can repeatedly press the “Re-Boiling with ingredients added” function key until they boil again.

VI. Maintenance and repair
Inner pot Maintenance Tips:Before using the new inner pot, it's better to boil it with rice washing water or cooking porridge first. This can block the tiny holes in the inner pot, prevent water penetration

1. Cleaning methods:
1) Before it is cleaned, the power line should be unplugged after being cooled down.
2) Do not clean the power cord and main body in or with water to avoid product failure and danger.
3) Use a wet towel to wipe the outside surface, but do not use corrosive liquids for cleaning.
4).The ceramic parts can be washed with detergent and sponge, and do not use a hard steel wire to clean it to avoid damage to the surface.

	1cup	1.5cup	2cup	2.5cup
Porridge	1measuring cup	1.5measuring cups	2 measuring cups	2.5measuring cups
Multi Grain Porridge	0.8 measuring cup	1.0measuring cup	1.5measuring cups	2 measuring cups
Braise	300ml ingredient juice + food			

2）When using the soup-cooking function, the amount of water should be controlled between the lowest water level of ”1.0” and the highest water level MAX inside the inner pot.
Tips:
A.When stewing food or cooking porridge, please refer to the scale line on the inner pot wall to control the amount of food and water. Too much or too little amount of them will cause the spilling soup or boiling dry, burning and so on.
B.In the process of cooking “Porridge” and “Multi Grain Porridge”, when selecting the function of “Re-Boiling with ingredients added”, you need to open the lid and stir the food materials properly to prevent the porridge from spilling over due to too strong heating.

2. Use a dry cloth to wipe the outer wall of the inner pot, then put it into the machine and cover the inner pot lid.
A.Plug in the power line, switch the power on, the screen is on, which indicates that the product is in the standby mode.
B.Description of Menu, key operation method and modes.
a. Preset timing + function timing + flavor + Keep Warm

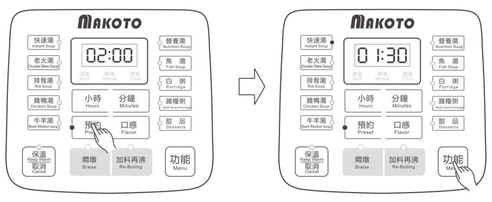

Press the “Preset” key, the default time is 2 hours. The Preset time can be adjusted by pressing the keys of “Hour” and “Minute” based on your needs.

Press the “Function/Selection” key to select the desired function.The stewing time can be adjusted by pressing the keys of “Hour” and “Minute” based on your needs.

18.加開水煮粥並不能縮短煮粥時間，只會使米粥煮得更爛，請注意使用。
19.產品第一次使用時，發熱體可能發出輕微異味；另顯示幕在剛通電時可能顯示閃爍，請拔下插頭後重新通電；此兩種現象屬正常現象，請放心使用。
20.請保持感測器及鋁鍋表面清潔、平整，否則可能影響產品使用效果。
21.內鍋及內鍋蓋均為易碎器皿，慎防與硬物碰撞及從高處跌落，造成破碎損壞。
22.燉煮食物或煮粥時，食物對水的比例不能過高，否則容易造成煮幹、燒糊等現象，嚴重時將會影響陶瓷內鍋的使用壽命。
23.移動電器帶有熱液體時，必須嚴加注意。
24.溢出食物會引發嚴重的燙傷。電器和電源線需遠離兒童，不要將電源線懸掛在檯面邊緣及在檯面下使用插座，不要使用延長線。
25.為了防止觸電，不要將電線、插頭或主機浸泡在水或其他液體中。
26.在不使用和清洗前，請從插座拔出電線。允許冷卻之前，可將可分離的部件取下。
27.不要用已有損壞的電線使用該產品，或在此電器已有故障或有任何損壞時插電使用。應當就近送到有授權的服務點進行維修。
28.如使用製造商不推薦的附件可能造成傷害。
29.不要在戶外使用。
30.不要讓電線懸掛在桌子或櫃檯的邊緣，或觸摸熱表面。
31.不要放置在熱氣體或電燃燒器上或附近，或在加熱爐中。
32.在移動含有熱液體的產品時必須格外小心。
33.始終先將插頭連接到產品上，然後將插頭插入牆上插座。斷開連接時，將任何控制轉換為“關閉”，然後從牆上的插座上拔出插頭。
34.不將此產品另作他用。
35.注意-觸電風險。只能在可移卸的容器中烹調。
36.短電源線說明：
a）短電源線是以減少因纏繞或絆倒較長的繩索而引起的風險。
b）可使用延長線，並可在使用時使用。
c）如果使用延長線：
1）延長線的額定電氣額定值應至少與電器的額定值一樣大；
2）電源線應該被放置好，放置妥當以免懸垂在檯面或桌面，避免讓小孩拉到或不小心絆倒。
3）延长线应该是3线接地线。

二、產品性能特點
1、耐高溫陶瓷內膽可明火燒。
2、弧底內膽煲燉均勻，舀湯清洗更方便。
3、大控制台，湯品口感可調，隨心選擇。
4、一鍵“加料再沸”功能。
5、設有“燜燉”和多種湯、粥功能，滿足更多烹飪需求。
6、雙層隔熱殼體結構，聚能、防燙。

三、主要技術參數

名　稱	微電腦電燉鍋
型　號	DGD40-40LD
電　源	120V~60Hz
額定功率	600W
額定容量	4.0L
外觀尺寸 (長×寬×高) (單位：mm)	312mm×289mm×294mm

四、部件名稱介紹
1.主要部件

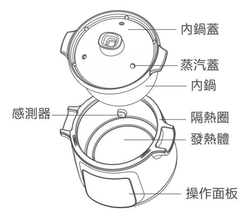

2.操作面板

2. Function Setting Table

Serial No.	Function	Default Time	Time for boiling the water	Description of manual adjustment time	Whether the “Re-Boiling with ingredients added” function can be used
1	Instant Soup	1.5 hours	About 45 to 60 minutes	To adjust the stewing time of various functions, you can press the “Hour” and “Minute” keys to adjust the time.	Yes
2	Double Stew Soup	3 hours			Yes
3	Rib Soup	2 hours			Yes
4	Chicken Soup	2.5 hours			Yes
5	Beef/Mutton Soup	3 hours			Yes
6	Nutrition Soup	2.5 hours			Yes
7	Fish Soup	1.5 hours			Yes
8	Multi Grain Porridge	2 hours			Yes
9	Desserts	2 hours			Yes
10	Braise	1 hour			No
11	Porridge	None	About 45 to 60 minutes	It is the automatic and intelligent control, so there is no need to adjust the time.	Yes

3. Operating Steps
1.Prepare the food materials and utensils:
Internal pot scale (porridge cup/MAX) indicates the use of the various functions of the reference line:
1) When using the functions of “Porridge” and “Multi Grain Porridge”, the amount of water should be determined based on the number of cups of rice added.
Example: When cooking 2.5 measuring cups of rice, you need to add water to the location marked with “2.5” of the water level scale line of “Porridge CUP”;
(Note: It is recommended to cook porridge with 1 cup of rice and 8 cups of water, and you can adjust the amount of water added according to your personal preferences and the different quality of rice. Method of adding rice: the amount of water added should be at the liquid level of the scale line on the side of CUP)

V. How to use
1. Introduction of the keys
1)“Hour”: Press the “Hour” key, each time you press the key, the time on the screen will increase an hour. If pressing it for a long time, the time will quickly increase, and the adjustable time range is 0-23 hours.
2) “Minute”: Press the “Minute” key, every time you press the key, the time on the screen will increase 5 minutes. If pressing it for a long time, the time will quickly increase, and the adjustable time range is 0-55 minutes.
3) “Preset”: In standby mode, press the “Preset” key, the Preset indicator flashes on, the screen displays the default time of “02:00” and flashes on. Within 6 seconds, you can adjust the time by pressing the “Hour” and “Minute” keys, and you should use the “Preset” key with the “Menu” key or the “Braise” key, otherwise, the Preset cannot be set normally.
4) “Flavor”: The default stewing flavor is normal, and you can switch among “Mild”, “Normal” and “Thick”.
5) Braise”: In the standby mode, press the “Braise” key, the indicators of the “Braise” and “Standard” of flavors flash on, the screen displays the default stewing time of 1 hour. (The function of Re-Boiling with ingredients added cannot be used for the Braise).
6). “Re-Boiling with Ingredients Added” Key: In the working state of the product, press the “Re-Boiling with Ingredients Added” key, and the product is heated with strong fire for 10 minutes. (Except the functions of Braise and Keep Warm after Braise, the Re-Boiling with ingredients added can be applied to the other functions).
7). “Menu”: In the standby mode, press the “Menu” key, the indicator will flash on successively in a cycle from “Instant Soup”, “Double Stew Soup”, “Rib Soup”, “Chicken Soup”, “Beef /Mutton soup”, “Nutrition Soup”, “Fish Soup”, “Porridge”, “Multi Grain Porridge” to “Desserts”. Select any function, the function indicator and the “Standard” indicator of flavors will be constantly on in 6 seconds, which indicates that it enters into the working state, and the screen displays the default stewing time. (There is no flavor selection for “Porridge”, “Multi Grain Porridge” and “Desserts”).
8). “Keep Warm/Cancel” Key:
A. In the standby mode, press the “Keep Warm/Cancel” key, the Keep Warm indicator flashes on, the screen displays the default time “- -: - -”, which is the working state of unlimited Keep Warm. You can press the “Hour” and “Minute” key to adjust the Keep Warm time according to your needs. After the countdown is over, the product returns to the standby mode. After adjusting the Keep Warm time, it will not be able to return to the unlimited- time Keep Warm state.
B. In the state of entering into the function, pressing the “Keep Warm/Cancel” key, the product returns to the standby mode.
C. Except the Braise function, when the other functions automatically turn to Keep Warm or manually start the Keep Warm function, the function of “Re-Boiling with ingredients added” can be used.

五、 使用方法
1.按键使用介绍
1.“小時”鍵，按“小時”鍵，每按一下顯示幕的時間增加1小時，長按則快速遞增，可調整時間範圍為0-23小時。
2.“分鐘”鍵，按“分鐘”鍵，每按一下顯示幕的時間增加5分鐘，長按則快速遞增，可調整時間範圍為0-55分鐘。
3.“預約”鍵，在待機狀態下，按“預約”鍵，預約指示燈閃亮，顯示幕顯示預設時間“02:00”並閃亮，6秒內可通過按“小時”和“分鐘”鍵調整時間，“預約”鍵需與“功能選擇”鍵或“燜燉”鍵一起使用，否則無法正常預約。
4.“口感”鍵，默認燉煮口感為標準，可通過“口感”鍵在“清香”、“標準”、“濃香”之間切換。
5.“燜燉”鍵：待機狀態下，按“燜燉”鍵，“燜燉”及口感“標準”指示燈閃亮，顯示幕顯示預設燉煮時間1小時。（燜燉不能使用加料再沸功能）。
6.“加料再沸”鍵：產品工作狀態下，按“加料再沸”鍵，產品大火力加熱10分鐘。(除燜燉和燜燉後轉保溫外其餘功能均可使用加料再沸功能)。
7.“功能選擇”鍵,在待機狀態下，按“功能選擇”鍵，指示燈依次在“快速湯”、“老火湯”、“排骨湯”、“雞鴨湯”、“牛羊湯”、“營養湯”、“魚湯”、“白粥”、“雜糧粥”、“甜品”之間迴圈閃亮。選擇任一功能，6秒鐘後功能指示燈和口感“標準”燈恒亮，表示進入工作狀態，顯示幕顯示預設燉煮時間。（白粥、雜糧粥、甜品無口感可選擇）。
8.“保溫/取消”鍵：
1)在待機狀態下，按“保溫/取消”鍵，保溫指示燈閃亮，顯示幕上顯示預設時間"- - : - -"，為無限時保溫工作狀態。可根據需要按動“小時”和“分鐘”鍵調整保溫的時間，倒計時結束，產品回到待機狀態。當調整保溫時間後，將回不到無限時保溫狀態。
2)在進入功能狀態下，按“保溫/取消”鍵，產品回待機狀態。
3)除燜燉外其餘功能自動轉保溫或手動啟動保溫功能，都可使用“加料再沸”功能。

2.產品功能設置表

序號	功能	默認時間	水開時間	手動調節時間的說明	是否可"加料再沸"
1	快速湯	1.5小時	約45 ~ 60分鐘	如需調整各功能的燉煮時間，可通過按“小時”及“分鐘”鍵調整時間	是
2	老火湯	3小時			是
3	排骨湯	2小時			是
4	雞鴨湯	2.5小時			是
5	牛羊湯	3小時			是
6	營養湯	2.5小時			是
7	魚湯	1.5小時			是
8	雜糧粥	2小時			是
9	甜品	2小時			是
10	燜燉	1小時			否
11	白粥	无	約45 ~ 60分鐘	為全自動智慧控制，無需自行調節時間	是

3.操作步驟
1.備食材及器具
內鍋內壁刻度線（粥cup/MAX）表示使用各項功能時的輔助線：
①使用“白粥”、“雜糧粥”功能時，水量根據所加米的杯數而定。
例：煮2.5量杯的米時，需加水至標注有”粥CUP”的水位刻度線“2.5”處；（注：建議按1杯米配8杯水的配比進行煮粥，另可根據個人喜好和所用米質的不同，適當調整加水量。加米方式：所加水量為液面平CUP側刻度線水）

	1cup	1.5cup	2cup	2.5cup
白粥	1量杯	1.5量杯	2量杯	2.5量杯
雜糧粥	0.8量杯	1.0量杯	1.5量杯	2量杯
燜燉	300mL的料汁＋食物			

②使用燉湯功能時，水量應控制在內鍋“1.0”最低水位-最高水位MAX之間。
溫馨提示：
1.燉煮食物或煮粥時，請參照內鍋壁上的刻度線控制好食物量及水量，因過多或過低都會造成燉煮時湯汁外溢或容易造成煮幹、燒糊等現象。
2.“白粥”、”雜糧粥” 烹飪過程選擇“加料再沸”功能時，需開蓋對食材適當攪拌，防止火力過猛溢粥。

2.用幹布將內鍋外壁擦乾後放入機器中，蓋上內鍋蓋。
①插好電源線，接通電源，顯示幕點亮，表示產品已處於待機狀態。
②功能選擇，按鍵操作方法及狀態說明
a.預約定時+功能定時+口感+保溫

II.Product Features
1.High Temperature Resistant ceramic inner pot can be used on the open flames.
2.Arc-bottom inner container ensures the stewing uniformly and convenient to scoop soup or Clean.
3.Adjustable soup flavors with large control panel
4.One-key “Re-Boiling with ingredients added” function.
5.Equipped with “Braise” and a variety of functions of cooking soup and porridge, satisfying more cooking needs.
6.Double-layer thermal-insulation housing structure, with advantages of energy-gatheringand scald-prevention.

III. Technical specifications

Product	Micro-Computer Electric Stewpot
Model	DGD40-40LD
Power	120V~60Hz
Rated Power	600W
Rated Capacity	4.0L
Dimensions	312mm×289mm×294mm

IV. Parts
1. Main Components

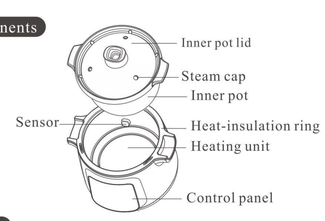

2.Control panel

17.If the power is off halfway, the product will return to the standby state, and it needs to be re-set tocontinue the operation.
18.Adding boiling water to cook porridge cannot shorten the cooking time, but will only make the porridge over-cooked, so please be careful.
19.When the product is used for the first time, the heating elements may give out a slight odor; besides, the screen may flash when it is just switched on, so please pull out the plug to switch it on again; these two phenomena are normal, so please rest assured when using it.
20.Please keep the sensors and the surface of the aluminum pot clean and smooth, or the effect of using the product will be affected.
21.The inner pot and its lid are breakable parts, so prevent them from colliding with hard objects and falling down from a height, causing breaking damage.
22.When stewing porridge or other food, the proportion of food to water cannot be too high, or boiling dry and burn dry will occur, which will affect the service life of the ceramic inner pot under serious damage condition.
23.Extreme caution must be used when moving an appliance containing hot liquids.
24.WARNING: Spilled food can cause serious burns. Keep the appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
25.To protect against electrical shock do not immerse cord, plugs, or main body of this product in water or other liquid.
26.Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
27.Do not operate this product with a damaged cord or plug or after the product malfunctions or has been damaged in any manner. Return product to the nearest authorized service facility for examination, repair, or adjustment.
28.The use of accessory attachments not recommended by the product manufacturer may cause injuries.
29.Do not use outdoors.
30.Do not let cord hang over edge of table or counter, or touch hot surfaces.
31.Do not place on or near a hot gas or electric burner, or in a heated oven.
32.Extreme caution must be used when moving this product containing hot liquids.
33.Always attach plug to product first, then plug cord into the wall outlet. To disconnect, turn any control to“off”, then remove the plug from wall outlet.
34.Do not use product for other than intended use.
35.CAUTION - Risk of Electric Shock. Cook only in removable container.
36.Short power-supply cord instruction:
a)A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
b)Extension cords are available and may be used if care is exercised in their use.
c)If extension cord is used:
d)The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
e)The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and.
f)Extension cord should be grounding-type 3-wire cord.

Save these instructions.

按動“預約”鍵，默認時間2小時，可根據需求按動“小時”、“分鐘”調整預約時間。

按動“功能/選擇”鍵，選擇所需功能，可根據需求按動“小時”、“分鐘”調整燉煮時間。

按動“口感”鍵 清香 Mild 標準 Normal 濃香 Thick 口感燈在“清香”、“標準”、“濃香”之間切換

選定功能6秒後，產品進入工作狀態。

燉煮過程如果加入其它食材，可按“加料再沸”功能，適當攪拌，讓食材再次沸騰。

燉煮完成後轉入保溫功能，如若保溫過程對食材有沸騰需求，可重複按“加料再沸”直到沸騰為止。

六、保养和维护
内锅保养小贴士
新内锅使用前，最好用淘米水煮一下，也可以先煮一次粥，这样可以堵塞住内锅细微的孔眼，防止渗水，延长使用寿命。

1.清洗方法
①.产品清洗前应先拔掉电源线，待冷却后再进行清洗。
②.切勿将电源线、产品整体浸入水中或冲洗，以免电器进水，产生故障，影响安全使用，请勿将刚炖煮后的陶瓷内锅立即放入水中清洗，以免造成破裂。
③.可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。
④.陶瓷件可用洗洁精和海绵清洗，请勿使用硬质钢丝清洗，以免损坏表面。

2.保存方法
●产品长时间不使用时，请清洁擦净后，装入包装箱中，应存放于通风干燥的地方,以免受潮，影响使用。
●本产品中含有部分可单独拆卸的零部件，为确保安全，请在拆卸或清洗后给予正确装回原位或进行妥善保管、存放，以免丢失或小孩误食。
●蒸汽盖可以取下清洗。如果蒸汽盖不慎遗失，可用随机赠送的蒸汽盖替换。

3.故障及排除

序号	故障现象	故障原因	排除方法
①	不通电	电源线插头没插好	检查电源线插头是否插紧到位
		产品故障	请送指定维修点检修
②	显示E1或E2	产品故障	请送指定维修点检修

4. 非专业人员切勿拆卸、修理本产品。
5. 如果电源软线损坏，必须用专用软线或从我司供销商或维修部买到的专用组件来更换。
6.当产品出现故障且无法排除时，切勿自行维修，请与我司设立在当地的特约维修网点或本公司客户服务部联系解决。
7.本产品中的陶瓷件为易碎品，不在保修范围内，请小心使用。

CONTENTS
I. Important Safeguards----------8
II. Product Features----------10
III.Technical specifications----------10
IV. Parts ----------10
V. How to use ----------11
VI. Maintenance and repair----------14

I.Important Safeguards
When using electrical appliances, basic safety precautions should always be followed including the following:
1.READ ALL INSTRUCTIONS.
2.AC power voltage should be in accordance with the voltage indicated on the nameplate.
3.For your safety, use the power source with ground protection.
4.Do not place the machine near or at the surfaces of the items that are flammable and explosive; do notput the machine at the places that are wet or near other heat sources to avoid failures and danger.
5.When using this product, it should be placed at a solid platform out of children's reach and close supervision is necessary when this product is used by or near children.
6.When the product is at work, it will produce steam, do not let the face or hands near the steam vent to avoid scalding; the items that could be harmed by steam should not be put over the product; do not use the rag or similar items to cover the steam vents so as to avoid accidents and product failure.
7.When the product is in use or after use for a while, its upper lid and outer shell are very hot, so do not touch them in case of getting a burn. Use handles or knobs.
8.Never add cold water into the inner pot in the heating process, and do not immediately put the inner pot or its cap into water when the stewing is just over, in case they will crack due to shock cooling and shock heating.
9.When there is no food inside the inner pot, be sure not to switch the power on to burn dry. Pull out the power plug when not in use.
10.If dry burn occurs when the product is in use, please switch the power off immediately, and make the product keep natural cooling. In the cooling process, you cannot add water into the inner pot or move it out of the pot body; otherwise, it will cause damage to the ceramic inner pot.
11.The water amount added should be between the minimum and maximum water levels. Too little or too much water addition may both lead to malfunction and danger.
12.When plug in the power cord you must fully insert it in to ensure the good contact.
13.The power plug and socket should be kept dry and it is prohibited that inserting and pull the power plug with wet hands to prevent from electric shock.
14.Do not move the product when it is powered on and in use.
15.When the product is powered on and in use, its inside may emit a slight sound of “tock, tock”, which is the sound of the heat adjustment in the appliance and it does not affect the normal operation.
16.Press the “Warm/Cancel” key when in working condition, and the product will return to standby state,i.e., the screen displays “00:00”.