版本：CORELDRAW X6
日期：2018.11.15
编号：FD20D・加拿大高朋・01・MG-03B
材质：100g亚太纸
尺寸：142mm×210mm

# TONZE

# 微電腦電飯鍋
Micro-computer Rice Cooker

# 使用說明書
Operation Instruction

型 號：FD20D
Model:

圖案有偏差時，以實物為准
The pictures are for reference only, subject to our available products.

使用產品前，請仔細閱讀本使用說明書。
請妥善保管本使用說明書
Please read the Operations Instructions carefully before using products.
Please keep it cautiously after reading for future reference.
使用時，請按本說明書進行操作。 本產品僅限家庭或類似場所使用。
Please operate it according to this instruction when using this product.This product is limited to household or similar application.



## 目錄

一.注 意 事 項 ---------- 1
二.產 品 性 能 特 點 ---------- 1
三.主 要 技 術 參 數 ---------- 2
四.部 件 名 稱 介 紹 ---------- 2
五.使 用 方 法 ---------- 3
六.保 養 和 維 護 ---------- 8

## 一、注意事項

1.請閱讀所有的使用說明
2.請使用與銘牌所標電壓值一致的交流電源。
3.請使用有合格保護接地的電源，以確保人身安全。
4.不要放在易燃易爆的物品附近或表面使用；不要放在潮濕或靠近其它熱源的的地方使用，以免發生故障和危險。
5.使用本產品時應放置在兒童接觸不到的穩固平臺上。
6.產品工作時會冒出蒸汽，切勿將臉或手靠近蒸汽口，以免燙傷；怕蒸汽的物體不要置於本產品上方；切勿將抹布或類似物品覆蓋在蒸汽口上，以避免引發意外或導致產品故障。
7.產品工作時，外殼溫度較高，請勿觸摸，以免燙傷。
8.本陶瓷內鍋只限於在本產品中加熱，不要將陶瓷內鍋直接放在明火上加熱或置於其它爐具上進行加熱。並避免陶瓷件在較熱時接觸冷水，以免發生爆裂。
9.加水量應在最低水位線與最高水位線之間。加水過少或過多，都可能出現故障和危險。
10.插入電源線時，必須插到底，以確保接觸良好。
11.應經常保持電源插頭、插座的乾燥，禁止用濕手插拔電源插頭，以防止觸電。
12.產品在通電工作時，請勿移動。
13.產品在通電工作時，內部可能會發出輕微的“嗒、嗒”響聲，這是器具調整火力的聲音，不影響正常工作。
14.在工作狀態下按動“保溫/取消”鍵，產品將回到待機狀態，即顯示幕顯示“00:00”。如果產品正處於工作狀態還沒自動完成整個加熱過程時，中途按“保溫/取消”鍵強制停止加熱後，又想再啟動該功能繼續加熱時，原陶瓷內鍋裡面的食物可能會因多次加熱而引致燒焦或出現其它異常現象，請在日常使用過程中儘量避免此種情況的操作。
15.若中途斷電，產品將回到待機狀態，需重新設置，才能繼續工作。
16.加開水煮飯/煮粥並不能縮短燉煮時間，只會使飯夾生或粥煮得更爛，請注意使用。
17.產品工作完成後，此時陶瓷內鍋的溫度很高，請不要接觸陶瓷內鍋，防止燙傷。
18.產品第一次使用時，發熱體可能發出輕微異味；另顯示幕在剛通電時可能顯示閃爍，請拔下插頭後重新通電；此兩種現象屬正常現象，請放心使用。
19.陶瓷內鍋為易碎器皿，慎防與硬物碰撞及從高處跌落，造成破碎損壞。
20.燉煮食物或煮粥時，食物對水或米對水的比例不能過高，否則容易造成煮幹、燒糊等現象，嚴重時將會影響陶瓷內鍋的使用壽命。
21.鋁鍋請勿注水，使用前將陶瓷內鍋外側（尤其是底部）及電飯煲內側之水珠、米粒等雜物擦拭乾淨。確認鋁鍋內沒有雜物後，再將陶瓷內鍋放入，輕壓到位後請稍為左右旋轉，使陶瓷內鍋底與鋁鍋接觸良好。
22.請將上蓋確實扣緊，以免電飯煲因密封不良而影響燉煮及保溫效果。禁止在開蓋狀態和沒有陶瓷內鍋的情況下通電使用，以免引起保險絲熔斷或發生故障及其他事故。
23.取出陶瓷內鍋前，務必先將電源插頭拔掉。

**請保存此使用說明書**

## 二、產品性能特點

1.冰焰全瓷內鍋，兩側導角圓弧設計，聚熱儲能，煮飯不粘；
2.內鍋採用新釉層技術，不粘性能更強，清洗更便利；
3.懸浮碗型加熱系統，貼緊內鍋，實現全方位內鍋環繞加熱；
4.五大特色功能，特別添加煲仔飯、嬰兒粥健康輔食功能；
5.密封防溢內蓋，煮粥、煮湯不溢出，牢牢鎖住營養美味；
6.可拆卸內蓋及蒸汽罩，清洗方便，細菌無處可藏。



## 三、主要技術參數

| 產品名稱 | 微電腦電飯煲 |
|---|---|
| 產品型號 | FD20D |
| 電　　源 | 120V～60Hz |
| 額定功率 | 350W |
| 容　　量 | 2.0L |
| 外觀尺寸（長×寬×高） | 304mm×254mm×217mm |

## 四、部件名稱介紹

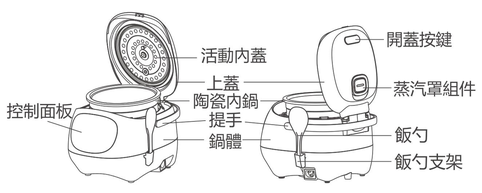


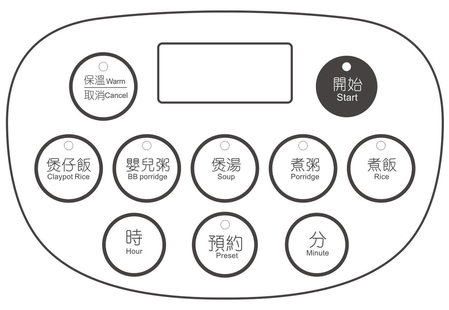




| Sn. | Failure phenomenon | Failure causes | Troubleshooting methods |
|---|---|---|---|
| ④ | Too long time for Rice and porridge cooking | Too much water added | Add water based on the marked scale of water level |
| | | There is smudginess or foreign material at the bottom of the ceramic inner pot | Clean up with a wet towel |
| ⑤ | Cooking, porridge or stew when Overflowing in Rice, porridge cooking or soup stewing | Too much water and rice added | Add water and rice according to the requirementsof the marked scale of water level |
| ⑥ | Function failure | Power supply interference | Power on again after unplug the power plug for 20 seconds |
| ⑦ | Display E1 | —— | Please send it to the local franchised service center set up by our company. |
| ⑧ | Display E2 | There is no water inside the ceramic inner pot, which results in dry burn | After the ceramic inner pot cools down, add water and food materials to have them cooked or stewed |
| | | —— | Please send it to the local franchised service center set up by our company. |
| ⑨ | Display E3 | The upper lid is not put in place | Cover the upper lid, and re-set the function to enter into the working state Clean with a wet towel |
| | | —— | Please send it to the local franchised service center set up by our company. |

3.Non-professionals should not remove and repair this product.
4.If the power line is damaged, it must be replaced by the professional staff in the maintenance department or similar department of our company in order to avoid danger.
5.When the product fails and the trouble cannot be ruled out, do not repair by yourself, please contact the local special repair service network set up by our company or contact our customer service department to solve it.
6.The ceramic parts in this product are fragile items, which are not covered within the scope of warranty services, so please use them with care.



## 五、使用方法

### 1.煮飯煮粥之前

①待機狀態：電飯煲通電後，顯示幕顯示“00:00”，此時電飯煲不進行加熱，處於待機狀態。
②量米的方法：
請使用本電飯煲所附量杯正確量米（量米時1CUP= 一平杯，較少或冒尖都會影響煮飯或煮粥效果）

〈 正確方式 〉 〈 錯誤方式 〉

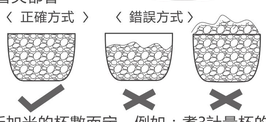

③水量調整方法
煮米飯或煮粥時，水量根據所加米的杯數而定。例如：煮3計量杯的米飯，先把淘洗乾淨的米倒入陶瓷內鍋，加水至標有“飯CUP”側的水位刻度線“3”處。同理，煮1/2計量杯的粥，先把淘洗乾淨的米倒入陶瓷內鍋，加水至標有“粥CUP”側的水位刻度線“1/2”處。

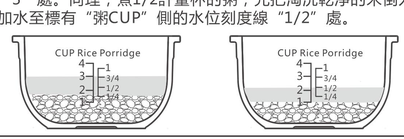


**注意: 根據個人喜好和所用米質的不同，可以適當調整所加的水量。使用“煲湯”功能時的水量請不要超過陶瓷內鍋刻度的最高水位線。**

**溫馨提示：蓋上蓋時用輕微力按壓前部中間位置，當聽到“哢嚓”一聲，說明鍋蓋已蓋好，如圖所示。**

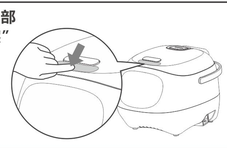



**put into the pot in the cooking process after hearing the 5 times of the prompt tome of “Di-Di-Di”;**
**2. Adding the appropriate amount of peanut oil into the rice when cooking rice can make the rice more delicious;**
**3. It is recommended to use 2 cups of rice when cooking the soup rice, and the maximum amount cannot exceed 3 cups of rice.**

### 7. Warm

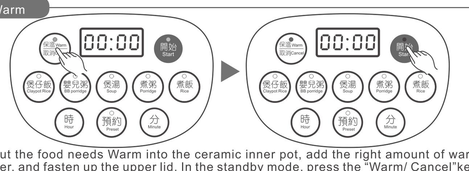

Put the food needs Warm into the ceramic inner pot, add the right amount of warm water, and fasten up the upper lid. In the standby mode, press the “Warm/ Cancel”key, and at this moment the “Warm/Cancel” indicator flashes on, and if press the “Start” key within 6 seconds, the “Warm/Cancel” indicator will turn from flashing into being constantly on. At this moment, the screen displays “00:00”, the two points in the middle part flash on and the timing “Start”s, indicating that the rice cooker “Start”s to enter into the Warm working state; otherwise, it will return to the standby state in 6 seconds, and you need to re-operate it. If there are other functions in the operation or working state, then at this moment the “Warm/Cancel” key plays the role of cancelling. The maximum time of Warm is 8 hours, and it will turn to the standby state in 8 hours.

**Tips: In order to prevent food from spoiling when in the period of Warm, it is recommended that the Warm time should not exceed 8 hours.**

### 8. Preset time.

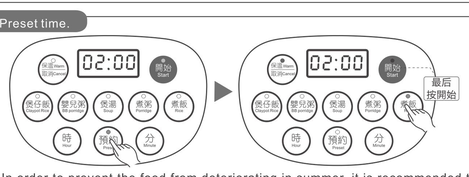


In order to prevent the food from deteriorating in summer, it is recommended that the Preset time should not be too long. When using the function of “Preset” in Rice, pay attention to that the amount of water added should be slightly more than that of the normal Rice. In the power-on state, the screen displays “00:00”.Press the “Preset “key, the default time is 2 hours, the screen displays “02:00”, and the time can be adjusted. Each time press the “Hour” key, the number increases by “1” (1 hour), which can progressively increase to the maximum Preset time of “23”. If press it again it will return to zero, which will repeat as a cycle; each time press the “Minute” key, the number increases by “5” (5 minutes), which can progressively increase to the maximum Preset time of “55”.

If press it again it will return to zero, which will repeat as a cycle. After setting the presetting time, press the function keys (Claypot Rice, Baby porridge, Soup, Porridge, Rice), and then press the “Start” key, the corresponding indicator of the selected function, the Preset indicator and the “Start” key indicator turn from flashing to being constantly on, the screen displays the set time and performs the countdown,



If press it again it will return to zero, which will repeat as a cycle. After setting the presetting time, press the function keys (Claypot Rice, Baby porridge, Soup, Porridge, Rice), and then press the “Start” key, the corresponding indicator of the selected function, the Preset indicator and the “Start” key indicator turn from flashing to being constantly on, the screen displays the set time and performs the countdown, indicating that the Preset is successful. After the completion of your Preset time, the rice cooker will “Start” the operation of your designated function. After the function “Start”s to work, the Preset indicator is off, and the corresponding indicator of the selected function and the “Start” indicator continue being constantly on (all operations must be completed within 6 seconds; otherwise, you need to re-operate it).

## VI. Repair and maintenance

### 1.Cleaning methods:

①The plug must be unplugged after the product is used, and do not “Start” the cleaning until the cooker body completely cools down.
②Adopt the kitchen detergent as the cleaning agent.
③Do not use lacquer thinner, gasoline, cleanser, hard brush, stainless steel wire ball, etc. to wipe the cooker.
④Use clean soft cloth or towel to wipe the ceramic inner pot, but do not use hard steel wool to scrub it in the cleaning process to prevent the damage to the surface. Except the ceramic inner pot, mobile inner cap and steam hood components, it is forbidden to soak or rinse the power cord and the whole cooker body in water, in case that the water enters into the electric components to cause failure, affecting the safe use.
⑤The shell of the pot should not be soaked or rinsed with water, and it can be wiped with soft wet cloth (wringed dry).
⑥After each use, please remove the mobile inner cap and the steam hood components and have them cleaned up.
⑦Timely clean the cooker after use to prevent that some difficult-to-remove dirt firmly attaches to the surface of the components.
⑧Please clean and pack the product into the packing box when it is out of use for a long time. It should be stored in a dry and ventilated place to prevent the cooker from damping and affecting the normal use.

### 2.Trouble Shooting

| Sn. | Failure phenomenon | Failure causes | Troubleshooting methods |
|---|---|---|---|
| ① | Power failure (the screen fails to turn on.) | The plug of the power line is not properly connected. | Check whether the power cord is properly plugged in place. |
| ② | Check whether the power cord is properly plugged in place. | Too little water added | Adjust the amount of water added |
| | | There is smudginess or foreign material at the bottom of the ceramic inner pot | Clean up with a wet towel |
| | | The upper lid is not fastened down. | Fasten up the upper lid |
| ③ | Bottom burn in Rice and porridge cooking | Too little water added | Adjust the amount of water added (according to the different water-absorbing property of rice, increase or decrease the water amount added) |
| | | The voltage is too high | Use household stabilized voltage power supply |



①Wash the rice with other containers, put the rice into the ceramic inner pot, add water in proportion, and flatten the rice to make it evenly distributed in the ceramic inner pot.
②Dry the outside surface and bottom of the ceramic inner pot with a piece of dry and soft cloth, put it into the cooker body, slightly press it in place, rotate it leftwards and rightwards a few times to make it closely cling to the aluminum pot, and finally fasten up the upper lid (when you hear the “click” sound, it indicates that the lid has been covered in place).
③Plug power cord into the socket, you will hear a long “beeping” sound. The “Start” key on the operation panel flashes on and the screen displays “00:00”, indicating that the power is turned on and the rice cooker is in the standby state.
④Press the “Baby Porridge Cooking” function, the “Baby Porridge Cooking” indicator and the “Start” indicator flash on at the same time. The screen flashes and displays “01：30” (the default time is 1 hour 30 minutes). At this moment, you can press “Hour” and “Minute” keys to adjust the time of baby porridge cooking, with the minimum time of 1 hour and maximum time of 3 hours, and in the operation process, you can adjust the time); Press the “Start” key again within 6 seconds after selecting the time, the “Baby Porridge Cooking” indicator and the “Start” indicator turn from flashing to being constantly on, the screen displays the selected time and “Start”s the countdown, and the two points in the middle flash on, indicating that the rice cooker “Start”s to enter into the full-automatic baby porridge cooking working state; otherwise, it will return to the standby state in 6 seconds, and you need to re-operate it.
⑤After the baby porridge cooking is completed, it automatically turns to the heat preservation. At this moment, the Warm indicator is on, and the screen displays the timing.

### 6. Claypot Rice

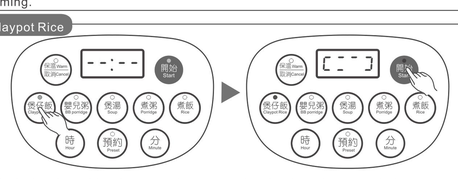

①Wash the rice with other containers, put the rice into the ceramic inner pot, add water in proportion, and flatten the rice to make it evenly distributed in the ceramic inner pot.
②Dry the outside surface and bottom of the ceramic inner pot with a piece of dry and soft cloth, put it into the cooker body, slightly press it in place, rotate it leftwards and rightwards a few times to make it closely cling to the aluminum pot, and finally fasten up the upper lid (when you hear the “click” sound, it indicates that the lid has been covered in place).
③Plug power cord into the socket, you will hear a long “beeping” sound. The “Start” key on the operation panel flashes on and the screen displays “00:00”, indicating that the power is turned on and the rice cooker is in the standby state.
④Press the “Claypot Rice” function, the “Claypot Rice e” indicator and the “Start” indicator flash on at the same time. Press the “Start” key again within 6 seconds, the “Claypot Rice” indicator and the “Start” indicators turn from flashing to being constantly on, the screen displays “ [ - - ] ” which is in dynamic rotation, indicating that the rice cooker “Start”s to enter into the full-automatic Rice working state; otherwise, it will return to the standby state in 6 seconds, and you need to re-operate it.
⑤After the Claypot Rice e is completed, it automatically turns to the heat preservation. At this moment, the Warm indicator is on, and the screen displays the timing.

**Tips:**
**1. For those food materials hard to be well-cooked, such as meat, beans, etc., it is proper to have them put into the pot with rice at the same time; for those food materials easy to be well-cooked, such as vegetables, you can have them**



### 2.煮飯

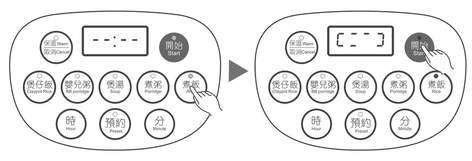

①.用其它容器將米洗淨，倒入陶瓷內鍋中，按比例加入清水，攤平大米使之在陶瓷內鍋中分佈均勻。
②.用幹潔的軟布擦乾陶瓷內鍋週邊和底部，將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位，左右旋轉幾下，使其與鋁鍋緊貼，蓋緊上蓋 (當聽到“哢嚓”一聲，說明鍋蓋已蓋好)。
③.將電源線插入插座上，長響“啪”一聲，操作面板上的開始鍵指示燈閃亮，顯示幕顯示“00：00”，表示已接通電源，電飯煲處於待機狀態。
④.按“煮飯”功能，“煮飯”指示燈和“開始”指示燈同時閃亮，6秒鐘內再按“開始”鍵，“煮飯”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示“[ - - ]”動態旋轉，表示電飯煲開始進入全自動煮飯工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。
⑤.待飯煮熟後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。
⑥.轉保溫後，請繼續燜煮15分鐘左右，開蓋後再均勻翻松米飯，可使米飯更加可口。

### 3.煮粥

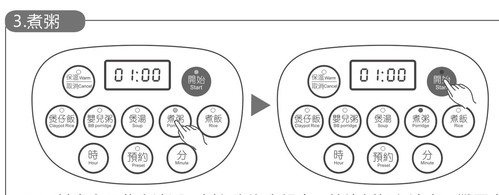

①. 用其它容器將米洗淨，倒入陶瓷內鍋中，按比例加入清水，攤平大米使之在陶瓷內鍋中分佈均勻。
②. 用幹潔的軟布擦乾陶瓷內鍋週邊和底部，將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位，左右旋轉幾下，使其與鋁鍋緊貼，蓋緊上蓋 (當聽到“哢嚓”一聲，說明鍋蓋已蓋好)。
③. 將電源線插入插座上，長響“啪”一聲，操作面板上的開始鍵指示燈閃亮，顯示幕顯示“00：00”，表示已接通電源，電飯煲處於待機狀態。
④. 按“煲仔飯”功能，“煲仔飯”指示燈和“開始”指示燈同時閃亮，6秒鐘內再按“開始”鍵，“煲仔飯”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示“[ - - ]”動態旋轉，表示電飯煲開始進入全自動煮煲仔飯工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。
⑤. 待飯煮熟後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。

**溫馨提示：**
**1.較慢熟的食材，如肉類、豆類宜和米同時放入鍋中；較快煮熟食材，如蔬菜類可以等煮飯過程中提示五組“Di-Di-Di”聲才加入鍋內；**



③.將電源線插入插座上，長響“啪”一聲，操作面板上的開始鍵指示燈閃亮，顯示幕顯示“00：00”，表示已接通電源，電飯煲處於待機狀態。
④.按“煮粥”功能，“煮粥”指示燈和“開始”指示燈同時閃亮，顯示屏閃亮顯示“01：00”(默認時間為1小時)，此時可以按動“時”、“分”調整煮粥時間，最低為50分鐘，最長為2小時(工作過程中可調整時間)；選定時間後6秒鐘內再按“開始”鍵，“煮粥”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示選定時間並進行倒計時，中間兩點閃亮，表示電飯煲開始進入全自動煮粥工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。
⑤.倒計時完成後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。

### 4.煲湯

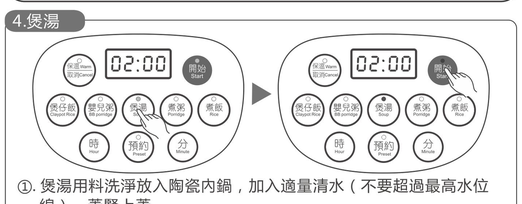

①. 煲湯用料洗淨放入陶瓷內鍋，加入適量清水（不要超過最高水位線），蓋緊上蓋。
②. 按“煲湯”功能，“煲湯”指示燈和“開始”指示燈同時閃亮，顯示屏閃亮顯示“02：00”(默認時間為2小時)，此時可以按動“時”、“分”調整煲湯時間，最低為1小時30分鐘，最長為4小時(工作過程中可調整時間)；6秒鐘內再按“開始”鍵，“煲湯”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示選定時間並進行倒計時，中間兩點閃亮，表示電飯煲開始進入煲湯工作狀態。
③.倒計時完成後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。

### 5.嬰兒粥

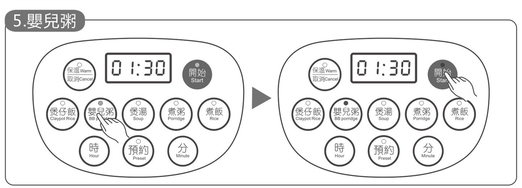



③Plug power cord into the socket, you will hear a long “beeping” sound. The “Start” key on the operation panel flashes on and the screen displays “00:00”, indicating that the power is turned on and the rice cooker is in the standby state.
④Press the “Porridge” function, the “Porridge” indicator and the “Start” indicator flash on at the same time. The screen flashes and displays “01:00” (the default time is 1 hour). At this moment, you can press “Hour” and “Minute” keys to adjust the time of porridge cooking, with the minimum time of 50 minutes and maximum time of 2 hours, and in the operation process, you can adjust the time); Press the “Start” key again within 6 seconds after selecting the time, the “Porridge Cooking” indicator and the “Start” indicator turn from flashing to being constantly on, the screen displays the selected time and “Start”s the countdown, and the two points in the middle flash on, indicating that the rice cooker “Start”s to enter into the full-automatic porridge cooking working state; otherwise, it will return to the standby state in 6 seconds, and you need to re-operate it.
⑤After the countdown is completed, it automatically turns to the Warm. At this moment, the Warm indicator is on, and the screen displays the timing.

### 4.Soup Cooking

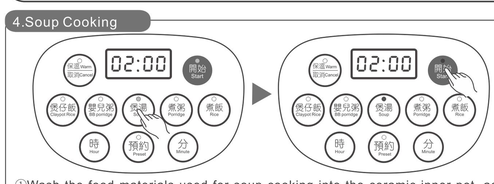

①Wash the food materials used for soup cooking into the ceramic inner pot, add appropriate amount of water (not exceeding the maximum water line), and fasten up the upper lid.
②Press the “Soup” function, the “Soup” indicator and the “Start” indicator flash on at the same time. The screen flashes and displays “02：00” (the default time is 2 hours). At this moment, you can press “Hour” and “Minute” keys to adjust the time of soup cooking, with the minimum time of 1 hour and 30 minutes and maximum time of 4 hours, and in the operation process, you can adjust the time); Press the “Start” key again within 6 seconds, the “Soup” indicator and the “Start” indicator turn from flashing to being constantly on, the screen displays the selected time and “Start”s the countdown, and the two points in the middle flash on, indicating that the rice cooker “Start”s to enter into the full-automatic Soup working state.
⑤After the countdown is completed, it automatically turns to the heat preservation. At this moment, the Warm indicator is on, and the screen displays the timing.

### 5. Baby Porridge

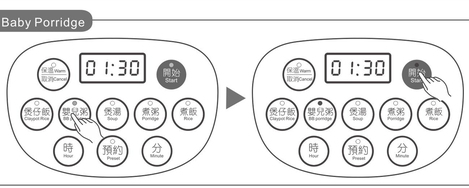



### 2. Rice

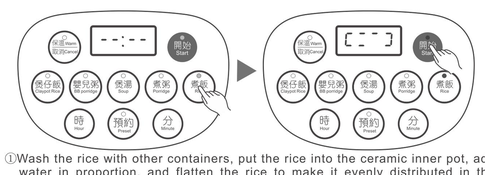

①Wash the rice with other containers, put the rice into the ceramic inner pot, add water in proportion, and flatten the rice to make it evenly distributed in the ceramic inner pot.
②Dry the outside surface and bottom of the ceramic inner pot with a piece of dry and soft cloth, put it into the cooker body, slightly press it in place, rotate it leftwards and rightwards a few times to make it closely cling to the aluminum pot, and finally fasten up the upper lid (when you hear the “click” sound, it indicates that the lid has been covered in place).
Plug power cord into the socket, you will hear a long “beeping” sound. The “Start” key on the operation panel flashes on and the screen displays “00:00”, indicating that the power is turned on and the rice cooker is in the standby state.
③Press the “Rice” function, the “Rice” indicator and the “Start” indicator flash on at the same time. Press the “Start” “key again within 6 seconds, the “Rice” indicator and the “Start” indicators turn from flashing to being constantly on, the screen displays“ [ - - ] ” which is in dynamic rotation, indicating that the rice cooker “Start”s to enter into the full-automatic Rice working state; otherwise, it will return to the standby state in 6 seconds, and you need to re-operate it.
④After the Rice is completed, it automatically turns to the Warm. At this moment, the Warm indicator is on, and the screen displays the timing.
⑤After it turns to the Warm, please continue to simmer it for about 15 minutes. Evenly stirring the rice loose after opening the lid can make the rice more delicious.

### 3.Porridge Cooking

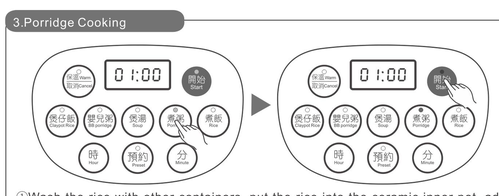

①Wash the rice with other containers, put the rice into the ceramic inner pot, add water in proportion, and flatten the rice to make it evenly distributed in the ceramic inner pot.
②Dry the outside surface and bottom of the ceramic inner pot with a piece of dry and soft cloth, put it into the cooker body, slightly press it in place, rotate it leftwards and rightwards a few times to make it closely cling to the aluminum pot, and finally fasten up the upper lid (when you hear the “click” sound, it indicates that the lid has been covered in place).



①. 用其它容器將米洗淨，倒入陶瓷內鍋中，按比例加入清水，攤平大米使之在陶瓷內鍋中分佈均勻。
②. 用幹潔的軟布擦乾陶瓷內鍋週邊和底部，將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位，左右旋轉幾下，使其與鋁鍋緊貼，蓋緊上蓋(當聽到“哢嚓”一聲，說明鍋蓋已蓋好)。
③.將電源線插入插座上，長響“啪”一聲，操作面板上的開始鍵指示燈閃亮，顯示幕顯示“00：00”，表示已接通電源，電飯煲處於待機狀態。
④.按“嬰兒粥”功能，“嬰兒粥”指示燈和“開始”指示燈同時閃亮，顯示幕閃亮顯示“01：30”(默認時間為1小時30分鐘)，此時可以按動“時”、“分”調整煮粥時間，最低為3小時(工作過程中可調整時間)；選定時間後6秒鐘內再按“開始”鍵，“嬰兒粥”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示選定時間並進行倒計時，中間兩點閃亮，表示電飯煲開始進入全自動煮嬰兒粥工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。
⑤.待嬰兒粥煮熟後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。

### 6.煲仔飯

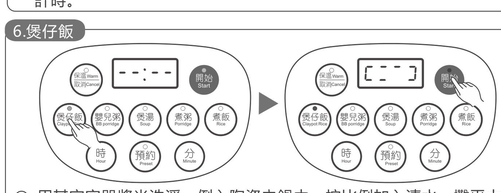

①. 用其它容器將米洗淨，倒入陶瓷內鍋中，按比例加入清水，攤平大米使之在陶瓷內鍋中分佈均勻。
②. 用幹潔的軟布擦乾陶瓷內鍋週邊和底部，將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位，左右旋轉幾下，使其與鋁鍋緊貼，蓋緊上蓋 (當聽到“哢嚓”一聲，說明鍋蓋已蓋好)。
③. 將電源線插入插座上，長響“啪”一聲，操作面板上的開始鍵指示燈閃亮，顯示幕顯示“00：00”，表示已接通電源，電飯煲處於待機狀態。
④. 按“煲仔飯”功能，“煲仔飯”指示燈和“開始”指示燈同時閃亮，6秒鐘內再按“開始”鍵，“煲仔飯”指示燈和“開始”指示燈由閃亮變為長亮，顯示幕顯示“[ - - ]”動態旋轉，表示電飯煲開始進入全自動煮煲仔飯工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。
⑤. 待飯煮熟後，自動跳至保溫檔，此時保溫指示燈亮，顯示幕顯示計時。

**溫馨提示：**
**2.煮飯時加入適量花生油可使米飯更加美味；**
**3.建議煮煲仔飯用2杯米米量，最高不要超過3杯米。**

### 7.保溫

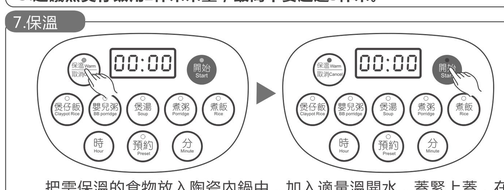

把需保溫的食物放入陶瓷內鍋中，加入適量溫開水，蓋緊上蓋，在待機狀態下按“保溫/取消”鍵，此時“保溫/取消”指示燈閃亮，6秒鐘內再按“開始”鍵，“保溫/取消”指示燈由閃亮變為長亮，此時顯示幕顯示“00：00”，中間兩點閃亮並進行計時，表示電飯煲開始進入保溫工作狀態；否則，6秒鐘後回到待機狀態，需重新操作。若有其他功能操作或工作中，此時“保溫/取消”鍵起取消作用。保溫時間最長為8小時，8小時後轉為待機狀態。

**溫馨提示：為避免保溫時食物變味，建議保溫時間不要超過8小時。**

### 8.預約

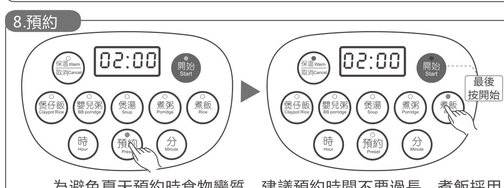


為避免夏天預約時食物變質，建議預約時間不要過長，煮飯採用“預約”功能時，注意加水量要稍微多於正常煮飯的水量。通電狀態下顯示幕顯示“00：00”，按動“預約”鍵，默認為2小時，顯示幕顯示“02：00”，時間可進行調節，每按動一次“時”鍵，數字增加“1”（1小時），依次疊加最多能預約到“23”，再按動則歸零，重複迴圈；每按動一次“分”鍵，數字增加“5”（5分鐘），依次疊加最多能預約到“55”，再按動則歸零，重複迴圈。設定好預約時間後，再按功能鍵（煲仔飯、嬰兒粥、煲湯、煮粥、煮飯），然後再按開始鍵，所指功能對應的指示燈、預約指示燈、“開始”鍵指示燈由閃亮變為長亮，顯示幕顯示所設置時間並進行倒計時，表示預約成功，電飯煲將在您預約好的時間結束後，才開始進行所指定功能工作，功能開始工作後，預約指示燈不亮，所選功能對應的指示燈、“開始”鍵指示燈繼續長亮(所有操作必須在6秒鐘內完成；否則，需重新操作)。

## V. How to use

### 1. Before cooking rice or cooking porridge

①Standby state
After the rice cooker is powered on, the screen displays “00:00”.
At this moment, the rice cooker does not perform the heating but is in a standby state.

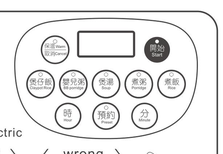

②Method of measuring rice
Please use the measuring cup attached to this electric cooker to measure and take the correct amount of rice (when measuring rice, 1CUP = a flat cup, less or mores rice will affect the effect of cooking rice or porridge)

〈 correct 〉 〈 wrong 〉

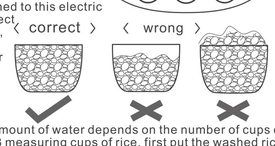

③Water amount adjustment method
When cooking rice or porridge, the amount of water depends on the number of cups of rice added. For example: if cooking 3 measuring cups of rice, first put the washed rice into the ceramic inner pot, and add water to the scale mark of “3” on the side marked “Rice CUP” s. Similarly, if cooking 1/2 measuring cup of rice for porridge, first put the washed rice into the ceramic inner pot, and add water to the scale mark of “1/2” on the side marked “Porridge CUP”.

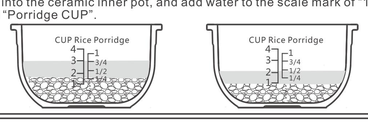


**Note:**
**According to your personal preferences and different qualities of the rice used, you can properly adjust the amount of water added.**
**When using the “Soup” function, please do not add water exceeding the maximum water level of the inner pot scale.**

**Tips: When covering the upper lid, slightly press the middle position of the front part, and when you hear “click” sound, it indicates that the lid has been covered in place.**





inside of the rice cooker. After making sure that there are no debris in the aluminum pot components, place the ceramic inner pot into the cooker, slightly rotate left and right after gently pressing it in place, making the bottom of the ceramic inner pot contact with the aluminum pot components well.
22.Make sure the upper lid is securely fastened up when in use, in case of affecting the cooking and heat-preserving effect due to poor sealing. Do not switch the power on and use the cooker in the uncapping state and when the ceramic inner pot is not inside the cooker, in order to prevent the blown fuse, failures or other accidents.
23.Be sure to unplug the power plug first before taking out the ceramic inner pot.

**Save these instructions.**

## II. Product Features

1.Ice-flame all-ceramic inner pot with two-side guide-angle arc design, having the advantage of gathering and storing heat and being non-stick when cooking;
2.The inner pot adopts a new glaze-layer technology, with stronger non-stick performance and more convenient cleaning operation;
3.The suspending-style heating system closely contacts with the inner pot, achieving a full range of heating surrounding the inner pot;
4.Having five major featured functions, especially adding the functions of soup rice and the baby porridge for healthy complementary food;
5.The sealed anti-overflow inner cap prevents porridge and soup from overflowing, firmly locking the nutrition and deliciousness;
6.The detachable inner cap and steam hood are easy to clean, with bacteria nowhere to hide.

## III. Technical specifications

| Product Name | Microcomputer Electric Rice Cooker |
|---|---|
| Model | FD20D |
| Power supply | 120V～60Hz |
| Rated power | 350W |
| Rated capacity | 2.0L |
| Dimensions（L×W×H） | 304mm×254mm×217mm |

## IV.Parts

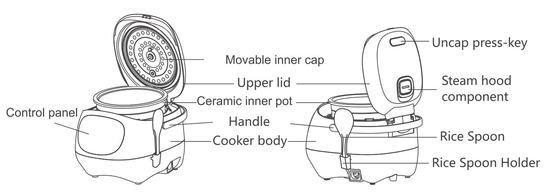




## 六、保養和維護

### 1.清洗方法

①.產品使用後，必須拔掉插頭，然後待鍋體完全冷卻後再開始清洗。
②.洗潔劑必須使用廚房用洗潔劑。
③.不要用香蕉水、汽油、去污粉、硬質刷、不銹鋼絲球等來擦拭。
④.陶瓷內鍋宜用乾淨軟布或毛巾類擦拭，清洗過程中切勿使用硬質鋼絲擦洗，以免損壞表面。除陶瓷內鍋、活動內蓋及蒸汽罩組件外，切勿將電源線、產品整體浸入水中或沖洗，以免電器進水，產生故障，影響安全使用。
⑤ .鍋的外殼切勿水浸或用水淋洗，可用柔軟濕布（擰乾水）抹擦。
⑥.每次使用後請取下活動內蓋及蒸汽罩元件並清洗乾淨。
⑦. 用完後應及時清洗，防止一些污垢緊緊地附著在部件表面而難於去除。
⑧. 產品長時間不使用時，請清潔擦淨，裝入包裝箱中，放於通風和幹燥的地方，以免電飯煲受潮，影響使用。

### 2.保存方法

產品長期不使用時，請清潔乾淨後，裝入包裝箱中，應存放於通風乾燥的地方,以免受潮，影響使用。

### 3.故障及排除

| 序號 | 故障現象 | 故障原因 | 排除方法 |
|---|---|---|---|
| ① | 不通電（顯示屏不亮） | 電源線插頭沒插好 | 檢查電源線插頭是否插緊到位 |
| ② | 飯、粥煮不熟（或夾生） | 加水量太少 | 調整加水量 |
| | | 陶瓷內鍋底部髒汙或有異物 | 用濕毛巾清潔乾淨 |
| | | 上蓋未蓋緊 | 將上蓋蓋緊 |
| ③ | 煮飯、煮粥底部燒焦 | 加水量太少 | 調整加