软件版本：CORELDRAW X6 材质:100克亚太纸 上传日期：2019年05月28日
样稿名称：说明书 美工编号：DGD40-40LD加拿大周阶01-MG-03A

3. Disassembling and repairing of this product must be done by professionals.
4. If power cord is damaged, it must be replaced with special power cord or special components purchased from our supplier or maintenance department.
5. If this product breaks down and cannot be troubleshoot, do not repair it by yourself, and please contact our local franchised maintenance network or customer service department of our company.
6. This product is not under warranty as it is fragile. Please use it carefully.
7. Any other servicing should be performed by an authorized service representative.
8. This product is for household use only.

MAKOTO

微電腦電飯煲
Microcomputer Electric Rice Cooker.
使用說明書
Operation Instruction
型 號 : FD40CB
Model:

圖案有無差異，以實物為準
The pictures are for reference only, subject to our available products.

使用產品前，請仔細閱讀本使用說明書。
請妥善保管本使用說明書
Please read this Instructions carefully before using products.
Please keep it cautiously after reading for future reference.

使用時，請按本說明書進行操作。本產品僅限家庭或類似場所使用。
Please operate it according to this instruction when using this product. This product is limited to household or similar application.

"Rice Cup" 4 on the inner liner, please use the measuring cup attached to the cooker to measure and take 1 cup of warm water. If the water is too little, the rice may be burned, while too much water may make the rice over-cooked. Add appropriate water amount in this proportion to other amounts of cold meal.
2.Do not heat too sticky rice.
3.Adding too little water or not stirring the rice thoroughly may lead to burnt rice or not well-cooked rice.

●Keep Warm
Press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is constantly onafter flashing several times. The screens displays the default Keep Warm time of "0:00" and it progressively increases by the unit of 1 minute, with the maximum Keep Warm timeof "8:00".
Tips:
In order to prevent the rice from spoiling in Keep Warm, it is recommended that the continuous Keep Warm shall not exceed 5 hours.

●Preset Function
Before the function is preset, you must first press the "Preset" key, and the presetting indicator flashes. After pressing the "Hour" and "Minute" keys to set the presetting time, press the "Function" key or Quick Function key. After the function is selected, the cooker starts to enter into the presetting working state of the selected function, and the presetting indicator is constantly on. The screen displays the set presetting time and starts the countdown. After the countdown is over, the product automatically enters into the working state of the selected function.
Tips:
1.The presetting function cannot be applied to Keep Warm.
2.After setting the presetting time, please select the function, or the presetting time is invalid, and the product returns to the standby state.
3.After selecting the function, the presetting key does not work when pressed.(The presetting time key is locked. To change the presetting time, please first press the "Keep Warm/Cancel"key, and then restart the presetting operation).
4.In the condition of high environment temperature, it is recommended not to use the presetting function to prevent the food from spoiling.
5.According to your personal preferences and different rice qualities, you can appropriately increase or decrease the amount of water.

●Timer Function
Only "Porridge", "Soup", "Pottage" and "Flavored Congee" can be set the cooking time at will. After the function is selected, press the "Hour" and "Minute" keys to set the desired operating time. If you want to stop the operation, please press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off, and the product returns to the standby state.After the cooking function is completed, the cooker automatically turns to Keep Warm.

目 錄

一.注意事項----------1
二.產品性能特點----------1
三.主要技術參數----------2
四.部件名稱介紹----------2
五.使用方法----------5
六.保養及維護----------7

一. 注意事項

1.請閱讀所有的使用說明。
2.請使用預防漏電保護的電源插座。
3.請使用有合規接地保護的電源，以確保人身安全。
4.不要放置在熱源部的物品如:燃氣灶或電磁爐；不要放在潮濕或靠近其它熱源的地方使用，以免發生故障和危險。
5.使用本產品時應注意在兒童接觸不到的環境平擺上。
6.產品工作時會發出蒸汽，切勿將插座手蓋設高於1.5公尺。以免燙傷；也請不要將手或臉直接放在蒸汽口上加熱，以避免引發意外或導致產品故障。
7.產品工作時，外殼溫度較高，請勿觸摸，以免燙傷。
8.不要將陶瓷內鍋直接放在明火上加熱，且避免陶瓷內鍋在乾熱時接觸冷水，以免發生意外。
9.插入電源線時，必須插到底，以確保接觸良好。
10.清潔本機外殼時，請先拔掉電源插頭，用濕布擦拭，請勿用手插拔電源插頭，以防止觸電。
11.產品在通電工作時，請勿移動。
12.產品在通電工作時，內部可能會發出輕微的"嗡、嗡"聲響，這是器具調整大力的聲音，不影響正常工作。
13.切次使用時，產品可能會發出一股輕微的氣味，屬正常現象，隨著使用次數的增加會逐步消失。
14.陶瓷內鍋中未盛食物或不放陶瓷內鍋時，切勿通電時間，長時間不使用時請拔下電源插頭。
15.使用時請確認上蓋已經扣緊，以免蒸氣從密封不良而影響飲食及容器加熱，不可在開蓋狀態扣緊內鍋內的鍋內蒸下通電使用，以免引發鍋外或導致產品故障。
16.如果用完水煮蛋，不僅不會縮短煮蛋時間，反而會使煮出來的殼產生失生現象；

17.產品工作完成後，此時陶瓷內鍋的溫度很高，請不要接觸陶瓷內鍋，防止燙傷。
18.超鍋元件請勿注水，使用前將陶瓷內鍋外側（尤其是底部）及電熱元件周之水珠，米粒等異物擦拭乾淨，請認鍋組件沒有損壞物，再將陶瓷內鍋放入，輕度到位後鎖緊左右旋轉，使陶瓷內鍋與鍋組件平接觸良好。
19.請勿使用除了本產品所配套的陶瓷內鍋以外的其他容器作內鍋。
20.請在產品工作前用濕手無到使用，否則易不成外殼會使漏至漏電，而造成要把或損壞。
21.請按本說明書提供的方法正確加入米量和水量，否則一旦煮糜或發出蒸汽口泡出，溢入到插座或本體內部，會造成電源插座產品損壞等現象。
22.日常保養時勿將鍋保組鍋元件表面刮傷，無附給各類腐蝕，以免造成電器外殼表面不良現象。
23.如需在工作過程中開蓋，請注意避免上蓋冷凝水滴滴內蓋流入鍋鍋組件。
24.如果產品正處於工作狀態請注意防止蒸氣從密封不良處噴出，中途按下"取鍋"按鍵強制停止加熱後，又想再啟動功能繼續加熱時，陶瓷內鍋裡面的食物可能會因多次加熱而導致煮成出現其它異常現象。請在日常使用過程中儘量避免此種情況的操作。
25.取出陶瓷內鍋前，務必先將電源插頭拔掉。
26.為了防止觸電，不要用電線，插頭或主機浸泡在水或其他液體中。
27.在不使用和清洗前，請拔插座拔出電線。
28.不要使用已有損壞或變形的插座插頭產品，或在此電源已有故障或有任何損壞時請電使用。應當就近送到有授權的服務點進行檢修。
29.如果使用延長線時，請只使用合規的符可能造成電害。
30.不要在戶外使用。
31.不要讓電線懸掉在桌子或櫥櫃的邊緣；或觸碰熱表面。
32.不要拆開產品用有關產品電源插頭上或鄰近，或在加熱區中。
33.在移動食有熱液體的產品時必須格外小心。
34.如欲先將插頭連接到產品上，然後將插頭插入插上插座。都開連接時，將任何控制轉換為"關閉"，然後從產上的插座上拔出插頭。
35.不將此產品另作他用。
36.注意:帽電風險，只能在可移動的容器中烹調。
37.短電源線說明：
a.) 短電源線是以減少因纏繞或絆倒起長的繩索所引起的風險。
b.) 可使用延長線，並可在使用時使用。
c.) 如果使用延長線：
1.) 延長線的額定電源插座上必須於，或在加熱端中。
2.) 較長的延長線或多插內部，會造成電源插座產品損壞等現象。
3.) 在移動食有熱液體的產品時必須格外小心。
4.) 如欲先將插頭連接到產品上，然後將插頭插入插上插座。都開連接時，將任何控制轉換為"關閉"，然後從產上的插座上拔出插頭。
5.不將此產品另作他用。
6.注意:帽電風險，只能在可移動的容器中烹調。
37.短電源線說明：
a.) 短電源線是以減少因纏繞或絆倒起長的繩索所引起的風險。
b.) 可使用延長線，並可在使用時使用。
c.) 如果使用延長線：
1.) 延長線的額定電源插座上必須於，或在加熱端中。
2.) 較長的延長線或多插內部，會造成電源插座產品損壞等現象。
3.) 在移動食有熱液體的產品時必須格外小心。
4.) 如欲先將插頭連接到產品上，然後將插頭插入插上插座。都開連接時，將任何控制轉換為"關閉"，然後從產上的插座上拔出插頭。
5.不將此產品另作他用。
6.注意:帽電風險，只能在可移動的容器中烹調。

二. 產品性能特點

1.清潔容易的不銹鋼內鍋。
2.食品級SUS 304不銹鋼內鍋，安全健康。
3.可取鍋內鍋，拆取附蓋，清洗無菌。
4.特設大一鍵完成，新穎新一鍵設定。
5.無須鍋加熱器加熱內鍋，鍋內鍋，實現全方位均鍋環繞加熱
6.上蓋感溫裝置，防溢不糊底。

三. 主要技術參數

名 稱	電飯煲
型 號	FD40CB
電 源	120V~60Hz
額定功率	600W
額定容量	4.0L
外觀尺寸(長×寬×高)	326mm×310mm×280mm

四. 部件名稱介紹

1.主要部件

2.附件

V. Repair and Maintenance

1. Cleaning method
1)Before the product is cleaned, the power cord should be unplugged until it cools down.
2)It is forbidden to soak or rinse the power cord and the whole cooker in water, in case that the water enters into the cooker to cause failure, affecting the safe use.
3)Adopt the kitchen detergent which has no corrosive property as the cleaning agent.
4)Do not use lacquer thinner, gasoline, cleanser, hard brush, stainless steel wire ball, etc. to wipe the cooker or relevant accessories.
5)After each use, please disassemble the steam valve (same as the mounting and dismounting methods of the steam valve) and have it cleaned.
A.Timely clean the cooker after use to prevent that some difficult-to-remove dirt firmly attaches to the surface of the aluminum inner pot.
B.In order to avoid damage to the non-stick effect of the ceramic inner pot, please observe the following rules and use it with care.
C.Do not put spoons, cutleries and other hard things into the cooker, and cannot use it as a washing basin to wash the tableware.
D.Do not use hard brush to clean the ceramic inner pot, do not knock or scrape it, and do not wash rice in it.

2. Trouble Shooting

sn.	Malfunction Phenomenon	Failure Cause	Solution
1	No display on the screen	a.Power outage b.Power cord is not plugged.	a. Is it a power outage? b. Has the power line been plugged into the socket?
2	There is screen displays, but no heating	--	c. Is the power socket turned off? d. Has the power supply been connected into the machine cooker?
3	Screen displays E1 or E3	--	Please send it to the local franchised service branch set up by our company.
4	Screen displays E2 or E4	Cooking without water in the ceramic inner pot	After the ceramic inner pot cools down, add water and food and then stew them.
5	Screen displays E5	--	Please send it to the local franchised service branch set up by our company.
6	The product heats for a long time.	The product heats for a long time.	Add food again, cover the upper lid, and it will enter into the normal phenomenon.
7	Screen displays E6	--	Please send it to the local franchised service branch set up by our company.

五、使用方法

1.用量杯取米
1)使用本電飯煲所附的量杯正確量取米量。

2)請不要使用過度的鍋洗米，以免鍋裏陶瓷內鍋不粘效果。
2.將洗好的米放入陶瓷內鍋，根據米量選擇對應的水位線



3.將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位並左右旋轉幾下，使其與發熱盤緊貼。

4.蒸汽閥元件拆裝方法

5.活動內蓋的拆裝方法



●Cooking Porridge
1.Measure and take proper amount of rice to complete the preparatory work.
2.After connecting to the power supply, press the "Porridge Cooking" key, the porridge cooking indicator will be constantly on after flashing several times, the screen displays the default time of"1:30" (according to your requirement, you can adjust it with the "Hour/Minute" key to set the porridge cooking time on your own), and the product enters into the working state.
3.After the cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm. The porridge cooking indicator is off, the "Keep Warm/Cancel" indicator is on, the screen displays the default Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.
Tips:
1.In order to make the grains plump, savory and creamy, when the rice is well-cooked and turns to Keep Warm, please continue to simmer it for about 15 minutes. Once the lid is opened, please evenly stir it loose, which can make the grains more delicious.
2.There are differences among the rice quality, water amount and rice-washing methods, so in the process of cooking, there may be a small amount of rice juice overflows from the steam port, which is a normal phenomenon.
3.It takes longer time (approximately 3 hours) to cook the grains meal, so please wait patiently.
4.Since the beans in the grains meal have stronger water-absorbing property, it is recommended to match the water level of grains meal scale on the inner pot to ensure the proper ratio between grains and water when adding water into it.

●Cooking Soup
1.Put the food materials required with proper amount of water into the ceramic inner pot to complete the preparatory work.
2.After connecting to the power supply, press the "Soup" key, the soup cooking indicator will be constantly on after flashing several times, the screen displays the default time of"2:00" (according to your requirement, you can adjust it with the "Hour/Minute" key to set the stewing time on your own), and the product enters into the working state.
3.After the soup cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm. The soup cooking indicator is off and the "Keep Warm/Cancel" indicator is on. The screen displays the Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.

B. Please have the dried beans and other auxiliary ingredients soaked in cold water for 4 to 10 hours, then have them mixed evenly and put into the ceramic inner pot with the main ingredient.
2.After connecting to the power supply, press the "Function" key to select the "Grain Cooking", the screen displays "-: -", and the product enters into the working state.
3.After the cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm. The "Keep Warm/Cancel"indicator is on, the screen displays the Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.
Tips:
1.In order to make the grains plump, savory and creamy, when the rice is well-cooked and turns to Keep Warm, please continue to simmer it for about 15 minutes. Once the lid is opened, please evenly stir it loose, which can make the grains more delicious.
2.There are differences among the rice quality, water amount and rice-washing methods, so in the process of cooking, there may be a small amount of rice juice overflows from the steam port, which is a normal phenomenon.
3.It takes longer time (approximately 3 hours) to cook the grains meal, so please wait patiently.
4.Since the beans in the grains meal have stronger water-absorbing property, it is recommended to match the water level of grains meal scale on the inner pot to ensure the proper ratio between grains and water when adding water into it.

●Cooking Flavored Congee
The "Flavored Congee" usually takes millet, sticky rice as its main ingredients, which are cooked with other auxiliary materials, such asmung, soybeans, adzuki beans, lentils, white hyacinth beans, peanuts,

V. How to use
1. Take rice with a measuring cup
1)Use the attached measuring cup of this electric cooker to measure and take the correct amount of rice.

2)Do not use the ceramic inner pot to wash the rice, in order to avoid the damage to the non-stick effect of the ceramic inner pot.
2. Put the washed rice into the ceramic inner pot and select the corresponding water level according to the amount of rice





1)When selecting porridge cooking/Flavored Congee cooking, the water level after adding the rice and water shall not exceed the maximum water line of "porridge" marked on the inside wall of the ceramic inner pot.
2)When selecting soup cooking/Pottage cooking, the water level after adding water shall not exceed the maximum water line of "rice" marked on the inside wall of the ceramic inner pot.
3)Put the outside surface of the ceramic inner pot with a piece of cloth, and put it into the cooker body, and then fasten up the upper lid.
4)It is forbidden to put the ceramic inner pot on other stoves to heat, otherwise, it will crack due to very high temperature; it is not allowed to use other containers instead of the ceramic inner pot in the cooker body.

5.加入水量時請勿超過"鍋"的最高水位刻度線。

●八寶粥
八寶粥一般以小米、糯米為主料，再添加輔料，如綠豆、黃豆、赤豆、扁豆、白蓮花、花生、玉米、薏米等煮成。插配不同，其口感和營養也不同，你可以自由搭配出適合自己口味的粥。
1.服取適量的米和輔料，完成準備工作。
2.連接好電源後，按"功能"鍵選擇"八寶粥"，顯示屏顯示預設時間"1:30"（可根據需要，通過"時/分"按鍵調節，自己設定煮粥時間），產品進入工作狀態。
3.工作完成後，電飯煲發出"嘀嘀嘀"的聲響（3聲），自動進入營養保溫狀態。"保溫/取消"指示燈亮。顯示屏顯示保溫的時間"0：00"，並以分鐘為單位逐步遞增。
4.如果不需要保溫，則按下「保溫/取消」按鍵，「保溫/取消」指示燈滅，產品回到待機狀態。
溫馨提示：
1.為使米粥能熬出香滑，煮熟粥保溫時請繼續燜15分鐘左右，開蓋後請均勻翻粒，可使米粒顯更加可口美味。
2.由於米的品質、水量、洗米方法的不同，煲煮過程中會從蒸汽口流出少量米汁，屬正常現象。
3.請確認煮熟所需時間較長，約3小時左右，請耐心等待。
4.由於請糧粒中豆類吸水性較強，請按內鍋上雜糧線的水位線盛行米水配比。

●雜粥
1.將所需食材加適量水放入陶瓷內鍋，完成準備工作。
2.連接好電源後，按"煲粥"鍵，煲粥指示燈閃爍後又進長亮，顯示屏顯示預設時間"2：00"（可根據需要，通過"時/分"按鍵調節，自己設定煮粥時間），產品進入工作狀態。
3.工作完成後，電飯煲發出"嘀嘀嘀"的聲響（3聲），自動進入營養保溫狀態。"保溫/取消"指示燈亮。顯示屏顯示保溫的時間"0：00"，並以分鐘為單位逐步遞增。
4.如果不需要保溫，則按下「保溫/取消」按鍵，「保溫/取消」指示燈滅，產品回到待機狀態。
溫馨提示：
1.為使米粥能熬出香滑，煮熟粥保溫時請繼續燜15分鐘左右，開蓋後請均勻翻粒，可使米粒顯更加可口美味。
2.由於米的品質、水量、洗米方法的不同，煲煮過程中會從蒸汽口流出少量米汁，屬正常現象。
3.請確認煮熟所需時間較長，約3小時左右，請耐心等待。
4.由於請糧粒中豆類吸水性較強，請按內鍋上雜糧線的水位線盛行米水配比。

3. 煲湯完成後，電飯煲發出"嘀嘀嘀"的聲響（3聲），自動進入營養保溫狀態。"保溫/取消"指示燈亮。顯示屏顯示保溫的時間"0：00"，並以分鐘為單位逐步遞增。
4. 如果不需要保溫，則按下「保溫/取消」按鍵，「保溫/取消」指示燈滅，產品回到待機狀態。
溫馨提示：
1.由於煲湯時會物或水量的不同，在煲湯結束後內蓋上與蒸汽閥上可能會出現潮汗現象，屬正常現象。
2.當選擇煲湯/老火湯時，材料加水後的高度不得超過兩個內鍋壁上"安全"的最高水位線。
3.用布將陶瓷內鍋外表面擦乾，放入鍋體內，並關緊上蓋。
4.內鍋內請勿放置在其它罐子上加熱，否則會因受熱過高而破裂；不允許用其它容器代替陶瓷內鍋放入鍋體內使用。
2.將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位並左右旋轉幾下，使其與發熱盤緊貼。
使其與發熱盤緊貼。
3.使用前請確認蒸汽閥是否安裝到位。
4.接通電源，確認產品進入待機狀態
產品顯示屏顯示"0：00"，功能指示燈全滅，發熱體不發熱的狀態下屬于待機狀態。

五、使用方法
1.用量杯取米
1)使用本電飯煲所附的量杯正確量取米量。

2)請不要使用過度的鍋洗米，以免鍋裏陶瓷內鍋不粘效果。
2.將洗好的米放入陶瓷內鍋，根據米量選擇對應的水位線

3.將陶瓷內鍋放入鍋體中，輕壓陶瓷內鍋到位並左右旋轉幾下，使其與發熱盤緊貼。



4.蒸汽閥元件拆裝方法

5.活動內蓋的拆裝方法

Tips:
1.In order to make the grains plump, savory and creamy, when the rice is well-cooked and turns to Keep Warm, please continue to simmer it for about 15 minutes. Once the lid is opened, please evenly stir it loose, which can make the grains more delicious.
2.There are differences among the rice quality, water amount and rice-washing methods, so in the process of cooking, there may be a small amount of rice juice overflows from the steam port, which is a normal phenomenon.
3.It takes longer time (approximately 3 hours) to cook the grains meal, so please wait patiently.
4.Since the beans in the grains meal have stronger water-absorbing property, it is recommended to match the water level of grains meal scale on the inner pot to ensure the proper ratio between grains and water when adding water into it.

●Cooking Pottage
1.Put the food materials required with proper amount of water into the ceramic inner pot to complete the preparatory work.
2.After connecting to the power supply, press the "Function" key to select the "Pottage", the screen displays the default time of"3:00" (according to your requirement, you can adjust it with the "Hour/Minute" key to set the stewing time on your own), and the product enters into the working state.
3.After the Pottage cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm. The "Keep Warm/Cancel" indicator is on, the screen displays the Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.
Tips:
1.Due to differences of food or water amount in cooking the soup, there may be some juice residue on the inner cap and the steam valve after the soup cooking is completed; which is a normal phenomenon.
2. When the food is boiling in the pot, do not immediately add cold water into it, in case that the ceramic inner pot is broken.The total amount of food and water shall not exceed the maximum water level on the inner wall of the ceramic inner pot in order to avoid the overflowing phenomenon.

2)Put the ceramic inner pot into the cooker body, gently press the ceramic inner pot in place and rotate it leftwards and rightwards a few times to make it closely cling to the heating unit.
3)Before operation, please make sure that the steam valve is assembled in place.
4. Switch on the power, and make sure that the product enters into the standby state.The screen of the product displays "0:00" and the function indicators are all off. When the heating unit does not emit heat, it is in the standby state.

●Cooking Rice
1. Measure and take proper amount of rice to complete the preparatory work.
2.After connecting to the power supply, press the "Rice Cooking"key, the rice cooking indicatorwill be constantly on after flashing several times, the screen displays "-: -", and the product enters into the working state.
3.After the cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm.The rice cooking indicator is off, and the "Keep Warm/Cancel" indicator is on. The screen displays the Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.
Tips:
1.In order to make the rice plump, savory and creamy, when the rice is well-cooked and turns to Keep Warm, please continue to simmer it for about 15 minutes. Once the lid is opened, please evenly stir it loose, which can make the rice more delicious.
2.There are differences among the rice quality, water amount and rice-washing methods, so in the process of cooking, there may be a small amount of rice juice overflows from the steam port, which is a normal phenomenon.
3.It takes longer time (approximately 3 hours) to cook the grains meal, so please wait patiently.
4.Since the beans in the grains meal have stronger water-absorbing property, it is recommended to match the water level of grains meal scale on the inner pot to ensure the proper ratio between grains and water when adding water into it.

●Cooking Pottage
1.Put the food materials required with proper amount of water into the ceramic inner pot to complete the preparatory work.
2.After connecting to the power supply, press the "Function" key to select the "Pottage", the screen displays the default time of"3:00" (according to your requirement, you can adjust it with the "Hour/Minute" key to set the stewing time on your own), and the product enters into the working state.
3.After the Pottage cooking is completed, the rice cooker will give out the "beeping" noise (3 times) and automatically enters into the state of nutrition Keep Warm. The "Keep Warm/Cancel" indicator is on, the screen displays the Keep Warm time of"0:00" and progressively increases by the unit of 1minute.
4.If the Keep Warm is not required, press the "Keep Warm/Cancel" key, the "Keep Warm/Cancel" indicator is off and the product returns to the standby state.
Tips:
1.Due to differences of food or water amount in cooking the soup, there may be some juice residue on the inner cap and the steam valve after the soup cooking is completed; which is a normal phenomenon.
2. When the food is boiling in the pot, do not immediately add cold water into it, in case that the ceramic inner pot is broken.The total amount of food and water shall not exceed the maximum water level on the inner wall of the ceramic inner pot in order to avoid the overflowing phenomenon.

●Cooking Grain Rice
The grains meal usually takes millet, sticky rice as its main ingredients, which are cooked with other auxiliary materials, such as mung, soybeans, adzuki beans, lentils, white hyacinth beans, peanuts, corn, wheat and myotonin, etc. With different collocations, the flavor and nutrition are different, so you can mix different food materials according to your own preference.
1.Measure and take proper amount of grains and auxiliary ingredients to complete the preparatory work.
A. The major ingredient can be one or more sorts. When the major ingredient is a single kind, the ingredient added should not exceed one-third of the total amount.

IV. Parts
1. Introduction of parts

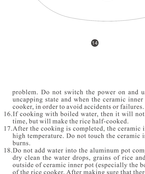

2. Accessories



3. Operation panel



Return product to the nearest authorized service facility for examination, repair, or adjustment.
29.The use of accessory attachments not recommended by the product manufacturer may cause injuries.
30.Do not use outdoors.
31.Do not let cord hang over edge of table or counter, or touch hot surfaces.
32.Do not place on or near a hot gas or electric burner, or in a heated oven.
33.Extreme caution must be used when moving this product containing hot liquids.
34.Always attach plug to product first, then plug cord into the wall outlet. To disconnect, turn any control to"off", then remove plug from wall outlet.
35.Do not use product for other than intended use.
36.CAUTION--Risk of Electric Shock. Cook only in removable container.
37.Short power-supply cord instruction:
a).A short power-supply cord is provided to reduce the riskresulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If extension cord is used:
1) The marked electrical rating of the extension cord should be at least asgreat as the electrical rating of the appliance.
2) The cord should be arranged so that it will not drape over the counterto or thetemperature it can be pulled on by children or tripped over unintentionally; and
3) Extension cord should be agrounding-type 3-wire cord.

Save these instructions

II. Product Features
1.High quality of ceramic pot, bubbling and boiling by Arc Chamfer to make rice tasty.
2.1 Touch with 3 main functions of Rice,Porridge and Soup.
3.Removable inner lid, easy for cleaning.
4.Food-grade of SUS 304 Stainless Steel inner cover.
5.Top lid with thermal detector, anti-overflow and non-stick.
6.Unique new bowl-shaped heating system,heat and cooking rice with full range surround pot.

III. Technical specifications

Product Name	Microcomputer Electric Rice Cooker
Model	FD40CB
Power	120V~60Hz
Rated power	600W
Rated capacity	4.0L
Dimensions（LxWxH）	326mm×310mm×280mm

2.故障及排除

序號	故障現象	故障原因	排除方法
1	顯示屏無顯示	a.停電 b.電源線未插	a.是否停電？ b.電源線是否插入插座中？
2	顯示屏有顯示，但無加熱	--	c.電源插座是否處於關閉狀態？ d.電源是否插入整機機器內部中？
3	顯示屏顯示E1或E3	--	請送到我司設立在當地的特約維修網點維修。
4	顯示屏顯示E2或E4	陶瓷內鍋內無水鍋煮	等陶瓷內鍋冷卻後，加入水和食物後再進行烹煮。
5	顯示屏顯示E5	--	請送到我司設立在當地的特約維修網點維修。
6	顯示屏顯示E5	產品長時間加熱	重新加入食物，蓋好上蓋，按所需功能進入正常工作。
7	顯示屏顯示E6	--	請送到我司設立在當地的特約維修網點維修。

3.非專業人員切勿拆卸、修理本產品。
4.如電源軟線損壞，必須用專用軟線或從我司供銷商或維修部買到的專用元件來更換。
5.當產品出現故障且無法排除時，切勿自行維修，請與我司設立在當地的特約維修網點或本公司客戶服務部聯繫試機。
6.本產品中的陶瓷件為脆弱品，不在保修範圍，請小心使用。
7.其他維修服務請依照報告。
8.本產品屬供家庭使用。

目 錄

一. 注意事項----------1
二. 產品性能特點----------1
三. 主要技術參數----------2
四. 部件名稱介紹----------2
五. 使用方法----------5
六. 保養及維護----------7

一. 注意事項

1.請閱讀所有的使用說明。
2.請使用預防漏電保護的電源插座。
3.請使用有合規接地保護的電源，以確保人身安全。
4.不要放置在熱源部的物品如:燃氣灶或電磁爐；不要放在潮濕或靠近其它熱源的地方使用，以免發生故障和危險。
5.使用本產品時應注意在兒童接觸不到的環境平擺上。
6.產品工作時會發出蒸汽，切勿將插座手蓋設高於1.5公尺。以免燙傷；也請不要將手或臉直接放在蒸汽口上，以避免引發意外或導致產品故障。
7.產品工作時，外殼溫度較高，請勿觸摸，以免燙傷。
8.不要將陶瓷內鍋直接放在明火上加熱，且避免陶瓷內鍋在乾熱時接觸冷水，以免發生意外。
9.插入電源線時，必須插到底，以確保接觸良好。
10.清潔本機外殼時，請先拔掉電源插頭，用濕布擦拭，請勿用手插拔電源插頭，以防止觸電。
11.產品在通電工作時，請勿移動。
12.產品在通電工作時，內部可能會發出輕微的"嗡、嗡"聲響，這是器具調整大力的聲音，不影響正常工作。
13.切次使用時，產品可能會發出一股輕微的氣味，屬正常現象，隨著使用次數的增加會逐步消失。
14.陶瓷內鍋中未盛食物或不放陶瓷內鍋時，切勿通電時間，長時間不使用時請拔下電源插頭。
15.使用時請確認上蓋已經扣緊，以免蒸氣從密封不良而影響飲食及容器加熱，不可在開蓋狀態扣緊內鍋內的鍋內蒸下通電使用，以免引發鍋外或導致產品故障。
16.如果用完水煮蛋，不僅不會縮短